

Bugera

THE SOUL OF VALVES

1960 User Manual



en

Important safety instructions



CAUTION: High voltage! Risk of death! High voltages of up to 500 V DC may be present inside the casing for long periods after being disconnected from the mains. To avoid lethal electric shock, do not open the casing. There are no user-serviceable components inside. Refer all maintenance to qualified service personnel. Remove the mains cable when the unit is not in use.

WARNING: To eliminate the risk of fire and electric shock, do not expose this unit to rain or moisture and splashing or dripping liquid, which might enter the device. Do not place any objects filled with liquid, such as vases, on the unit.



This symbol, wherever it appears, alerts you to the presence of uninsulated dangerous voltage inside the enclosure—voltage that may be sufficient to constitute a risk of shock.



This symbol, wherever it appears, alerts you to important operating and maintenance instructions in the accompanying literature. Please read the manual.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) The apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.
- 16) Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- 17) **CAUTION** - These service instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operation instructions unless you are qualified to do so.
- 18) **CAUTION!** During use, the valves get very hot and high surface temperatures may be reached at the rear of this unit. To avoid burning yourself, make all connections while the unit is still cold.

Table of contents

IMPORTANT NOTICE!	4
Introduction	4
Before you get started	4
Online registration	4
Control elements	5
Front panel	5
Bridging the input channels	5
Rear panel	6
Inside the BUGERA	7
INSTRUCTIONS FOR QUALIFIED SERVICE PERSONNEL ONLY	7
Wiring the BUGERA	7
Audio connections	8
Specifications	9
Limited warranty	10

IMPORTANT NOTICE!

FAILURE TO OBSERVE THE FOLLOWING POINTS MAY RESULT IN DAMAGE TO THE AMPLIFIER OR LOUDSPEAKERS. DAMAGES CAUSED IN SUCH A WAY ARE NOT COVERED BY WARRANTY.

- **Before you start, always make sure that your Bugera Valve Amplifier is connected to a suitable loudspeaker. Observe the correct impedance for your loudspeaker and use the appropriate output socket.**
- **Always use loudspeaker cables for connection between the amplifier and the loudspeaker. Never use other types of cable, like instrument cable or microphone cable.**

Switching the amplifier on and off:

- **Before connecting the amplifier to a power outlet, make sure that both POWER and STANDBY switches are set to the OFF position.**

Power on (mandatory):

- **Switch the POWER switch on—wait for 60 seconds—then switch the STANDBY switch on.**

Power off (recommended):

- **Switch the STANDBY switch off—wait for 30 seconds—then switch the POWER switch off.**

Note—after powering off we recommend that the amplifier is allowed to cool down for ten minutes before any attempt is made to move the amplifier. This reduces the risk of mechanical damage to the sensitive valve elements.



ATTENTION! TO AVOID DAMAGE TO YOUR AMP, NEVER USE THE BUGERA VALVE AMPLIFIER WITHOUT A LOUDSPEAKER CONNECTED!

Introduction

Congratulations! In purchasing the BUGERA 1960 you have chosen a classic 150-watt valve amplifier that features raw power, high reliability and an incredible "soul tone". The preamp design from the 60s has two BUGERA ECC83 preamp valves, as well as two separately controllable gain stages with passive tone control plus four input connectors for maximum sound variety. The first-class BUGERA EL34 power amp valves and an additional true-bypass effects loop put the finishing touch to the BUGERA 1960.

BUGERA instrument amplifiers are hand-made in compliance with the strictest manufacturing standards, ensuring durability and reliability. They feature our classic valve electronics, robust switches and potentiometers, high-grade transformers and, of course, our hand-picked and precisely matched BUGERA valves. The care taken in construction and component arrangement ensures that they can withstand even the roughest handling on the road.

Before you get started

Your product was carefully packed at the factory to ensure safe transport. Nevertheless, if the box is damaged inspect the unit immediately for signs of damage.

- **If the unit is damaged please do NOT return it to us, but notify your dealer and the shipping company immediately; otherwise, claims for damage or replacement may not be granted.**
- **Always use the original box to prevent damage during storage or transport.**
- **Make sure that children cannot play unsupervised with the unit or its packaging.**
- **Please ensure proper disposal of all packing materials.**

Ensure adequate air supply and to avoid overheating do not place the unit near radiators etc.

- **Please make sure that all devices are properly grounded. For your own safety, never remove or disable the ground conductors from the devices or on the power cords. The unit must always be connected to the mains outlet with a protective grounding connection.**
- **The tone quality may diminish within the range of powerful radio broadcasting stations and high-frequency sources. Increase the distance between the transmitter and the unit, and use shielded cables for all connections.**

Online registration

Please do remember to register your new BUGERA equipment right after your purchase by visiting www.bugera-amps.com and kindly read the terms and conditions of our warranty carefully.

Should your BUGERA product malfunction, our goal is to have it repaired as quickly as possible. To arrange for warranty service, please contact the retailer from whom the equipment was purchased. Should your BUGERA dealer not be located in your vicinity, you may directly contact the BEHRINGER company nearest to you. This contact information is included in the original equipment packaging (Global Contact Information/European Contact Information).

 
Registering your purchase and equipment with us helps us process your repair claims quicker and more efficiently.

Thank you for your cooperation!

ATTENTION!

- **We would like to draw your attention to the fact that extremely loud sound levels may damage your hearing as well as your loudspeakers. Turn all VOLUME controls fully to the left before you switch on the unit. Make sure you select a suitable volume at all times.**

Control elements

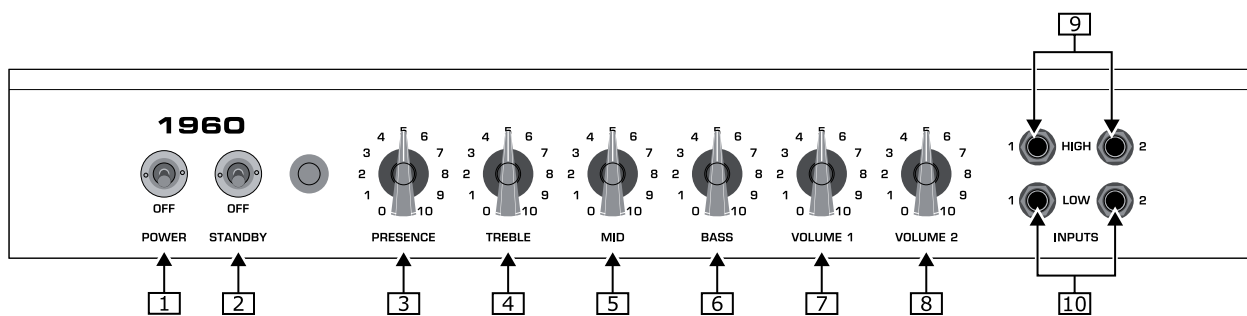

Front panel of the BUGERA 1960

Front panel

- 1 The **POWER** switch is used to turn the power of the BUGERA amplifier on and off.
- 2 The **STANDBY** switch allows you to place the amp in **STANDBY** mode (OFF position). This way the amp is idle, but the operational temperature of the valves is maintained (POWER switch turned on). When the switch is set to its ON position the amplifier is activated.



ATTENTION! TO AVOID DAMAGE TO YOUR AMP, NEVER USE THE BUGERA VALVE AMPLIFIER WITHOUT A LOUDSPEAKER CONNECTED!

 
- 3 The **PRESENCE** control modifies the amp's damping factor at high frequencies. This allows you to boost the presence range, thus giving the sound more "edge".
- 4 The passive **TREBLE** control adjusts the upper frequency range.
- 5 The passive **MID** control adjusts the middle frequency range.
- 6 The passive **BASS** control adjusts the lower frequency range.
- The four tone controls **PRESENCE**, **TREBLE**, **MID** and **BASS** are effective on both channel 1 and 2.
- 7 The **VOLUME 1** control determines the volume of the instrument connected to the HIGH 1 or LOW 1 instrument input (channel 1). This channel sounds brighter than channel 2 and is usually the main channel.
- 8 The **VOLUME 2** control controls the volume of the instrument connected to the HIGH 2 or LOW 2 instrument input (channel 2). This channel produces a linear sound with a less pronounced treble range than channel 1.
- 9 The instrument inputs **HIGH 1** and **HIGH 2** have approximately 6 dB more gain than the LOW inputs and can be used for most electric guitars. Use the VOLUME 1 and VOLUME 2 controls to set the volume levels separately.
- 10 The instrument inputs **LOW 1** and **LOW 2** have approximately 6 dB less gain than the HIGH inputs and can be used for instruments with a high output level. Since their input impedance is considerably lower, the sound is somewhat darker. Use the VOLUME 1 and VOLUME 2 controls to set the volume levels separately.

- When the **HIGH 1** and **LOW 1** (or **HIGH 2** and **LOW 2**) connectors are used simultaneously, their sensitivity is the same (both LOW).

Bridging the input channels

Your BUGERA 1960 has two gain stages (controllable using the VOLUME 1 and VOLUME 2 controls) which have different sound characteristics. With a patch cord you can also operate the amplifier inputs in bridge mode, so that both channels can be used for one instrument at the same time. In this way, it is possible to mix the brighter sound of channel 1 with the darker timbre of channel 2 and thus benefit from the entire range of sounds that your amplifier can produce. Simply connect your instrument to one of the high-sensitivity inputs (for technical reasons it is not possible to bridge the low-sensitivity inputs). Then proceed as follows:

- ▲ Connect your instrument to the **HIGH 1** input.
 - ▲ Connect the **LOW 1** input to the **HIGH 2** input.
- Or:
- ▲ Connect your instrument to the **HIGH 2** input.
 - ▲ Connect the **LOW 2** input to the **HIGH 1** input.

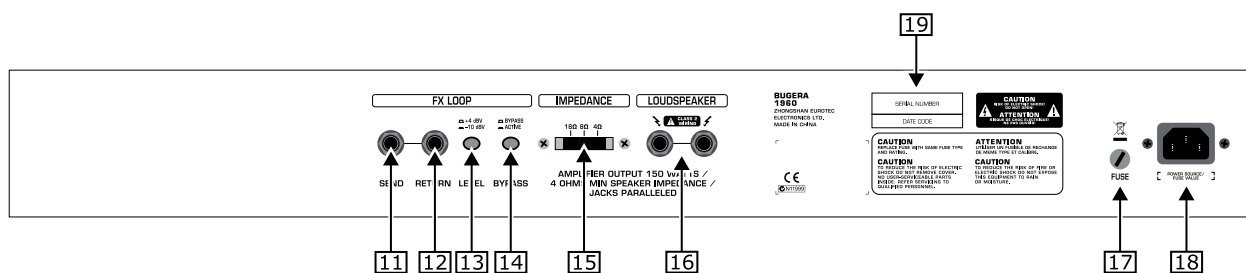

Rear panel of the BUGERA 1960

Rear panel



CAUTION!

Hot! Risk of injury! During use, the valves get very hot and high surface temperatures may be reached at the rear of this unit. Avoid touching the controls and connectors on the rear panel during use. To avoid accidental contact with hot surfaces, place the rear panel so that it faces a wall.

- 11 The **SEND** output is used to connect a shielded ¼" mono jack cable to the input of an external effects unit.
- 12 The **RETURN** input is used to connect a shielded ¼" mono jack cable to the output of an external effects unit.
- 13 The **LEVEL** switch optimally adapts the FX LOOP to the operating level of the external effects device connected (+4 dBV or -10 dBV). The higher level is for studio effects devices, the lower level for floor pedals.
- 14 The **BYPASS** switch removes the FX LOOP from the signal path completely.
- 15 The **IMPEDANCE** switch lets you specify the loudspeaker impedance. Always apply the value that is identical to the impedance of the used speaker cabinet. Please also read „Wiring the BUGERA“.



- 16 Both the paralleled **LOUDSPEAKER** outputs (¼" mono jacks) are used to connect the speaker cabinet(s). The minimum impedance is 4 Ohms. The IMPEDANCE switch should always be set to match the impedance of the used speaker cabinet.



ATTENTION! TO AVOID DAMAGE TO YOUR AMP, NEVER USE THE BUGERA VALVE AMPLIFIER WITHOUT A LOUDSPEAKER CONNECTED!

 


- 17 WARNING: ONLY REPLACE THE FUSE WHEN THE MAINS CABLE HAS BEEN DISCONNECTED! The **FUSE** is found in the fuse holder. If the fuse is blown, it needs to be replaced with a fuse of the same kind by all means. Otherwise, the unit could seriously be damaged, in which case the warranty is void. If the fuse is blown repeatedly, you should take the unit to a qualified service technician.



- 18 The **IEC MAINS** connector is used to connect the mains cable that has the appropriate voltage ratings for your country (included). At all times, make the connections to the amplifier before plugging the cable into a power outlet.

- 19 This is the **SERIAL NUMBER** of the amplifier.

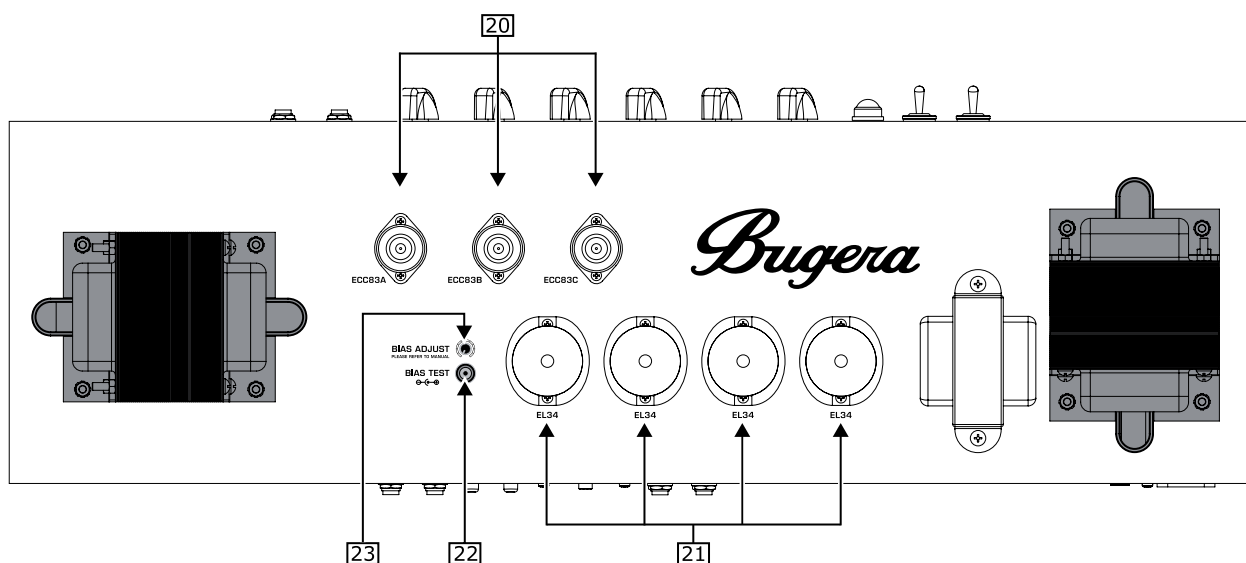

Inside the BUGERA 1960

Inside the BUGERA



DANGER!

High voltage! Risk of death!

High voltages of up to 500 V DC may be present inside the casing for long periods after being disconnected from the mains. To avoid lethal electric shock, do not open the casing. There are no user-serviceable components inside. Refer all maintenance to qualified service personnel. Remove the mains cable when the unit is not in use.



The parts inside the amplifier operate at high voltages and high temperatures. To avoid damage and injury that results from fire or electric shock, do not drop or spill anything into the unit's casing.

INSTRUCTIONS FOR QUALIFIED SERVICE PERSONNEL ONLY

Remove the backside of the amplifier's casing to get to the valves and the control elements.

20 These are the sockets for the **ECC83A/ECC83B/ECC83C** preamp valves.

21 These are the sockets for the **EL34** power amp valves.



22 The **BIAS TEST** connector lets you connect a voltmeter in order to measure the power amp valves (bias adjustment). Make sure that the voltmeter is set to direct current (DC).

23 The **BIAS ADJUST** control is used to make the bias-adjustment.

➤ **Replacing the power amp valves also requires bias adjustment. You should always use sets of four matched valves. The valves of the BUGERA Series are ideal for this purpose.**



CAUTION: WE HIGHLY RECOMMEND THAT BIAS ADJUSTMENTS BE CARRIED OUT BY QUALIFIED PERSONNEL!

Wiring the BUGERA



CAUTION!

Hot! Risk of injury! During use, the valves will get very hot and high surface temperatures may be reached at the rear of this unit. To avoid burning yourself, make all connections while the unit is still cold.



ATTENTION! TO AVOID DAMAGE TO YOUR AMP, NEVER USE THE BUGERA VALVE AMPLIFIER WITHOUT A LOUDSPEAKER CONNECTED!

The BUGERA amplifier has two paralleled LOUDSPEAKER outputs which are used to connect one or two speaker cabinets.


If you only connect one speaker cabinet, be sure that the IMPEDANCE switch is set to match the impedance of the connected cabinet.

If you want to connect two speaker cabinets, both cabinets should have to the same impedance. Be sure to have set the IMPEDANCE switch correctly. In this case, set it to half the value of one of the cabinets. When using two 16-Ohm cabinets, the switch therefore needs to be set to 8 Ohms; and with two 8-Ohm cabinets, set it to the minimum impedance of 4 Ohms.

When you use two speaker boxes with differing impedance values, the speaker with the lower impedance will provide the highest output power. In this case the IMPEDANCE switch must be set to half the value of the speaker with the lower impedance value. Example: 16 ohms + 8 ohms -> 4 ohms.


Speaker cabinets	IMPEDANCE switch		
	16 Ω	8 Ω	4 Ω
1 x 16 Ω	✓		
1 x 8 Ω		✓	
1 x 4 Ω			✓
2 x 16 Ω		✓	
2 x 8 Ω			✓

 Impedances

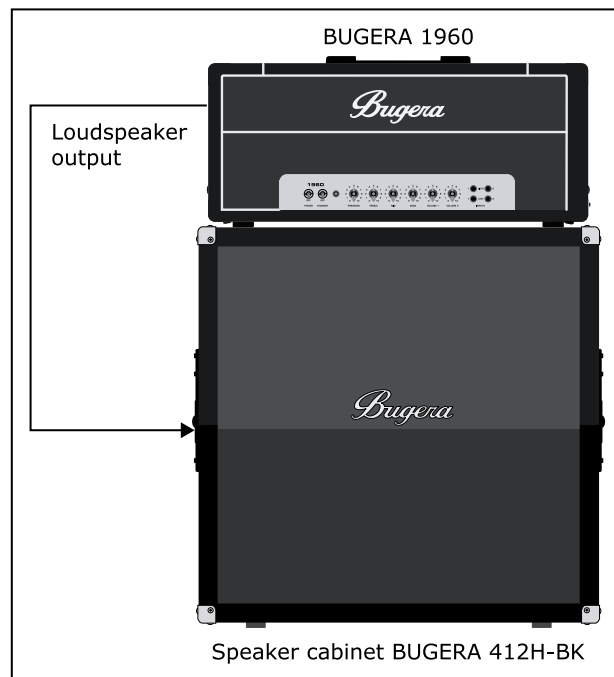

Connecting a speaker


The illustration below shows a set-up that includes an external effects device connected to the FX LOOP. Additionally, the speaker signal of the connected box is picked up with a microphone and routed to a microphone input on a mixing console. This set-up allows you to play back the signal using a P.A. system and/or send it to recording equipment.

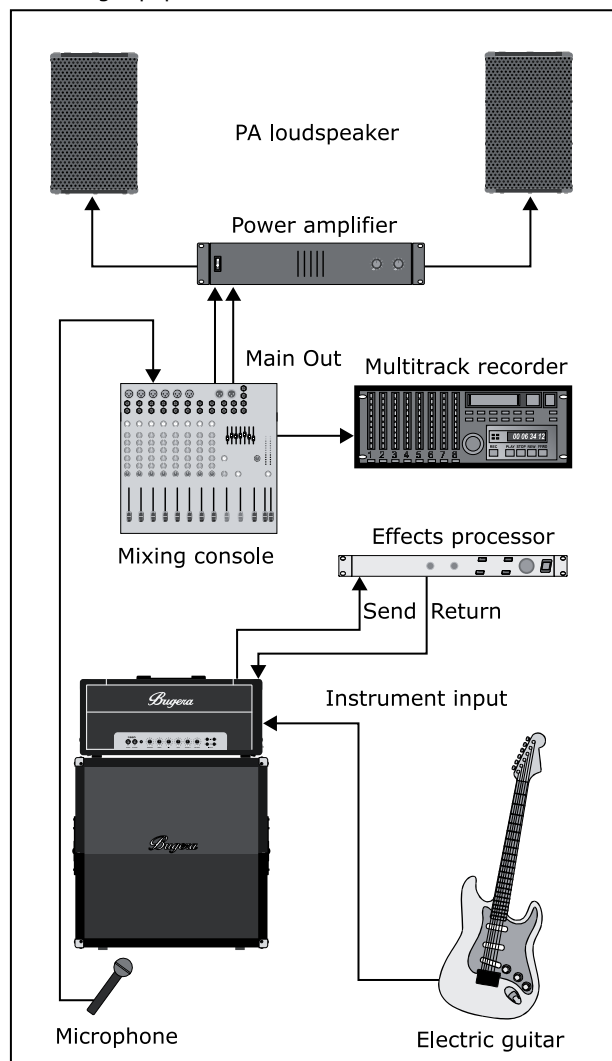 

Set-up for live playing

Audio connections

 The inputs and outputs of the BUGERA amplifier use mono jack connectors.

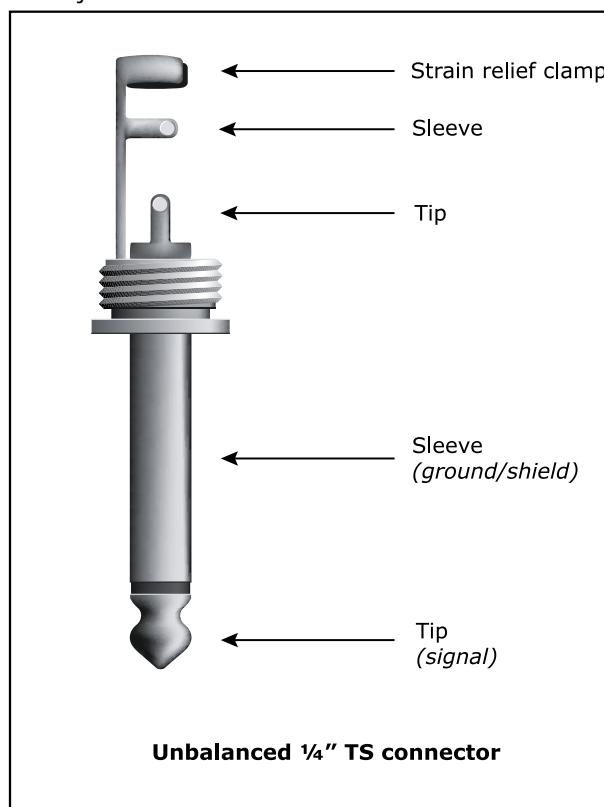

Unbalanced 1/4" TS connector

1/4" mono jack connector

Specifications

PREAMP SECTION

Valves

Type	1 x ECC83A 1 x ECC83B 1 x ECC83C
------	--

Preamp High 1/2 input

Impedance	1 M Ω
-----------	--------------

Preamp Low 1/2 input

Impedance	130 k Ω
-----------	----------------

All levels reduced by	6 dB
-----------------------	------

Channel

Nominal input level	-10 dBV
---------------------	---------

Min. input level	-50 dBV
------------------	---------

Max. input level	0 dBV
------------------	-------

Effects Send

Impedance	1 k Ω
-----------	--------------

Nominal output level	Switchable: -10 / +4 dBV
----------------------	--------------------------

Effects Return

Impedance	68 k Ω
-----------	---------------

Nominal input level	Switchable: -10 / +4 dBV
---------------------	--------------------------

POWER AMPLIFIER SECTION

Valves

Type	4 x EL34
------	----------

Output Power

Peak power	150 W / 16, 8, 4 Ω
------------	---------------------------

Loudspeaker Connectors

Type	1/4" TS jack, unbalanced
------	--------------------------

Load impedance	4 Ω / 8 Ω / 16 Ω switchable
----------------	--

POWER SUPPLY

Power consumption	350 W max.
-------------------	------------

Mains voltage / Fuse

100 – 120 V~, 50/60 Hz	T 4 A H 250 V
------------------------	---------------

220 – 230 V~, 50/60 Hz	T 2 A H 250 V
------------------------	---------------

Mains connection	Standard IEC receptacle
------------------	-------------------------

DIMENSIONS/WEIGHT

Dimensions (H x W x D)	12.2 in / 310 mm x 27.2 in / 690 mm x 9.6 in / 245 mm
------------------------	---

Weight	48.5 lb / 22.0 kg
--------	-------------------

We are constantly striving to maintain the highest professional standards. As a result of these efforts, modifications may be made from time to time to existing products without prior notice. Specifications and appearance may differ from those listed or illustrated.

Limited warranty

SPECIAL NOTE: NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

§ 1 Other warranty rights and national law

1. This limited warranty does not exclude or limit the buyer's statutory rights provided by national law, in particular, any such rights against the seller that arise from a legally effective purchase contract.
2. The limited warranty regulations mentioned herein are applicable unless they constitute an infringement of national warranty law.

§ 2 Online registration

Please do remember to register your new BUGERA equipment right after your purchase by visiting <http://www.bugera-amps.com> and kindly read the terms and conditions of our limited warranty carefully. Registering your purchase and equipment with us helps us process your repair claims quicker and more efficiently. Thank you for your cooperation!

§ 3 Limited Warranty

1. BEHRINGER warrants the mechanical and electronic components of this product to be free of defects in material and workmanship if used under normal operating conditions for a period of one (1) year** from the original date of purchase.
2. BEHRINGER warrants valves (tubes) and meters contained in the product to be free of defects in material and workmanship if used under normal operating conditions for a period of 90 days from the original date of purchase.
3. This limited warranty is subject to the conditions, exclusions and limitations hereinafter set forth.
4. If the product shows any defects within the specified warranty period that are not excluded from this warranty as described under § 5, BEHRINGER will, at its discretion, either replace the product by providing a new or reconditioned product or repair the product using suitable new or reconditioned parts. In the case that other parts are used which constitute an improvement, BEHRINGER may, at its discretion, charge the customer for the additional cost of these parts. In case BEHRINGER decides to replace the entire product, this warranty shall apply to the replacement product for the remaining initial warranty period, i.e., one year** from the date of purchase of the initial product.
5. If the warranty claim proves to be justified, the product will be returned to the user freight prepaid.
6. Warranty claims other than those indicated above are expressly excluded.

PLEASE RETAIN YOUR SALES RECEIPT, AS IT IS YOUR PROOF OF PURCHASE COVERING YOUR LIMITED WARRANTY. THIS LIMITED WARRANTY IS VOID WITHOUT SUCH PROOF OF PURCHASE.

§ 4 Return authorization number

1. To obtain warranty service, the buyer (or his authorized dealer) must call BEHRINGER as exclusive distributor of BUGERA products (see enclosed list) during normal business hours BEFORE returning the product. All inquiries must be accompanied by a description of the problem. The buyer or his authorized dealer will receive a return authorization number.
2. Subsequently, the product must be returned in its original shipping carton, together with the return authorization number. The return shipment address will be indicated by BEHRINGER.
3. Shipments without freight prepaid will not be accepted.

§ 5 Warranty regulations

1. Warranty services will be furnished only if the product is accompanied by a copy of the original retail dealer's invoice.
2. If the product needs to be modified or adapted in order to comply with applicable technical or safety standards on a national or local level, in any country which is not the country for which the product was originally developed and manufactured, this modification/adaptation shall not be considered a defect in materials or workmanship. This limited warranty does not cover any such modification/adaptation, irrespective of whether it was carried out properly or not. Under the terms of this limited warranty, BEHRINGER shall not be held responsible for any cost resulting from such a modification/adaptation.
3. Free inspections and maintenance/repair work are expressly excluded from this limited warranty, in particular, if caused by improper handling of the product by the user. This also applies to defects caused by normal wear and tear, in particular, of faders, crossfaders, potentiometers, keys/buttons, tubes, guitar strings, illuminants and similar parts.
4. Damage/defects caused by the following conditions are not covered by this limited warranty:
 - ▶ improper handling, neglect or failure to operate the unit in compliance with the instructions given in BEHRINGER user or service manuals
 - ▶ connection or operation of the unit in any way that does not comply with the technical or safety regulations applicable in the country where the product is used.
 - ▶ damage/defects caused by force majeure or any other condition that is beyond the control of BEHRINGER.
5. Any repair or service performed by any person or entity other than a BEHRINGER authorized service center is not covered by this limited warranty.
6. Any repair or opening of the unit carried out by unauthorized personnel (user included) will void this limited warranty.
7. Any exchange of the tubes/valves and associated biasing by any person or entity other than a BEHRINGER authorized service centre will void this limited warranty.
8. If an inspection of the product by BEHRINGER shows that the defect in question is not covered by this limited warranty, the inspection costs are payable by the customer.
9. Products which do not meet the terms of this limited warranty will be repaired exclusively at the buyer's expense. BEHRINGER will inform the buyer of any such circumstance. If the buyer fails to submit a written repair order within 6 weeks after notification, BEHRINGER will return the unit. Costs for freight and packing will be invoiced separately C.O.D. When the buyer has sent in a written repair order, such costs will also be invoiced separately.

§ 6 Warranty transferability

This limited warranty is extended exclusively to the original buyer (customer of retail dealer) and is not transferable to anyone who may subsequently purchase this product.

§ 7 Claim for damages

Failure of BEHRINGER to provide proper warranty service shall not entitle the buyer to claim (consequential) damages. In no event shall the liability of BEHRINGER exceed the invoiced value of the product.

§ 8 U.S. Customers only

THE FOREGOING CONSTITUTES THE ONLY WARRANTY MADE BY BEHRINGER WITH RESPECT TO THE PRODUCT AND IS MADE EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED. Any implied warranties, including without limitation, any implied warranties of merchantability or fitness for any particular purpose, imposed under state law are limited to the duration of this limited warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not be applicable to you.

BEHRINGER ASSUMES NO LIABILITY FOR PROPERTY DAMAGE RESULTING FROM FAILURE OF THIS PRODUCT NOR ANY LOSS OF INCOME, SATISFACTION OR DAMAGES ARISING FROM THE LOSS OF USE OF SAME DUE TO DEFECTS OR AVAILABILITY OF SAME DURING SERVICE.

**Customers in the European Union please contact BEHRINGER Germany Support for further details.

Technical specifications and appearance are subject to change without notice. The information contained herein is correct at the time of printing. RED CHIP COMPANY LTD accepts no liability for any loss which may be suffered by any person who relies either wholly or in part upon any description, photograph or statement contained herein. Colors and specifications may vary slightly from product. Our Products are sold through authorized dealers only. This manual is copyrighted. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording of any kind, for any purpose, without the express written permission of RED CHIP COMPANY LTD. BUGERA-products are distributed exclusively by the BEHRINGER Group of companies globally, and specifically by BEHRINGER Luxembourg Sàrl in the European Union. ALL RIGHTS RESERVED. © 2009 RED CHIP COMPANY LTD. Trident Chambers, Wickhams Cay, P.O. Box 146, Road Town, Tortola, British Virgin Islands.