

BOSS
BR-532
Wave Converter



for Windows
Owner's Manual

Copyright (c) 2001 BOSS CORPORATION
All rights reserved. This document may not be modified, duplicated,
distributed, or transmitted without the permission of BOSS
CORPORATION.

Contents

Important Notes

1. System requirements
2. Preparing the SmartMedia reader / writer and memory cards
3. Installing/uninstalling the software
4. Operation
 - a. Starting the application
 - b. Exiting the application
 - c. Selecting a memory card
 - d. Selecting a song
 - e. Converting BR-532 track data into WAV file
 - f. Converting WAV files into BR-532 data
 - g. Checking the software version
 - h. Error messages

IMPORTANT NOTES

- Unfortunately, it may be impossible to restore the contents of data that was stored on the memory card once it has been lost. BOSS Corporation assumes no liability concerning such loss of data.
- Do not use this software for purposes that could infringe on a copyright held by a third party. BOSS Corporation assumes no responsibility whatsoever with regard to any infringements of third-party copyrights arising through your use of this software.
- Unauthorized recording, distribution, sale, lending, public performance, broadcasting, or the like, in whole or in part, of a work (musical composition, video, broadcast, public performance, or the like) whose copyright is held by a third party is prohibited by law.
- * Microsoft, Windows, and Windows NT are registered trademarks of Microsoft Corporation.
- * Windows® 95 is known officially as: "Microsoft® Windows® 95 operating system."
- * Windows® 98 is known officially as: "Microsoft® Windows® 98 operating system."
- * Windows NT® is known officially as: "Microsoft® Windows NT® operating system."
- * Windows® 2000 is known officially as: "Microsoft® Windows® 2000 operating system."
- * Screen shots reprinted with permission from Microsoft Corporation.
- * Pentium is a registered trademark of Intel Corporation.
- * All product names mentioned in this document are trademarks or registered trademarks of their respective owners.

Before you begin

Only audio data is converted --- mixer and effect parameters are not converted.
We recommend that you make a backup as a precaution against unexpected destruction of files by the system or driver.

1. System requirements

SmartMedia reader / writer

CPU Pentium or better (Celeron or Pentium III recommended)

Microsoft Windows 95/98/ME

* Microsoft Windows NT / Windows2000 are not supported.

2. Preparing the SmartMedia reader / writer and memory cards

Before using this software, set up your computer so that use of the SmartMedia reader/writer is enabled.

* For details on connecting your SmartMedia reader / writer and computer, refer to the manual for your SmartMedia reader / writer or to the manual for your computer.

Only memory cards (SmartMedia) formatted on the BR-532 can be used.

If a memory card has been used by some other system such as Windows, you must first initialize it on the BR-532.

3. Installing/uninstalling the software

Copy the file named "Br532wc.exe" to your hard drive.

 
In uninstalling, delete the file "Br532wc.exe" and "Br532wc.ini" in the folder you installed.

* For details on copying, refer to the Windows manual or help function.

4. Operation


a. Starting the application

Double-click the Br532wc.exe icon. The application will start up.

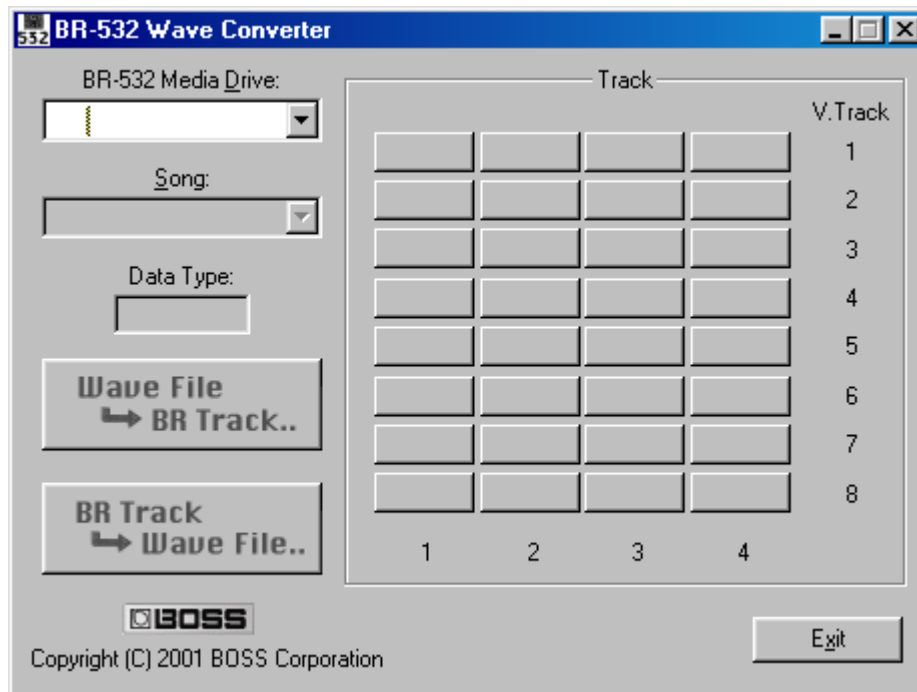

b. Exiting the application

 Click either the [X] button located in the upper right of the window, or the [Exit] button located in the lower right of the window. The application will exit. [ESC] key on your keyboard is also usable.

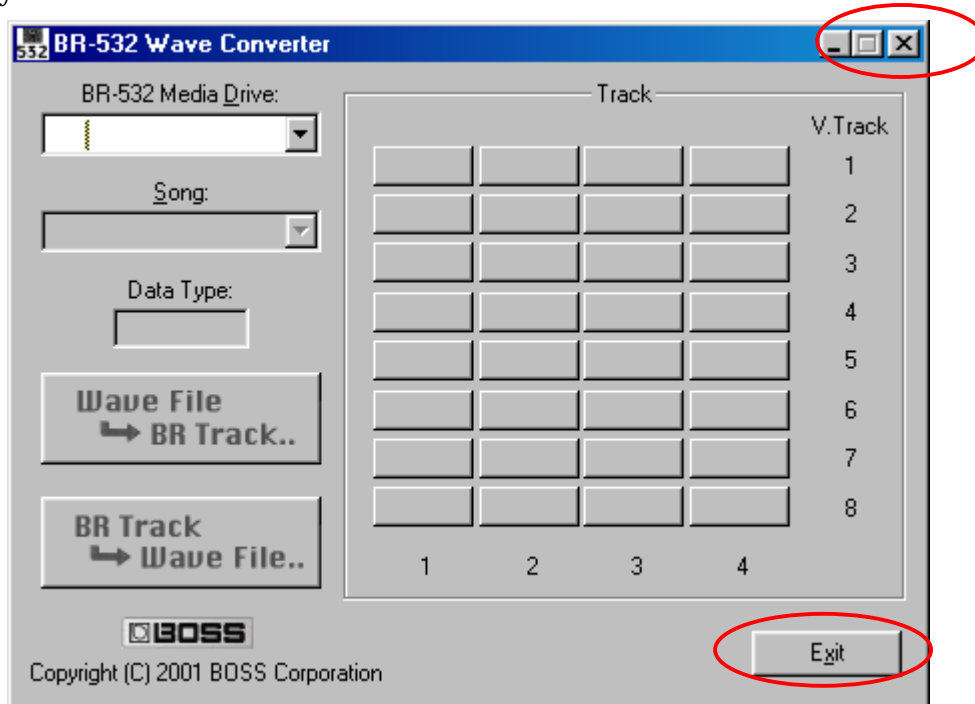

c. Selecting a memory card

If a SmartMedia reader / writer is not selected in [BR-532 Media Drive:], select a drive from the popup menu.

If a BR-532 formatted memory card is inserted in the selected drive, the first song on the memory card will be displayed in the window.

* If a BR-532 formatted memory card is not inserted in the selected drive, nothing will be displayed in the song name display area.

d. Selecting a song

Select a song from the [Song:] popup menu.

The contents of the selected song will be displayed in the track select area of the window.

e. Converting BR-532 track data into WAV file

(1) Click the tracks that you wish to convert into Windows Wave Audio (subsequently referred to as WAV) file.

Clicking a track will cause the color to change as follows.

Track containing audio data : green -> orange

Track not containing audio data : gray -> red

The [BR Track-> Wave File] button will become active.

(2) Press the [BR Track-> Wave File] button. A dialog box will appear.

(3) Select the save location for the file.

(4) In [Filename], specify the filename for saving.

(5) Click [Save], and the file will be saved.

If you decide to abort the conversion, click [Cancel].

* If you select two tracks, a stereo WAV file will be saved.

(The smaller track number will be saved on the left channel.)

If you select one track, a monaural WAV file will be saved.

* If you cancel a conversion, the data that's been converted up to that point will be saved, without being deleted.

f. Converting a WAV file into BR-532 data

- (1) Click the track on which you wish to store a WAV file.

Clicking a track will cause the color to change as follows.

Track containing audio data : green -> orange

Track not containing audio data : gray -> red

The [Wave File-> BR Track] button will become active.

* You can select a track in which data has already been recorded.

(The saved data will overwrite the previous data, erasing it.)

- (2) Press the [Wave File-> BR Track] button. A dialog box will appear.
- (3) Select the file that you wish to load.
- (4) Press the "Open" button. The file will be converted into BR-532 format, and will be stored in the specified track.

If you decide to abort the conversion, click [Cancel].

* This software is capable of handling 44.1 kHz, 16-bit PCM WAVE files. Be sure to convert the data to this format when converting MP3 or other types of data.

 
* The time required for loading and conversion will depend on the size of the original file.

* If you specify two tracks when loading a monaural WAV file, the same data will be placed in each of the specified tracks.


* If you specify one track when loading a stereo WAV file, the left channel data will be placed in the specified track.

h. Checking the software version

Click the icon in the title bar.

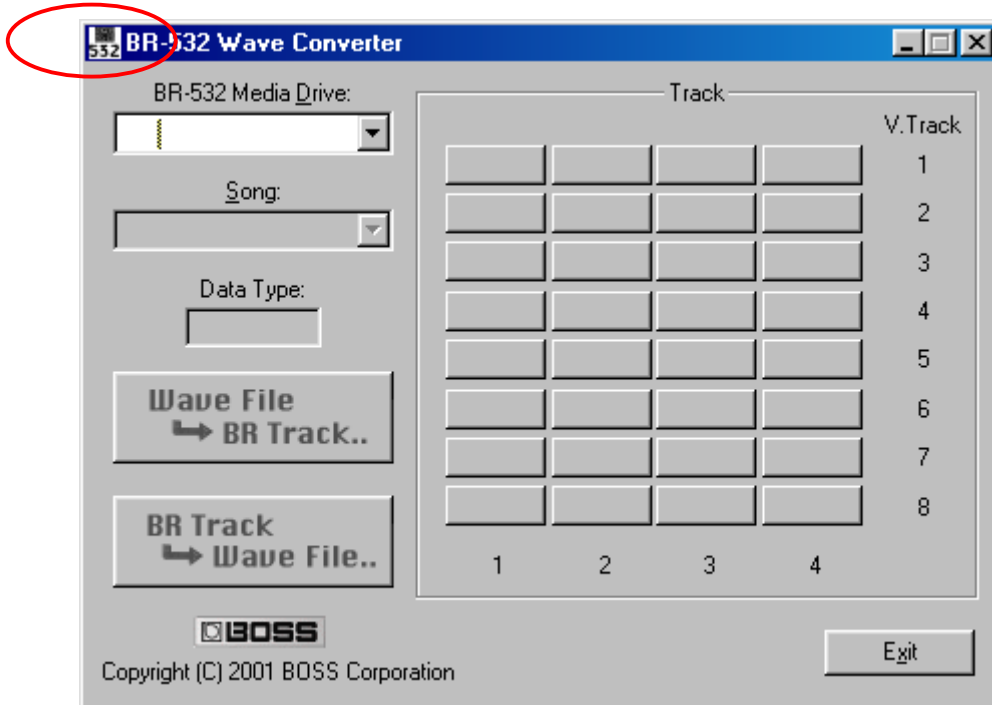

Click [About BR-532 Wave Converter].

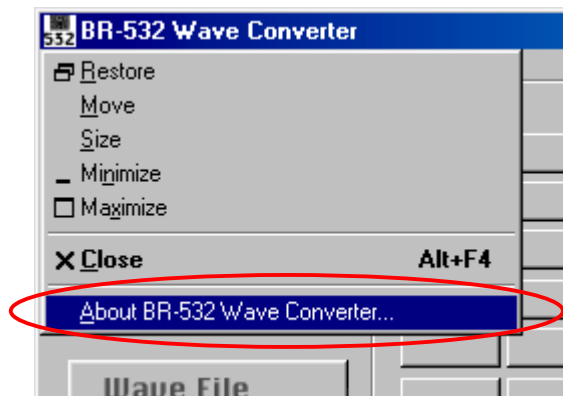 

i. Error messages

< **"Not BR-8/532 disk."** >

You selected a memory card that was not formatted for the BR-532.
Check the memory card and try the operation once again.

< **"Can't read disk."** >

You performed a read operation on a memory card that was not ready.
Check the memory card and try the operation once again.

< **"Can't write disk."** >

You attempted to write to a protected memory card. Or, you performed a write operation on a card that was not ready. Check the memory card and try the operation once again.

< **"Failed to read wave file."** >

The WAV file you attempted to read was not a PCM, 44.1kHz, 16Bit,
and therefore could not be read. Please check the format of the file.

< **"No free space on save target disk."** >

There is insufficient space on the save destination memory card. Increase the amount of free space by erasing unneeded data. Then try the conversion operation once again.

< **"Sampling frequency is not 44100 Hz. Can't convert wave file to BR track."** >

In the " Wave File-> BR Track " conversion, you selected WAV file with a sampling rate of something other than 44.1 kHz.
Please load a WAV file with a sampling rate of 44.1 kHz.

< **"Specified wave is too short (<1 sec.). Can't convert wave file to BR track."** >

In the " Wave File-> BR Track" conversion, you attempted to convert WAV file that was shorter than one second.

The BR-532 cannot handle data with a playback time shorter than one second.

< **"Event full. Can't create new event."** >

In the " Wave File-> BR Track " conversion, the space for playback data is full, and no new playback data can be added.

Use the "Song Optimize" operation on the BR-532 to erase unneeded data, and then try the conversion operation once again.