

DENON

Dual Digital Media Player

DN-D4500MK2

Owner's Manual



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION:

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

IMPORTANT TO SAFETY

WARNING:

To reduce the risk of fire and electric shock, this apparatus should not be exposed to rain or moisture.

CAUTION:

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. THIS PRODUCT SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED SERVICE PERSONNEL.

FCC INFORMATION
(For US customers)

1. PRODUCT

This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this product may not cause harmful interference, and (2) this product must accept any interference received, including interference that may cause undesired operation.

2. IMPORTANT NOTICE: DO NOT MODIFY THIS PRODUCT

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modification not expressly approved by DENON may void your authority, granted by the FCC, to use the product.

3. NOTE

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the local retailer authorized to distribute this type of product or an experienced radio/TV technician for help.

For Canadian customers:

This Class B apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This product is equipped with a three-wire grounding type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.



□ Laser Class (IEC60825-1:2007) CLASS 1 LASER PRODUCT LUOKAN 1 LASERLAITE KLASS 1 LASERAPPARAT

“CLASS 1
LASER PRODUCT”

ADVARSEL: USYNLIG LASERSTRÅLING VED ÅBNING, NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNGDÅ UDSAETTELSE FOR STRÅLING.

VAROITUS! LAITTEEN KÄYTTÄMINEN MUULLA KUIN TÄSSÄ KÄYTTÖOHJEESSA MAINITULLA TAVALLA SAATTA ALTISTAA KÄYTTÄJÄN TURVALLISUUSLUOKAN 1 YLITTÄVÄLLE NÄKYMÄMTTÖMÄLLE LASERSÄTEILYLLE.

WARNING: OM APPARATEN ANVÄNDS PÅ ANNAT SÄTT ÄN I DENNA BRUKSANVISNING SPECIFICERATS, KAN ANVÄNDAREN UTSÄTTAS FÖR OSYNLIG LASERSTRÅLNING SOM ÖVERSKRIDER GRÄNSEN FÖR LASERKLASS 1.



ATTENZIONE: QUESTO APPARECCHIO E' DOTATO DI DISPOSITIVO OTTICO CON RAGGIO LASER. L'USO IMPROPRIO DELL'APPARECCHIO PUO' CAUSARE PERICOLOSE ESPOSIZIONI A RADIAZIONI!

CAUTION

1. Handle the power supply cord carefully

Do not damage or deform the power supply cord. If it is damaged or deformed, it may cause electric shock or malfunction when used. When removing from wall outlet, be sure to remove by holding the plug attachment and not by pulling the cord.

2. Do not open the rear cover

In order to prevent electric shock, do not open the top cover. If problems occur, contact your DENON DEALER.

3. Do not place anything inside

Do not place metal objects or spill liquid inside the system. Electric shock or malfunction may result.

Please, record and retain the Model name and serial number of your set shown on the rating label.

Model No. DN-D4500MK2

Serial No. _____

**NOTE ON USE/HINWEISE ZUM GEBRAUCH/OBSERVATIONS RELATIVES A L'UTILISATION/
NOTE SULL'USO/NOTAS SOBRE EL USO/ALVORENS TE GEBRUIKEN/OBSERVERA**

WARNINGS	WARNHINWEISE	AVERTISSEMENTS	AVVERTENZE	ADVERTENCIAS	WAARSCHUWINGEN	VARNINGAR
<ul style="list-style-type: none"> Handle the power cord carefully. Hold the plug when unplugging the cord. Keep the unit free from moisture, water, and dust. Unplug the power cord when not using the unit for long periods of time. Do not obstruct the ventilation holes. Do not let foreign objects into the unit. Do not let insecticides, benzene, and thinner come in contact with the unit. Never disassemble or modify the unit in any way. Ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths or curtains. Naked flame sources such as lighted candles should not be placed on the unit. Do not expose the unit to dripping or splashing fluids. Do not place objects filled with liquids, such as vases, on the unit. Do not handle the mains cord with wet hands. When the switch is in the OFF position, the equipment is not completely switched off from MAINS. The equipment shall be installed near the power supply so that the power supply is easily accessible. 	<ul style="list-style-type: none"> Gehen Sie vorsichtig mit dem Netzkabel um. Halten Sie das Kabel am Stecker, wenn Sie den Stecker herausziehen. Halten Sie das Gerät von Feuchtigkeit, Wasser und Staub fern. Decken Sie den Lüftungsbereich nicht ab. Wenn das Gerät längere Zeit nicht verwendet werden soll, trennen Sie das Netzkabel vom Netzstecker. Lassen Sie keine fremden Gegenstände in das Gerät kommen. Lassen Sie das Gerät nicht mit Insektiziden, Benzin oder Verdünnungsmitteln in Berührung kommen. Versuchen Sie niemals das Gerät auseinander zu nehmen oder zu verändern. Die Belüftung sollte auf keinen Fall durch das Abdecken der Belüftungsöffnungen durch Gegenstände wie beispielsweise Zeitungen, Tischtücher, Vorhänge o. Ä. behindert werden. Auf dem Gerät sollten keinerlei direkte Feuerquellen wie beispielsweise angezündete Kerzen aufgestellt werden. Das Gerät sollte keiner tropfenden oder spritzenden Flüssigkeit ausgesetzt werden. Auf dem Gerät sollten keine mit Flüssigkeit gefüllten Behälter wie beispielsweise Vasen aufgestellt werden. Das Netzkabel nicht mit feuchten oder nassen Händen anfassen. Wenn der Schalter ausgeschaltet ist (OFF-Position), ist das Gerät nicht vollständig vom Stromnetz (MAINS) abgetrennt. Das Gerät sollte in der Nähe einer Netzsteckdose aufgestellt werden, damit es leicht an das Stromnetz angeschlossen werden kann. 	<ul style="list-style-type: none"> Manipuler le cordon d'alimentation avec précaution. Tenir la prise lors du débranchement du cordon. Protéger l'appareil contre l'humidité, l'eau et la poussière. Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes. Ne pas obstruer les trous d'aération. Ne pas laisser des objets étrangers dans l'appareil. Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil. Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre. Ne pas recouvrir les orifices de ventilation avec des objets tels que des journaux, nappes ou rideaux. Cela entraverait la ventilation. Ne jamais placer de flamme nue sur l'appareil, notamment des bougies allumées. L'appareil ne doit pas être exposé à l'eau ou à l'humidité. Ne pas poser d'objet contenant du liquide, par exemple un vase, sur l'appareil. Ne pas manipuler le cordon d'alimentation avec les mains mouillées. Lorsque l'interrupteur est sur la position OFF, l'appareil n'est pas complètement déconnecté du SECTEUR (MAINS). L'appareil sera installé près de la source d'alimentation, de sorte que cette dernière soit facilement accessible. 	<ul style="list-style-type: none"> Manneggiare il cavo di alimentazione con attenzione. Tenete ferma la spina quando scollegate il cavo dalla presa. Tenete l'unità lontana dall'umidità, dall'acqua e dalla polvere. Scollegate il cavo di alimentazione quando prevedete di non utilizzare l'unità per un lungo periodo di tempo. Non coprite i fori di ventilazione. Non inserite corpi estranei all'interno dell'unità. Assicuratevi che l'unità non entri in contatto con insetticidi, benzolo o solventi. Non smontate né modificate l'unità in alcun modo. Le aperture di ventilazione non devono essere ostruite coprendole con oggetti, quali giornali, tovaglie, tende e così via. Non posizionate sull'unità fiamme libere, come ad esempio candele accese. L'apparecchiatura non deve essere esposta a gocciolii o spruzzi. Non posizionate sull'unità alcun oggetto contenente liquidi, come ad esempio i vasi. Non toccare il cavo di alimentazione con le mani bagnate. Quando l'interruttore è nella posizione OFF, l'apparecchiatura non è completamente scollegata da MAINS. L'apparecchio va installato in prossimità della fonte di alimentazione, in modo che quest'ultima sia facilmente accessibile. 	<ul style="list-style-type: none"> Maneje el cordón de energía con cuidado. Sostenga el enchufe cuando desconecte el cordón de energía. Mantenga el equipo libre de humedad, agua y polvo. Desconecte el cordón de energía cuando no utilice el equipo por mucho tiempo. No obstruya los orificios de ventilación. No deje objetos extraños dentro del equipo. No permita el contacto de insecticidas, gasolina y diluyentes con el equipo. Nunca desarme o modifique el equipo de ninguna manera. La ventilación no debe quedar obstruida por haberse cubierto las aperturas con objetos como periódicos, manteles o cortinas. No deberán colocarse sobre el aparato fuentes inflamables sin protección, como velas encendidas. No exponer el aparato al goteo o salpicaduras cuando se utilice. No colocar sobre el aparato objetos llenos de líquido, como jarros. No maneje el cable de alimentación con las manos mojadas. Cuando el interruptor está en la posición OFF, el equipo no está completamente desconectado de la alimentación MAINS. El equipo se instalará cerca de la fuente de alimentación de manera que resulte fácil acceder a ella. 	<ul style="list-style-type: none"> Hanteer het netsnoer voorzichtig. Houd het snoer bij de stekker vast wanneer deze moet worden aan- of losgekoppeld. Laat geen vochtigheid, water of stof in het apparaat binnendringen. Neem altijd het netsnoer uit het stopcontact wanneer het apparaat gedurende een lange periode niet wordt gebruikt. De ventilatieopeningen mogen niet worden geblokkeerd. Laat geen vreemde voorwerpen in dit apparaat vallen. Voorkom dat insecticiden, benzene of verfverdunder met dit toestel in contact komen. Dit toestel mag niet gedemonteerd of aangepast worden. De ventilatie mag niet worden belemmerd door de ventilatieopeningen af te dekken met bijvoorbeeld kranten, een tafelkleed of gordijnen. Plaats geen open vlammen, bijvoorbeeld een brandende kaars, op het apparaat. Stel het apparaat niet bloot aan druppels of spatten. Plaats geen voorwerpen gevuld met water, bijvoorbeeld een vaas, op het apparaat. Raak het netsnoer niet met natte handen aan. Als de schakelaar op OFF staat, is het apparaat niet volledig losgekoppeld van de netspanning (MAINS). De apparatuur wordt in de buurt van het stopcontact geïnstalleerd, zodat dit altijd gemakkelijk toegankelijk is. 	<ul style="list-style-type: none"> Hantera nätkabeln varsamt. Håll i kabeln när den kopplas från el-uttaget. Utsätt inte apparaten för fukt, vatten och damm. Koppla loss nätkabeln om apparaten inte kommer att användas i lång tid. Täpp inte till ventilationsöppningarna. Se till att främmande föremål inte tränger in i apparaten. Se till att inte insektsmedel på spraybruk, bensen och thinner kommer i kontakt med apparatens hölje. Ta inte isär apparaten och försök inte bygga om den. Ventilationen bör inte förhindras genom att täcka för ventilationsöppningarna med föremål såsom tidingar, bordsdukar eller gardiner. Placera inte öppen eld, t.ex. tända ljus, på apparaten. Apparaten får inte utsättas för vätska. Placera inte föremål fyllda med vätska, t.ex. vaser, på apparaten. Hantera inte nätsladden med våta händer. Även om strömbrytaren står i det avstängda läget OFF, så är utrustningen inte helt bortkopplad från det elektriska nätet (MAINS). Utrustningen ska vara installerad nära strömuttaget så att strömförsörjningen är lätt att tillgå.

•DECLARATION OF CONFORMITY**(English)**

We declare under our sole responsibility that this product, to which this declaration relates, is in conformity with the following standards:

EN60065, EN55013, EN55020, EN61000-3-2 and EN61000-3-3.

Following the provisions of Low Voltage Directive 2006/95/EC and EMC Directive 2004/108/EC, the EC regulation 1275/2008 and its frame work Directive 2009/125/EC for Energy-related Products (ErP).

•ÜBEREINSTIMMUNGSERKLÄRUNG**(Deutsch)**

Wir erklären unter unserer Verantwortung, daß dieses Produkt, auf das sich diese Erklärung bezieht, den folgenden Standards entspricht:

EN60065, EN55013, EN55020, EN61000-3-2 und EN61000-3-3.

Gemäß den Bestimmungen der Niederspannungsrichtlinie 2006/95/EG und EMV Richtlinie 2004/108/EG, der Verordnung (EG) Nr. 1275/2008 der Kommission und deren Rahmenrichtlinie 2009/125/EG zu energieverbrauchsrelevanten Produkten (ErP).

•DECLARATION DE CONFORMITE**(Français)**

Nous déclarons sous notre seule responsabilité que l'appareil, auquel se réfère cette déclaration, est conforme aux standards suivants:

EN60065, EN55013, EN55020, EN61000-3-2 et EN61000-3-3.

Selon la directive 2006/95/EC concernant la basse tension et la directive CEM 2004/108/EC, la réglementation européenne 1275/2008 et la directive 2009/125/EC établissant un cadre de travail applicable aux produits liés à l'énergie (ErP).

•DICHIAZIONE DI CONFORMITÀ**(Italiano)**

Dichiariamo con piena responsabilità che questo prodotto, al quale la nostra dichiarazione si riferisce, è conforme alle seguenti normative:

EN60065, EN55013, EN55020, EN61000-3-2 e EN61000-3-3.

Facendo seguito alle disposizioni della direttiva sul basso voltaggio 2006/95/EC alla direttiva EMC 2004/108/EC, alla norma EC 1275/2008 e alla relativa legge quadro 2009/125/EC in materia di prodotti alimentati ad energia (ErP).

QUESTO PRODOTTO E' CONFORME

AL D.M. 28/08/95 N. 548

•DECLARACIÓN DE CONFORMIDAD**(Español)**

Declaramos bajo nuestra exclusiva responsabilidad que este producto al que hace referencia esta declaración, está conforme con los siguientes estándares:

EN60065, EN55013, EN55020, EN61000-3-2 y EN61000-3-3.

De acuerdo con la directiva sobre baja tensión 2006/95/CE y la directiva sobre CEM 2004/108/CE, la normativa CE 1275/2008 y su directiva marco 2009/125/EC para productos relacionados con la energía (ErP).

•EENVORMIGHEIDSVERKLARING**(Nederlands)**

Wij verklaren uitsluitend op onze verantwoordelijkheid dat dit product, waarop deze verklaring betrekking heeft, in overeenstemming is met de volgende normen:

EN60065, EN55013, EN55020, EN61000-3-2 en EN61000-3-3.

Volgens de voorzieningen van lage spanningsrichtlijn 2006/95/EC en EMC-richtlijn 2004/108/EC, de EU-richtlijn 1275/2008 en de kaderrichtlijn 2009/125/EC voor energieverbruikende producten (ErP).

•ÖVERENSSTÄMMELSEINTYG**(Svenska)**

Härmed intygas helt på eget ansvar att denna produkt, vilken detta intyg avser, uppfyller följande standarder:

EN60065, EN55013, EN55020, EN61000-3-2 och EN61000-3-3.

Uppfyller reglerna i lågspänningsdirektivet 2006/95/EC och EMC-direktivet 2004/108/EC, EU-förordningen 1275/2008 och ramverksdirektivet 2009/125/EC för energirelaterade produkter (ErP).

CAUTION:**(English)**

To completely disconnect this product from the mains, disconnect the plug from the wall socket outlet.

The mains plug is used to completely interrupt the power supply to the unit and must be within easy access by the user.

VORSICHT:**(Deutsch)**

Um dieses Gerät vollständig von der Stromversorgung abzutrennen, trennen Sie bitte den Netzstecker von der Wandsteckdose ab.

Die Hauptstecker werden verwendet, um die Stromversorgung zum Gerät völlig zu unterbrechen; er muss für den Benutzer gut und einfach zu erreichen sein.

PRECAUTION:**(Français)**

Pour déconnecter complètement ce produit du courant secteur, débranchez la prise de la prise murale.

La prise secteur est utilisée pour couper complètement l'alimentation de l'appareil et l'utilisateur doit pouvoir y accéder facilement.

ATTENZIONE:**(Italiano)**

Per scollegare definitivamente questo prodotto dalla rete di alimentazione elettrica, togliere la spina dalla relativa presa.

La spina di rete viene utilizzata per interrompere completamente l'alimentazione all'unità e deve essere facilmente accessibile all'utente.

PRECAUCIÓN:**(Español)**

Para desconectar completamente este producto de la alimentación eléctrica, desconecte el enchufe del enchufe de la pared.

El enchufe de la alimentación se utiliza para interrumpir por completo el suministro de alimentación a la unidad y debe de encontrarse en un lugar al que el usuario tenga fácil acceso.

VOORZICHTIGHEID:**(Nederlands)**

Om de voeding van dit product volledig te onderbreken moet de stekker uit het stopcontact worden getrokken.

De netstekker wordt gebruikt om de stroomtoevoer naar het toestel volledig te onderbreken en moet voor de gebruiker gemakkelijk bereikbaar zijn.

FÖRSIKTIHETSMÅTT:**(Svenska)**

Koppla loss stickproppen från eluttaget för att helt skilja produkten från nätet.

Stickproppen används för att helt bryta strömförsörjningen till apparaten, och den måste vara lättillgänglig för användaren.

D&M Professional Europe
A division of D&M Europe B.V.
Beemdstraat 11
5653 MA Eindhoven
The Netherlands

A NOTE ABOUT RECYCLING:

This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with the local recycling regulations.

When discarding the unit, comply with local rules or regulations.

Batteries should never be thrown away or incinerated but disposed of in accordance with the local regulations concerning battery disposal.

This product and the supplied accessories, excluding the batteries, constitute the applicable product according to the WEEE directive.

HINWEIS ZUM RECYCLING:

Das Verpackungsmaterial dieses Produktes ist zum Recyceln geeignet und kann wieder verwendet werden. Bitte entsorgen Sie alle Materialien entsprechend der örtlichen Recycling-Vorschriften.

Beachten Sie bei der Entsorgung des Gerätes die örtlichen Vorschriften und Bestimmungen.

Die Batterien dürfen nicht in den Hausmüll thrown oder verbrannt werden; bitte entsorgen Sie die Batterien gemäß der örtlichen Vorschriften.

Dieses Produkt und das im Lieferumfang enthaltene Zubehör (mit Ausnahme der Batterien!) entsprechen der WEEE-Direktive.

UNE REMARQUE CONCERNANT LE RECYCLAGE:

Les matériaux d'emballage de ce produit sont recyclables et peuvent être réutilisés. Veuillez disposer des matériaux conformément aux lois sur le recyclage en vigueur.

Lorsque vous mettez cet appareil au rebut, respectez les lois ou réglementations en vigueur.

Les piles ne doivent jamais être jetées ou incinérées, mais mises au rebut conformément aux lois en vigueur sur la mise au rebut des piles.

Ce produit et les accessoires inclus, à l'exception des piles, sont des produits conformes à la directive DEEE.

NOTA RELATIVA AL RICICLAGGIO:

I materiali di imballaggio di questo prodotto sono riutilizzabili e riciclabili. Smaltire i materiali conformemente alle normative locali sul riciclaggio.

Per lo smaltimento dell'unità, osservare le normative o le leggi locali in vigore.

Non gettare le batterie, né incenerirle, ma smaltirle conformemente alla normativa locale sui rifiuti chimici.

Questo prodotto e gli accessori inclusi nell'imballaggio sono applicabili alla direttiva RAEE, ad eccezione delle batterie.

ACERCA DEL RECICLAJE:

Los materiales de embalaje de este producto son reciclables y se pueden volver a utilizar. Disponga de estos materiales siguiendo los reglamentos de reciclaje de su localidad.

Cuando se deshaga de la unidad, cumpla con las reglas o reglamentos locales.

Las pilas nunca deberán tirarse ni incinerarse. Deberá disponer de ellas siguiendo los reglamentos de su localidad relacionados con los desperdicios químicos.

Este producto junto con los accesorios empaquetados es el producto aplicable a la directiva RAEE excepto pilas.

EEN AANTEKENING MET BETREKKING TOT DE RECYCLING:

Het inpakmateriaal van dit product is recycleerbaar en kan opnieuw gebruikt worden. Er wordt verzocht om zich van elk afvalmateriaal te ontdoen volgens de plaatselijke voorschriften.

Volg voor het wegdoen van de speler de voorschriften voor de verwijdering van wit- en bruingoed op.

Batterijen mogen nooit worden weggegooid of verbrand, maar moeten volgens de plaatselijke voorschriften betreffende chemisch afval worden verwijderd.

Op dit product en de meegeleverde accessoires, m.u.v. de batterijen is de richtlijn voor afgedankte elektrische en elektronische apparaten (WEEE) van toepassing.

OBSERVERA ANGÅENDE ÅTERVINNING:

Produktens emballage är återvinningsbart och kan återanvändas. Kassera det enligt lokala återvinningsbestämmelser. När du kasserar enheten ska du göra det i överensstämmelse med lokala regler och bestämmelser.

Batterier får absolut inte kastas i soporna eller brännas. Kassera dem enligt lokala bestämmelser för kemiskt avfall.

Denna apparat och de tillbehör som levereras med den uppfyller gällande WEEE-direktiv, med undantag av batterierna.



Pb

Getting started



Contents

Getting started	1	Playback	13	Preset function	25
Accessories	2	Turning the power on	13	Preset menu map	25
About this manual	2	Turning the power off	13	How to adjust the various Preset settings	25
Main features	3	Playback	13	Troubleshooting	26
Cautions on handling	3	CD playback	13	Specifications	27
Discs	4	CD-ROM/CD-R/CD-RW playback	14	Index	28
Discs playable on this unit	4	USB memory device or HDD playback	15		
Holding discs	4	Operations during playback	17		
Loading discs	4	Setting playback mode	17		
Cautions on loading discs	4	Playback	17		
Cautions on storing discs	4	Pause	17		
Cleaning discs	4	Fast forward/Rewind	18		
Supported media and files	5	Setting the cue point	18		
Supported media	5	Adjusting the playback speed	19		
Playable files	5	Adjusting the playback speed without changing the pitch	19		
Part names and functions	6	Changing the playback speed temporarily (pitch bend function)	19		
Front panel	6	Manual loop playback	19		
Display	9	Adjusting the track end time	20		
Rear panel	10	Adjusting brake time	21		
		Relay play	22		
		Power on play	22		
Connection	11	Others	23		
Cables used for connection	11	Memo function	23		
Basic connections	11	Memo settings	23		
Connecting the power cord	12				

Accessories

Check that the following parts are supplied with the product.

- ① Owner's Manual 1
- ② DN-D4500MK2 Resource CD-ROM 1
(Contents)
 - Owner's manual (This manual)
- ③ Power cord (For use with this unit only) 1
- ④ RCA cable 1
- ⑤ Remote control connection cable 1
- ⑥ Warranty (for North America model only) 1

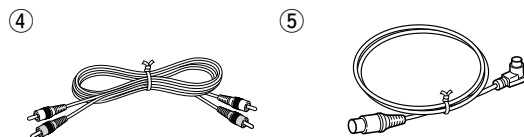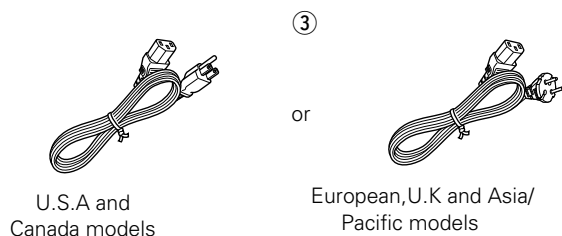

About this manual

☐ Symbols



This symbol indicates a reference page on which related information is described.



This symbol indicates a supplementary information and tips for operations.

NOTE

This symbol indicates points to remember operations or function limitations.

☐ Illustrations

Note that the illustrations in these instructions are for explanation purposes and may differ from the actual unit.

Main features

The DN-D4500MK2 is a Dual Digital Media Player equipped with a variety of functions and high performance characteristics, specifically designed for Mobile and Club DJ's around the world.

Control section

1. **The DN-D4500MK2 can be easily mounted on a standard 19-inch rack.**
2. **Improved visibility under low lighting conditions thanks to a large fluorescent display, back-lit illuminated action buttons and illuminated disc trays.**
3. **Improved interface operation thanks to a large jog/Shuttle wheel and track select knob.**

Functions

1. **Shockproof function protecting against external vibrations**
2. **Auto Level Search / Instant Start**
3. **Pitch / Pitch Bend & Key Adjust**
4. **MP3/USB Playback**

It is possible to play MP3 files created in the specified format found on page 14. Files can be searched for easily, by either manually scanning, or by using a number of file search functions (File search, File/Folder search, Artist name search, Title name search, File name search).

5. **Seamless Loop**

Playback can be looped between any two points in a track without any break in the audio. Two loop start points (A-1 and A-2) can be set anywhere within the track or disc.

6. **Hot Start / Stutter**

Playback can be started instantaneously from points A-1 and A-2. In the stutter mode, these same buttons play momentary audio while pressed and held down.

7. **Brake**

8. **Relay Play**

When this mode is set, CD1 and CD2 start their playback alternately. This unit can relay the playback of CD1 and CD2 every track or every disc.

9. **Power on Play**

The player can be set so that playback in the relay mode starts when the power is turned on.

10. **Fader Start**

The DN-D4500MK2 FADER START controls are compatible with various Denon DJ mixers and other mixers on the market.

11. **Auto Disc Tray Close System**

12. **Preset functions - Different presets can be changed according to your needs.**

13. **Custom Setting Memory**

14. **USB memory device Audio playback function**

15. **CD TEXT / MP3 ID3 Tag name display**

16. **CD-R / RW Playback**

This player can play CD-R/RW discs, but only if they are finalized.

NOTE

However that depending on the recording quality, the player may not be able to play some finalized CD-R/RW discs.

Cautions on handling

- **Before turning the power switch on**

Check once again that all connections are correct and that there are no problems with the connection cables.

- Power is supplied to some of the circuitry even when the unit is set to the standby mode. When going on vacation or leaving home for long periods of time, be sure to unplug the power cord from the power outlet.

- **Proper ventilation**

If the unit is left in a smoke-filled environment for long periods of time, the surface of the optical pickup may get dirty, preventing it from receiving signals properly.

- **About condensation**

If there is a major difference in temperature between the inside of the unit and the surroundings, condensation (dew) may form on the operating parts inside the unit, causing the unit not to operate properly.

If this happens, let the unit sit for an hour or two with the power turned off and wait until there is little difference in temperature before using the unit.

- **Cautions on using mobile phones**

Using a mobile phone near this unit may result in noise. If that occurs, move the mobile phone away from this unit when it is in use.

- **Moving the unit**

- Please remove any discs from both trays of the drive unit before transport.
- Turn off the power and unplug the power cord from the power outlet. Next, disconnect the connection cables to other system units before moving the unit.

- **About care**

- Wipe the cabinet and control panel clean with a soft cloth.
- Follow the instructions when using a chemical cleaner.
- Benzene, paint thinner or other organic solvents as well as insecticide may cause material changes and discoloration if brought into contact with the unit, and should therefore not be used.

Discs

Discs playable on this unit

1 Music CDs

Discs marked with the logo at right can be played in this unit.



2 CD-R/CD-RW

NOTE

- Discs in special shapes (heartshaped discs, octagonal discs, etc.) cannot be played. Do not attempt to play them, as doing so can damage the unit.
- Some discs and some recording formats cannot be played.
- Non-finalized discs cannot be played.



* What is finalization?

Finalization is the process that makes recorded CD-R/CD-RW discs playable on compatible players.

Holding discs



Do not touch the signal surface.

Loading discs

- Only load one disc at a time. Loading two or more discs can damage the unit or scratch the discs.
- When the disc is drawn into the unit, be careful not to trap your fingers.
- Do not insert anything other than discs into the disc loading slot.
- Do not use cracked or warped discs or discs that have been repaired with adhesive, etc.
- Do not use discs on which the sticky part of cellophane tape or labels is exposed or on which there are traces of where labels have been removed. Such discs can get caught inside the player and damage it.
- If the label side of the disc is dirty, wipe it clean before use. If the disc loading/ejection roller becomes dirty, discs may not load or eject correctly.

Cautions on loading discs


- Do not get fingerprints, oil or dirt on discs.
- Take special care not to scratch discs when removing them from their cases.
- Do not bend or heat discs.
- Do not enlarge the hole in the center.
- Do not write on the labeled (printed) surface with ball-point pens, pencils, etc., or stick new labels on discs.
- Water droplets may form on discs if they are moved suddenly from a cold place (outdoors for example) to a warm place, but do not try to dry them off using a hair-dryer, etc.

Cautions on storing discs


- Be sure to remove discs after using them.
- Be sure to store discs in their cases to protect them from dust, scratches, warping, etc.
- Do not store discs in the following places:
 - Places exposed to direct sunlight for long periods of time
 - Dusty or humid places
 - Places exposed to heat from heaters, etc.

Cleaning discs

- If there are fingerprints or dirt on a disc, wipe them off before using the disc. Fingerprints and dirt can impair sound quality and cause interruptions in playback.
- Use a commercially available disc cleaning set or a soft cloth to clean discs.

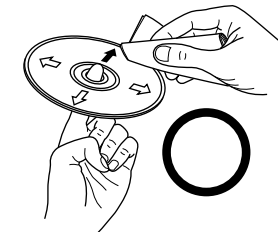

Gently wipe the disc from the inside towards the outside.

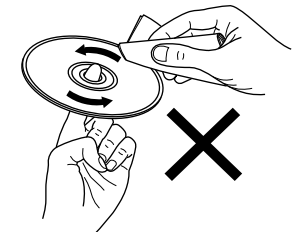

Do not wipe in a circular motion.

NOTE

Do not use record spray, antistatic agents, benzene, thinner or other solvents.

Supported media and files

The following media and files can be played back on this unit.

Supported media

Disc

Disc type : CD, CD-R, CD-RW, CD-ROM
Format : CD-DA (CD-TEXT compatible),
CD-ROM (ISO9660/Joliet format/Romeo format)

USB memory device

Media type : FLASH DRIVE, HDD
Format : FAT16/FAT32

NOTE

- When a multisession disc is used, the more sessions there are, the more time will be required to read the disc.
- The maximum capacity of USB memory devices and HDDs you can use is 2 TB.
- This unit cannot format USB memory devices or HDDs.

Playable files


File type	Extension	Format	Notes
MP3	.mp3	Same as CD-ROM (MPEG 1/2 / 2.5 Layer 3)	Max.=74min playable per one file
AAC	.m4a .mp4 .aac	AAC-LC Encode ADTS Format only CBR: 32–320kbps/sec 44.1kHz stereo VBR: 44.1kHz stereo	Max.=74min playable per one file
WAV	.wav	Linear PCM 44.1kHz 16bits stereo	
AIFF	.aif .aiff	Linear PCM 44.1kHz 16bits stereo	
ID-3 tag		V1.0, V1.1, V2.2, V2.3, V2.4	

NOTE

DRM protected files cannot be played back.

Part names and functions

Front panel

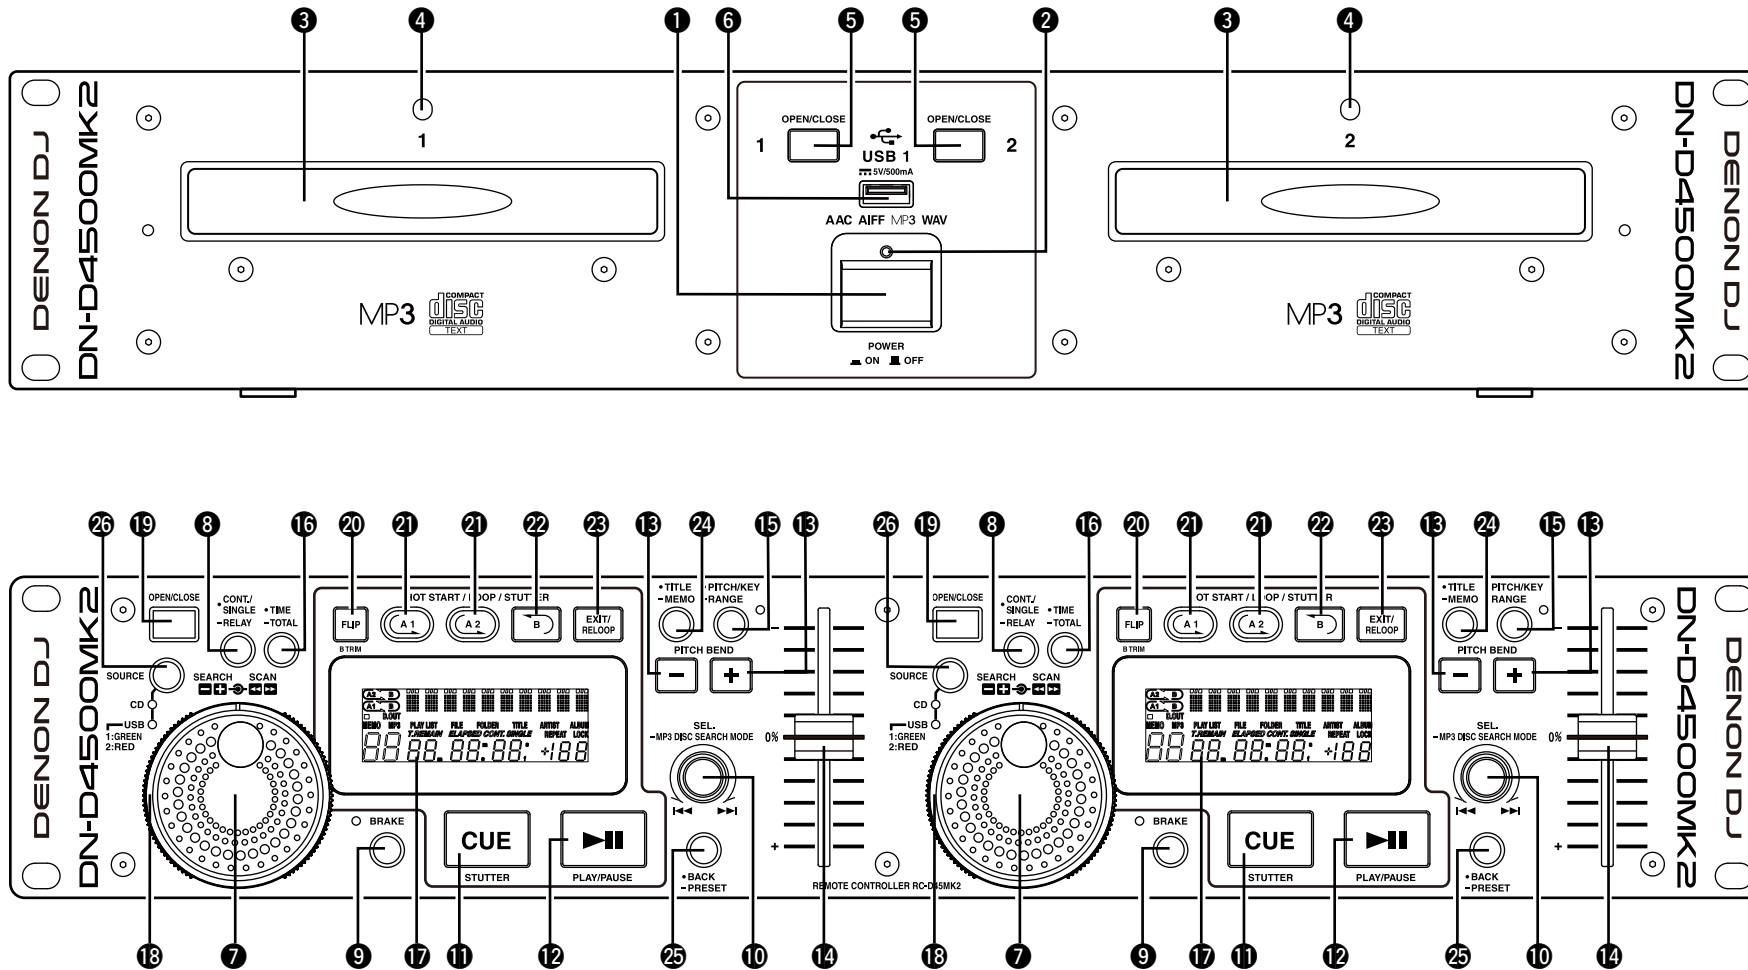

❑ DN-D4500MK2 Front panel

1 POWER button (ON OFF)

- Press this button to turn the power on.

NOTE

- Be sure to close the disc holders before turning off the power.

2 POWER indicator

- This lights when the power is on.

3 Disc holder

- Place discs in this holder.
- Press the disc holder OPEN/CLOSE button to open and close the disc holder.

CAUTION

- Do not place foreign objects in the disc holders. Doing so could damage the player.
- Do not press the disc tray in manually when the power is off, as this may result in malfunction and damage to the player.

4 Disc holder LED

- This flashes while the disc holder is opening and closing.
- The LED lights when the disc holder is open and serves as the disc holder illumination.

5 Disc holder OPEN/CLOSE button

- Press this button to open and close the disc holder.
- The disc holder will not open during playback. Stop playback before pressing this button.

6 USB1 port

- Insert a USB memory device or connect a HDD.

❑ RC-D45MK2 Front panel

CAUTION

- Note that there are many buttons working two different functions selected by short time pressing or long pressing (1 second or more). The
 - mark indicates short time press function and
 - mark indicates long time press function.

7 Jog wheel (inner wheel)

- While the player is in pause, cue, or frame repeat mode, turn this wheel to find the cue point in frame measurement.
- In the Playback mode, turn this wheel to temporarily pitch bend the playing speed.

8 Continue/Single button (CONT./SINGLE, – RELAY)

- **CONT./SINGLE:** Short Pressing alternates the play ending mode between CONT. (Continuous: play more tracks) and SINGLE (stops playing at the end of a track and re-cues back to your set point).

- **SINGLE PLAY LOCK:** SINGLE PLAY LOCK can be selected by PRESET(10). At this time, if this button is pressed, it will be selected. When SINGLE PLAY LOCK is selected, track selection during playback is disabled. This prevents playback from stopping when the Track Select Knob is turned accidentally during playback. Play ending mode is the same as single.

- **RELAY:** When this button is pressed for more than 1 sec, you can turn on and off RELAY PLAY mode.

9 BRAKE button

- When this button is pressed you can turn the Brake mode on and off.
- When the Brake mode is on, the LED lights. No LED indicates OFF mode.

10 TRACK SELECT/MP3 DISC SEARCH MODE knob

(SEL./ – MP3 DISC SEARCH MODE)

• TRACK:

Turn this knob to select the first or next track to be played.

Turn the knob clockwise by one click to move one track forward, counterclockwise by one click to move one track backward.

When the knob is turned while pressing it down, one click corresponds to advancing 10 tracks at a time.

In the Preset and Memo mode, use this knob to set and enter Preset and Memo settings.

- **MP3 DISC SEARCH MODE:**MP3 DISC only. When pressing this knob down for more than 1 second, the MP3 file search selection mode is selected.

11 CUE button

- Pressing the CUE button during play provides a return to the position at which play was started. Alternately pressing the PLAY/PAUSE button and the CUE button allows the CD to be played from the same position any number of times.

- The CUE button lit, when the standby mode is set.
- In CUE mode, by pressing the CUE button makes a Stutter sound from the CUE point. This is called Stutter play for added performance. (Stutter)

12 PLAY/PAUSE button (▶||)

- Use this button to start playback.
- Press once to start playback, once again to set the pause mode, and once more to resume playback.
- When the Brake mode is ON, press the Play/Pause to activate the Brake sound.

13 PITCH BEND +/- button

- The playing speed increases/decreases while these buttons are held down.
- When either button is released, the playing speed returns to the previous speed.

14 Pitch slider

- Use this to adjust the playing speed.
- The playing speed decreases when moved upwards and increases when moved downwards.

15 PITCH/KEY, – RANGE button

- With this button you can select PITCH and KEY ADJUST mode. Mode changes Pitch on, Key Adjust on and both off cyclically. Green LED indicates in Pitch mode and Orange indicator in Key Adjust mode. No LED indicates OFF mode.

• RANGE:

Press this button for more than 1 sec to select the pitch range. The pitch range can be selected with the TRACK SELECT knob from ± 4 , 10, *16, 24, 50 or 100%. (*Max pitch for MP3)

16 TIME, – TOTAL button

- Press this to switch the time display between the elapsed time or remaining time per track or per disc.
- When this button is pressed for more 1 second, you can display the total time. (4 way, audio, CD only)

17 Display

- See page 9.

18 Shuttle ring (outer ring)

- This control is used to select the scanning direction and speed.
The CD is scanned in the forward direction when the shuttle ring is turned clockwise from the center position. To scan backwards, the shuttle ring is turned counterclockwise.
- The scanning speed increases as the wheel is turned further.

19 Disc holder OPEN/CLOSE button

- Press this button to open and close the disc holder.
- The disc holder will not open during playback. Stop playback before pressing this button.

20 FLIP/B TRIM button

- Press this button to switch between the loop mode/hot start mode and stutter mode.
- After setting the B point, the B TRIM MODE can be selected.

21 A1, A2 buttons

- Press these buttons to set the start point for loop playback (point A-1 or A-2).
- Press these buttons to use the stutter and hot start functions.

22 B button

- Press this button to set the end point for loop playback (point B).

23 EXIT/RELOOP button

- When this button is pressed during a seamless loop, the track resumes back to normal play from the B point. (EXIT)
When pressed again, the playback jumps back into your A-B seamless loop. (RELOOP)

24 • TITLE/ - MEMO button**• CD TEXT:**

When there is CD text data, the CD text data is displayed automatically or when the button is pressed.

If no TEXT is available, the display will indicate "No TEXT".

• MP3:

When an MP3 file has ID-3 tag data, the title, artist name and album name can be selected and displayed each time the button is pressed.

• MEMO:

The memo mode starts when this button is pressed once in the CUE mode.

25 • BACK, - PRESET button**• BACK**

Pressing this button during the folder search displays the folder one level up.

• PRESET:

When this button is pressed for more than 1 sec, the PRESET mode starts.


NOTE

Memo's can not be set for MP3 files.

26 SOURCE select buttons**(CD/USB1/USB2)**

- When "CD" is selected, the CD LED lights.
- When "USB1" is selected, the USB1 Green LED lights.
- When "USB2" is selected, the USB2 Red LED lights.

Display

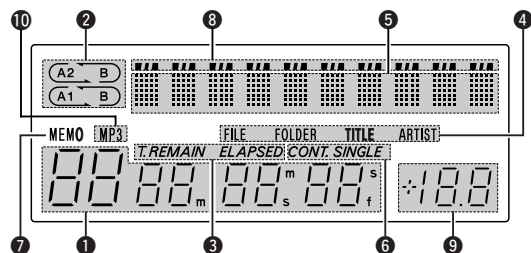

1 Track, minute, second and frame displays

- These displays indicate current position information.

2 Loop mode indicators

- DN-D4500MK2 has Loop mode indicators consist of two sets of A (A1, A2), B and two arrows. A and B marks indicate A and B points are set.
- Two arrows indicate loop setting mode as follows.

Example: A1 B

A1 **B** Both arrows on:
Seamless Loop mode

A1 **B**, Both arrows flashing:
Seamless Loop Playing

A1 **B**, Left arrow on, right flashing:

Exit play from Seamless Loop

3 Time mode indicators

- When the TIME/TOTAL button is pressed, the Time mode indicator switches as follows:
ELAPSED:
Track's elapsed time is displayed.
REMAIN:
Track's remaining time is displayed.
T. + ELAPSED:
The total elapsed time of disc or programmed track is displayed.
T. + REMAIN:
The total remaining time of disc or programmed track is displayed.

4 MP3 file search mode indicator

FILE:

FILE indicator appears in display, when in the FILE name search mode.

FOLDER:

FOLDER indicator appears in display, when in the FILE & FOLDER name search mode.

TITLE:

TITLE indicator appears in display, when in the TITLE name search mode.

ARTIST:

ARTIST indicator appears in display, when in the ARTIST name search mode.

5 Character display

- This displays various operational information, text message, etc.

6 Play mode indicators

- When SINGLE indicator lights up, playback will finish at end of current track.
- When CONT. indicator lights up, playback continues to the end of the disc.

7 MEMO indicator

- MEMO sign appears in display when there is a memory setting for the currently playing track or the track at which the standby mode is currently set.

8 Play Position indicators

• Play position indicator:

The 30 white dots indicate where is playing visually in a track in the normal play.

• End of Message:

When the time remaining to the end of the track is less than the specified time, the EOM (End Of Message) play position indicator flashes along with the remaining time, a notification to the user that the track will end soon.

- * The EOM time can be set within the preset mode.


9 Pitch display

- This numeric indicator display the playback speed (pitch).

10 MP3 indicators

- Lights when an MP3 disc is detected.

Rear panel

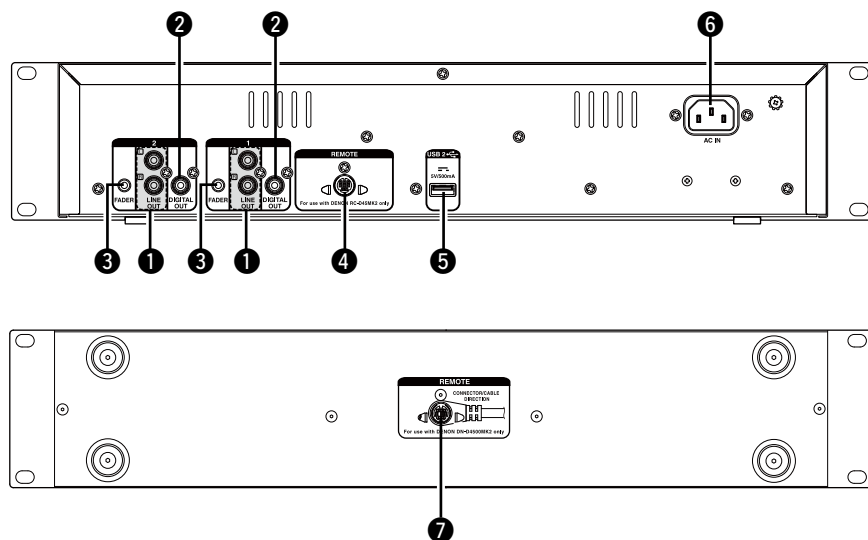

DN-D4500MK2 Rear panel

1 Analog output jacks 1, 2 (ANALOG OUT 1, 2)

- These are unbalanced output jacks. The audio signals from the both players are output from these jacks.

2 Digital output jacks 1, 2 (DIGITAL OUT 1, 2)

- Digital data is available from this jack.
- Use 75 Ω /ohms pin cord for connection.
- We recommend you use braided wire type shielded cable.

NOTE

The playback level after analog conversion is set to -6dB below the usual level to avoid digital distortion.

3 Fader input jacks 1, 2 (FADER 1, 2)

- Use this when your mixer has Fader Start function with 3.5 mm stereo mini cord.

4 Remote control connector (REMOTE)

- Connect the supplied 8pin din cable to the RC-D45MK2 control unit.

CAUTION

To completely disconnect this product from the mains, disconnect the plug from the wall socket outlet.

The mains plug is used to completely interrupt the power supply to the unit and must be within easy access by the user.

5 USB port

- Insert a USB memory device or connect a HDD.

6 AC inlet (AC IN)

RC-D45MK2 Rear panel

7 Control connector

 
- Connect the opposite side of supplied 8 pin din cable to the DN-D4500MK2 (main unit).

Connection


Cables used for connection

Select the cables according to the equipment being connected.


For LINE OUT terminals




For DIGITAL OUT terminals

 

For FADER jack

 

For REMOTE jack

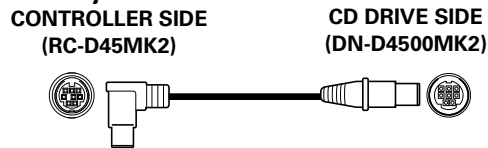


Remote control connection cable (supplied)

NOTE

- Do not plug in the power cord until all connections have been completed.
- When making connections, also refer to the operating instructions of the other components.
- Be sure to connect the left and right channels properly (left with left, right with right).
- Connect the cables to the correct input and output terminals.
- Insert the plugs securely. Loose connections will result in the generation of noise.
- Do not bundle power cords together with connection cables. Doing so can result in humming or noise.
- DN-D4500MK2 is not compatible with RC-D45 (old model) and DN-D4500 (old model) is not compatible with RC-D45MK2. Do not connect incompatible units.

Basic connections


- This is an example of the basic connections when connecting this unit to a DJ mixer.

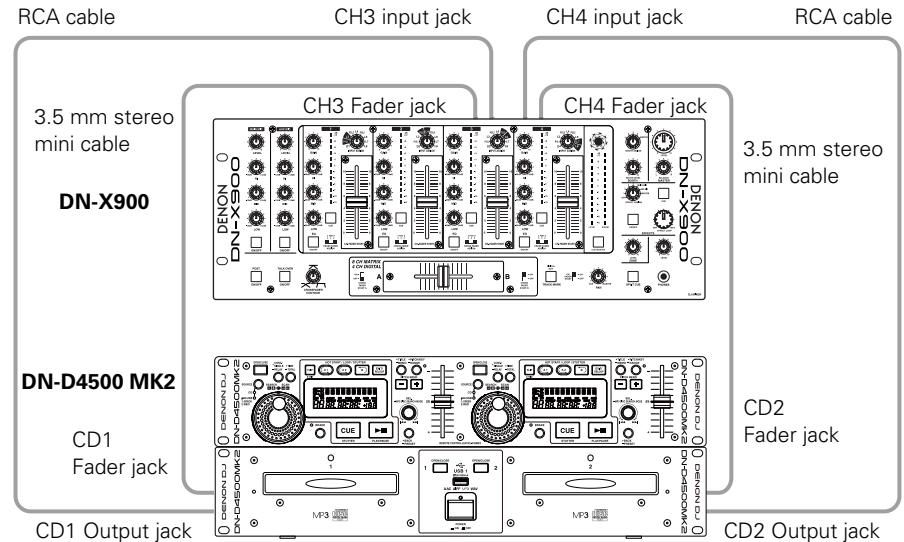

NOTE

- USB hubs cannot be used.
- In order to prevent playback output clipping due to differences in playback level when an effector is used, set the playback level to -6 dB from the normal playback level after converting digital output to analog.
- DENON does not guarantee that all USB memory devices will operate or receive power. When using a portable USB connection type HDD of the kind to which an AC adapter can be connected to supply power, use the AC adapter.

The DN-D4500MK2 will work normally when the player unit is mounted within 10 degrees off the vertical plane at the front panel. If the unit is tilted excessively, the disc may not be loaded or unloaded properly.

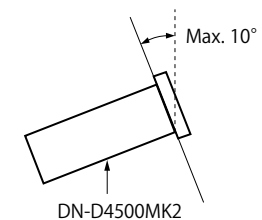


Connecting the power cord

Connect the supplied power cord to this unit, and insert the plug into the wall socket.



NOTE

- Do not plug in the power cord until all connections have been completed.
- Insert the plug fully and securely into the socket. Incomplete connection to the power supply may cause damage to the unit, or noise.

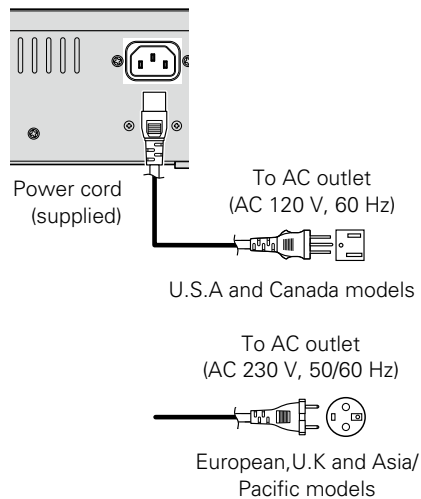

To prevent the power plug from falling out, we recommend fixing the power cord to the AC cord holder. Use a Phillips screwdriver to fix the power cord to the AC cord holder.

Playback

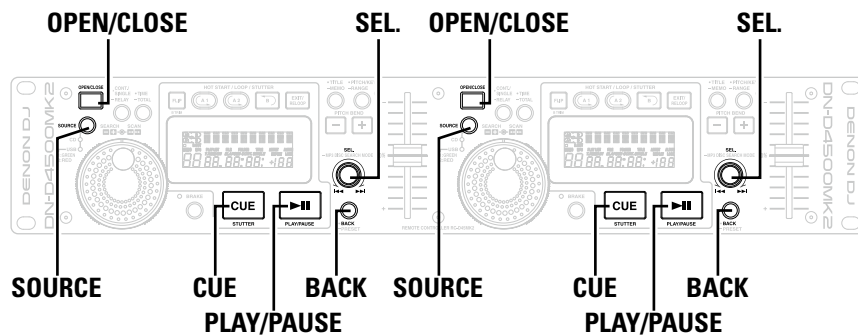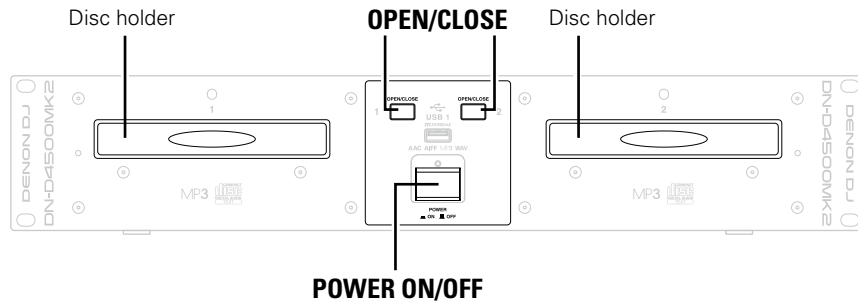

Turning the power on

Press **POWER ON/OFF**.

"DENON DN-D4500 MK2" appears on the display, and the power switches on.

Turning the power off

Press **POWER ON/OFF**.

The power switches off.

NOTE

Be sure to close the disc holders before turning off the power.

Playback


CD playback

- 1 Press **SOURCE** to switch the source to CD.
- 2 Press **OPEN/CLOSE** on the unit to open the disc holder and insert the disc.
- 3 Turn **SEL.** to select the track you want to play.
 - Press and turn **SEL.** to select 10 tracks at a time.
- 4 Press **▶||**.
▶|| lights green, and playback starts.

 


If you select a track during playing, playback starts from the beginning of the selected track.

CD-ROM/CD-R/CD-RW playback

For details on the files that can be played on this unit, see  page 5.

NOTE

This section explains the operating procedures for CD-ROM/CD-R/CD-RW discs that have been finalized as data CDs. For CDs that have been finalized as music CDs, see “CD playback” ( page 13).

- 1** Press **SOURCE** to switch the source to CD.
- 2** Press **OPEN/CLOSE** on the unit to open the disc holder and insert the disc.
- 3** Hold down **SEL.** (-MP3 DISC SEARCH MODE).
- 4** Turn **SEL.** to select “FileFolder”.
- 5** Turn **SEL.** to select the folder that contains the track you want to play.
- 6** Press **SEL.**
The folder names or track names within the folder are shown in the display.
- 7** Turn **SEL.** to select the track you want to play.
• Press **BACK** to return to the previous folder.
- 8** Press **SEL.**
The cue standby mode is set at the start of the selected tracks.
- 9** Press **▶||**.
▶|| lights green, and playback starts.

Ejecting CDs

Press **OPEN/CLOSE** on the unit to open the disc holder.
The CD is ejected from the disc loading slot.

NOTE

Be sure the CD is paused before ejecting. If **OPEN/CLOSE** is pressed during CD playback, the CD will not be ejected.

If the CD cannot be ejected

If the CD is not ejected due to a malfunction in the unit even when **OPEN/CLOSE** is pressed, it can be ejected using other buttons.

Hold down **OPEN/CLOSE** for the disc holder 1 or 2, and press **POWER ON/OFF**.

The CD is ejected from the disc loading slot.

Selecting the file

There are three methods for selecting files.

File search mode

To search a file directly from among all of those recorded in a disc.

Folder search mode

To specify the layer to select a folder or file from among all of those recorded in a disc.

File name search mode

To sort the files in alphabetical order to select from among all of those recorded in a disc.

Selecting files in file search mode


- 1** Hold down **SEL.** (-MP3 DISC SEARCH MODE).
- 2** Turn **SEL.** to select “FileSearch”.
- 3** Press **SEL.**
• To select files in group of ten, hold down **SEL.** and turn.
- 4** Turn **SEL.** to select a file.
The cue standby mode is set at the start of the selected file.

Selecting files in folder search mode

- 1** Hold down **SEL.** (-MP3 DISC SEARCH MODE).
- 2** Turn **SEL.** to select “FileFolder”.
- 3** Press **SEL.**
• To return to the layer of the upper folder, press **BACK**.
- 4** Turn **SEL.** to select a file.
- 5** Press **SEL.**
The cue standby mode is set at the start of the selected file.

Selecting files in file name search mode

- 1** Hold down **SEL.** (-MP3 DISC SEARCH MODE).
- 2** Turn **SEL.** to select “File Name”.
- 3** Press **SEL.**
- 4** Turn **SEL.** to select a file.
To change to the next initial letter, hold down **SEL.** and turn.
- 5** Press **SEL.**
The cue standby mode is set at the start of the selected file.

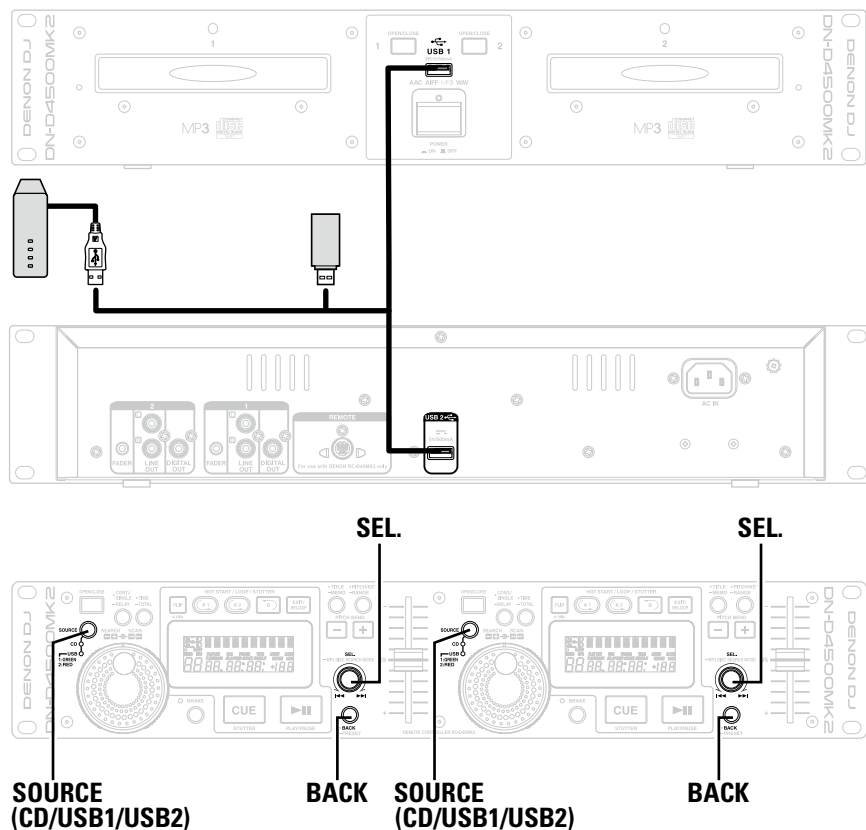

USB memory device or HDD playback

- Connect USB memory device or HDD to the USB port on the top panel, and prepare to playback a track.
- For details on the file formats that can be played on this unit, see [page 5](#).

1 Connect a USB memory device or HDD to the USB1 port or USB2 port.

2 Press **SOURCE** to switch the source to USB1/USB2.

3 Turn **SEL.** to select the folder.
The LED indicator lights in green when USB1 port is selected.
The LED indicator lights in red when USB2 port is selected.

4 Press **SEL.**
The folder names or track names within the selected folder are shown in the display.
• Press **BACK** to go back 1 folder level.

5 Turn **SEL.** to select the track you want to play.

6 Press **SEL.**
The cue standby mode is set at the start of the selected tracks.



- FAT16/FAT32 is supported for the USB memory device and HDD.
- When using a USB HDD of the kind to which an AC adapter can be connected to supply power, use the AC adapter.
- If the USB memory device is not recognized, disconnect the USB memory device and then reconnect it.

NOTE

- Depending on the type of mass-storage USB memory device or portable music player, it may take some time for this unit to recognize the device.
- Do not connect devices or cables that do not conform to USB standards.
- USB memory devices will not work via a USB hub.
- NTFS format USB memory devices and HDDs are not supported. If used, this unit may malfunction.
- When using a HDD that has an automatic power ON/OFF function that switches the HDD power on and off in sync with the computer, disable this function in the settings.
- The maximum capacity of USB memory devices and HDDs you can use is 2 TB.
- This unit cannot format USB memory devices or HDDs.


❑ Removing the USB memory device or HDD

Before removing the USB memory device or HDD, be sure to make sure the access lamp for the connected device is turned off.

NOTE

- Be sure the USB memory device or HDD is paused before removing.
- When removing USB memory device or HDD, use the above procedure to turn off the USB DRIVE indicator before removing. Incorrectly removing the USB memory device or HDD may damage the data stored on the device.
- DENON cannot accept any responsibility whatsoever for the damage or loss of data from USB memory devices or HDDs that are used in conjunction with this device.
- There is no guarantee that this unit is compatible with all types of USB memory devices or HDDs.

Operations during playback

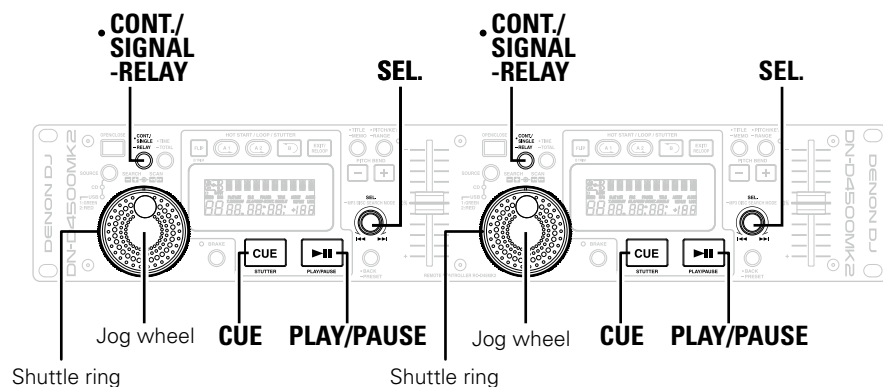


Setting playback mode

This sets how tracks are played back.

Press **SINGLE/CONT.**

 - The playback mode is switched in the following order each time the button is pressed.



SINGLE (PLAY LOCK) The SINGLE indicator lights in the display, and "Play Lock" is shown. In this mode, when playback of the track is completed, the track returns to the cue point and is paused.

SINGLE The SINGLE indicator lights in the display, and "Lock Off" is shown. In this mode, when playback of the track is completed, the track returns to the cue point and is paused.

CONT. The CONT. indicator in the display lights. In this mode, when playback of the track has finished, the next track is played back.

Playback

Press **▶||**.

▶|| lights green, and playback starts.

Pause

Press **▶||** during playback.

▶|| flashes, and the track is paused.

- Press **▶||** again to resume playback from the point at which the track was paused.

Fast forward/Rewind

There are four methods for fast forward/rewinding.

❑ Fast forward/Rewind using shuttle ring and jog wheel

During playback, turn the shuffle ring.

If turned in the FWD direction, the playback point is moved to the forward direction, and playback is resumed from the new point.

If turned in the RVS direction, the playback point is moved to the reverse direction, and playback is resumed from the new point.

During playback, turn the jog wheel (inner side).

If turned in the FWD direction, the playback speed increases.

If turned in the RVS direction, the playback speed decreases.



During pause, turn the shuffle ring.

If turned in the FWD direction, the pause point is moved to the forward direction, and pause mode is set at the new point.

If turned in the RVS direction, the pause point is moved to the reverse direction, and pause mode is set at the new point.

During pause, turn the jog wheel (inner side).

If turned in the FWD direction, the pause point is moved to the forward direction frame by frame, and pause mode is set at the new point.

If turned in the RVS direction, the pause point is moved to the reverse direction frame by frame, and pause mode is set at the new point.

Setting the cue point

By setting a cue point, the track can be played back from the set position.

❑ Setting the cue point

Pause the track in the position where you want to set the cue point, and press CUE.

The cue point is set at the paused position.

- Irrespective of the mode, the cue point is set at the start of the track when the track is loaded.

❑ Returning to the cue point

- Playback stops, returns to the position where you want to playback again (cue point), and is paused (back cue function).

- When this function is used, playback can always be started from the same position.

During playback, press CUE.

Playback stops, cues to the playback start position (cue point), and pauses.

❑ Moving the cue point

There are two methods for moving the cue point, using the shuttle ring, or using the jog wheel.

Setting with shuttle ring and jog wheel

1 During pause, turn the shuttle ring in the forward or reverse direction to move the cue point while listening to the playback sound.

2 If the jog wheel is turned in the forward or reverse direction, you can move the cue point while listening to the playback sound frame by frame.




3 Press CUE.

The cue point is set at the moved position.

Press ►||.

The cue point is set at the moved position, and playback starts.

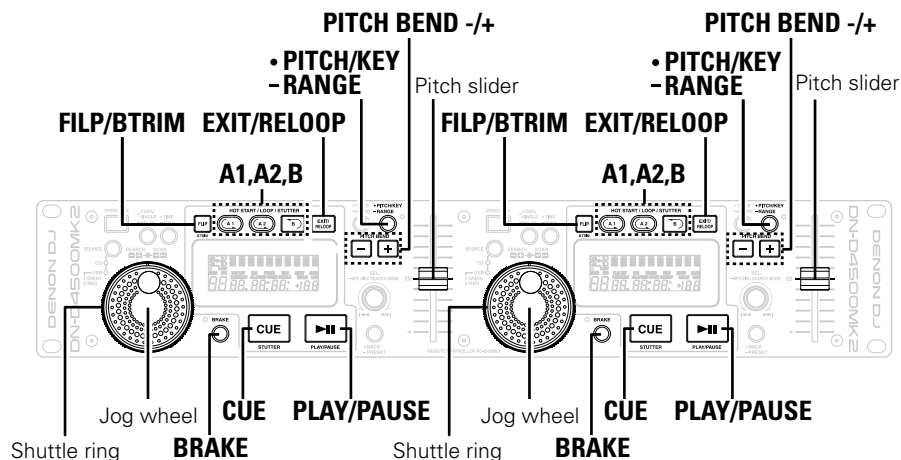


Adjusting the playback speed

Use the pitch slider to adjust the playback speed (pitch).

1 Press and hold PITCH/KEY - RANGE.

Range **% is displayed.

 Each time **SEL.** is turned, the range in which the playback speed can be adjusted switches as shown below. Turn **SEL.** to select the pitch range, and press **SEL.** to select the playback speed.



[For MP3 DISC]



2 Press PITCH/KEY - RANGE.

The LED lights green.

3 Move the pitch slider, and adjust to the desired playback speed.

Adjusting the playback speed without changing the pitch

When the playback speed is adjusted, the pitch is not changed.

Press PITCH/KEY - RANGE.

The LED lights orange.

Changing the playback speed temporarily (pitch bend function)

This function temporarily changes the playback speed. There are 2 methods for changing the playback speed.

Using the PITCH BEND buttons

Press **PITCH BEND +/-**.

PITCH BEND + Playback speed is increased while the button is being pressed.

PITCH BEND - Playback speed is decreased while the button is being pressed.

During playback, turn the jog wheel

If turned in the **FWD** direction, playback speed is increased.

If turned in the **RVS** direction, playback speed is decreased.



Manual loop playback

Set the starting point (A point) and end point (B point), and playback is repeated seamlessly between the two points.

Two loop ranges (A1 and B1 points, A2 and B2 points) can be set.

1 During playback or pause, press A1 at the position where you want to start playback.

The A indicator lights in the display, and playback starts from the set A point.

2 Press B at the position where you want to end playback.

The B indicator lights in the display, and manual loop playback repeats between A and B.



A2 and B2 points can be set in the same way.

In normal playback or pause, press EXIT/RELOOP.

- If the current playback position is before the A-B positions,**
 - “Exit Off” is shown in the display.
 - When the playback position passes the A point (start point) manual loop playback starts automatically.
- If the current playback position is after the A-B positions,**
 - Moves the playback point to the A point (start point) and manual loop playback starts.




If the **EXIT/RELOOP** is pressed before the playback point passes the A point (start point), “Exit Loop” is shown in the display, and normal playback resumes.

 Exiting auto loop playback**During auto loop playback, press EXIT/RELOOP.**

Auto loop playback exits, and normal playback resumes.

 Stutter

Stutter effect can be used at A1 and A2 points set as a loop start point.

1 Press **FLIP** repeatedly until “STR A1” is shown in the display.
 changes to **A1 B**, and the player enters the stutter mode.

2 Hold down **A1** to stutter A1 point.

3 To return to the loop play mode, press **FLIP** repeatedly until “H/S A1” is shown in the display.
 A2 point can be stuttered in the same way.

 Changing the end point of manual loop playback

During manual loop playback or pause, press B at the position where you want to end playback.

- The B point (end point) is moved to the position where B was pressed.

 Exiting manual loop playback

During manual loop playback, press EXIT/RELOOP.

“Exit Loop” is shown in the display, and normal playback resumes.

 Returning to manual loop playback

In normal playback, press EXIT/RELOOP.

The playback position moves to the A point (start point) and manual loop playback starts.

 Adjusting loop points

1 During manual loop playback, press **A1**.

 
2 Turn the jog wheel while listening to the playback sound, and move to the position where you want to end playback.



- It can be adjusted in 1 frame units.

[Adjustable range]

It can be adjusted from 1 frame after the A point (start point) to the end of the track.



- * Adjustment range for B point

3 Press **B** at the position where you want to end playback.
 B point (end point) adjustment is complete.



B2 point for A2 point can be adjusted in the same way.

 Clear the A1/A2 point

While pressing the **FLIP** press the **A1** or **A2** to clear the corresponding A and B points.


Press FLIP/B TRIM for more than 1 sec to clear both A1 and A2 points at once.

Adjusting the track end time **Brake**

1 Press **BRAKE**.
 The BRAKE LED lights.

2 Press **PLAY/PAUSE** during playback.
 The ending time of the track is delayed, and the characteristic like an analog player is obtained.

See the illustration on the previous page for details of the buttons used for the operations on this page.

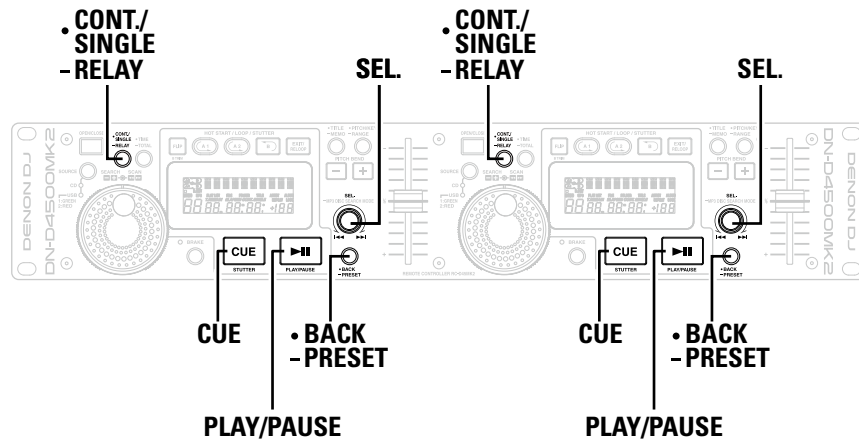

Adjusting brake time

The brake time can be adjust using Preset function.

1 Hold down **•BACK –PRESET**.

2 Press **SEL.** repeatedly to select the brake time.



3 Press **•BACK –PRESET** to enter.



The larger the step number is, the longer the brake time is.

Relay play

What is relay play?

Playback relays between deck 1 and deck 2.

❑ CD playback

A disc loaded in the next deck will be played after playback of the current track when the playback modes of deck 1 and deck 2 are set to **SINGLE**, or after playback of all tracks in the current disc when those modes are set to **CONT**.

❑ USB playback

Files in the folder of the next deck will be played after playback of the current file when the playback modes of deck 1 and deck 2 are set to **SINGLE**, or after playback of all files in the current folder when those modes are set to **CONT**.

- If both a CD (track) and USB memory device (file) are loaded in each deck, relay playback between the CD and the USB memory device is possible.

Performing relay playback

1 Press **CONT./SINGLE** on the first deck to select the playback mode, **SINGLE** or **CONT.**, then hold down **CONT./SINGLE** to select the relay mode.

The **SINGLE** or **CONT.** indicator flashes in the display. Turn **SEL.** to select a track or file.

2 Press **CONT./SINGLE** on the second deck to select the playback mode, **SINGLE** or **CONT.**

The **SINGLE** or **CONT.** indicator flashes in the display. Turn **SEL.** to select a track or file.

3 Press **PLAY/PAUSE** of the first deck.

Relay playback starts.

4 To stop the relay playback, press **CUE** on the deck currently played.

*If not stopped, relay playback is repeated.

Power on play

This mode enables playback to start automatically from the first track of the loaded CD when powering on.

1 Load a **CD** into the deck.

2 Hold down **–PRESET**.

3 Turn **SEL.** to select “Power Play”.

4 Press **SEL.** to display “P.PlayON”.

5 Press **–PRESET**.


“Now Saving” is shown.

Playback automatically starts from the first track when powering on.

Power on play can be set on CD drives 1 and 2, respectively.

Memo function

Details set in advance can be stored as memo data on a USB memory device or HDD or Flash Memory. When you need to configure settings in a short space of time, settings can be configured automatically

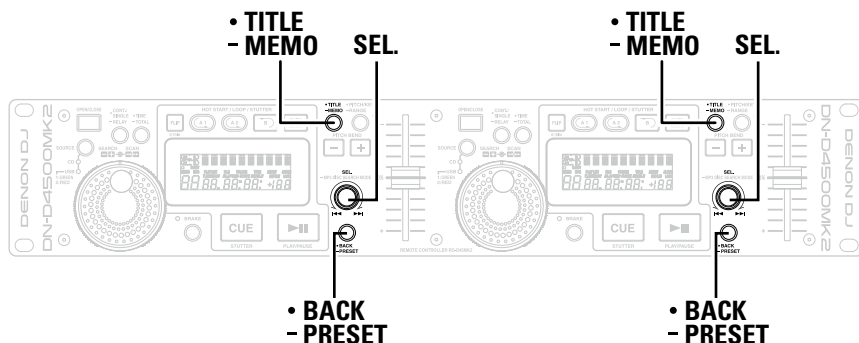

Details that can be saved as memo data

- Cue point
- Manual loop point (A1/B1, A2, B2 point)
- Hot start or Stutter
- Playback speed
- Pitch ON or OFF
- Key adjust ON or OFF
- Pitch range

Memo settings

Memo Set

Save the setting details to memo data.

1 Set this unit with memo data.

2 Press **TITLE - MEMO**.
"Memo Set?" is shown in the display.

3 Press **SEL**.
"Complete!" is shown in the display.



- When "MEMO" is shown in the display, memo data has already been saved. Clear the saved memo data, and redo the setting.
- If memo data cannot be saved, check the remaining capacity of the USB memory device or HDD. It may not be possible to save memo data if there is not enough spare memory.
- If the USB memory device or HDD is equipped with a security function, check that the security is disabled.
- 1000 is the maximum possible number of tracks that can be stored to memory. However, to simplify the MEMO operations, the memory system manages each 200 MEMO data groups as a minimum unit (the total 1000 memory capacity divided into 5 memory data groups). When you want to clear just one MEMO data in the 1 MEMO CLEAR mode (page 24), the unit will erase the memo information but not the internal memo allocation number. Accordingly, depending on conditions, the number of tracks that can be stored in the memory may be fewer than 1000. Once you reached 1000 stored points, you will see a message that says "MEMO FULL!". At this time you will need to "delete" old data to make room for new memo points. Therefore the oldest 200 memo points in that group will be deleted and become available.
- The MEMO indicator on the display lights up when a track for which data is stored in the memory is selected.

□ Memo Call

This function calls saved memo data.

1 Select the track that is stored with the memo data that you want to call.

- When a track that has memo data stored is selected, the MEMO indicator lights in the display.

2 Press TITLE - MEMO.
"Memo Call?" is shown in the display.**3 Press SEL.**

When the playback speed is called from the memo data, the PITCH indicator flashes, and the pitch may be locked.

This is because the actual playback speed and playback speed selected by the pitch slider differ. In order to cancel the pitch lock, adjust the pitch slider to the same pitch as the called memo data.

□ Memo Clear

This function clears saved memo data.

1 Select the track that is stored with the memo data that you want to clear.

- When a track that has memo data stored is selected, the MEMO indicator lights in the display.

2 Press TITLE - MEMO.
"Memo Call?" is shown in the display.**3 Turn SEL. to select "Memo Clr?".****4 Press SEL.**
"Clear OK" is shown in the display.**5 Press SEL.**
The MEMO indicator in the display goes out, and the memo data is cleared.**□ Disc tray auto close**

Disc tray will automatically close after 30 seconds have elapsed for the disc tray auto close mode. (Preset item 3)

□ End of message

During playback, the Play Position indicators start flashing when the remaining playing time to the end of the track (set in the preset mode) is reached, indicating that the end of the track is near. (Preset item 6)

Preset function

Preset menu map

Setting items	Description
Auto Cue	Sets the detection level of the sound start point when ignoring the soundless part at the head of a track at playback. (A.CUE ON* / A.CUE OFF)
Brake Time	Setting the track end time (STEP 1 / STEP 2* / STEP 3 / STEP 4)
Auto Close	Time for automatically closing disc holder. (Close OFF / Close 10s / Close 30s* / Close 1min)
Jump Time	Select the jump time of QuickJump. (Jump10sec* / Jump20sec / Jump30sec / Jump1min)
P. Range	Select the playing pitch range when the power is turned on. (4% Range / 10% Range* / 16% Range / 24% Range)
EOM Time	Sets the notification for the time remaining until the end of the track being played back. (EOM OFF / EOM 10 sec* / EOM 15 sec / EOM 20 sec / EOM 30sec / EOM 60 sec / EOM 90 sec)
Fader Mode	Switches the operation for fader start for the mixer connected to this unit. Select 1-line (TS) type cable (Play and Pause). Select 2-line (TRS) type cable (CUE and Play) (Play / CUE* / Play Pause)
Power Play	Switches power on playback on or off. Playback starts when the power is turned on if a disc is loaded. (P. Play ON / P. Play OFF*)
Pitch	Select the pitch mode when the power is turned on. (Pitch ON* / Key. AdjON (KEY ADJUST ON) / Pitch OFF)
Play Mode	Select the play mode when the power is turned on. (Single / Cont. / Play Lock*)
Time Mode	Select the time mode when the power is turned on. (Elapsed* / Remain)
Bpm Disp	Select the BPM display (Disp ON* / Disp OFF)
Relay Mode	Switches relay playback on or off. (Relay ON / Relay OFF*)
Relay Time	Select the crossover time the currently playing track when the opposite drive start to play with the Relay Play function. (Relay 0sec* / Relay 1sec / Relay 2sec / Relay 3sec)

Setting items	Description
MemoClear	Memo Clear (MEMO ALL CLEAR) NOTE: This PRESET item can be only performed in CD1 (left side) of the remote controller. Clear all MEMO data in the non-volatile memory. ① To clear all MEMO data, press the SEL. down. "Clear OK?" flashes on the character display. ② Press the TRACK SEL. down again and select "OK" to execute clearing all MEMO data. "Memo Clear" is displayed on the character display while clearing. ③ Once clearing is completed, "Complete!" is displayed.
Version No	The DN-D4500MK2's software version is displayed. (SYSTEM/DSP/SER/RC)
Preset Int	Set all the preset data back to the factory defaults. ① To clear the PRESET data, press the TRACK SEL. down. "Initial OK?" flashes on the character display. ② Press the SEL. down. again and select "OK" to start clear the preset data. "Preset Int" is displayed on the character display while data clearing. ③ Once clearing is completed, "Complete!" is displayed.



The "*" mark next to the data indicates the default value.

How to adjust the various Preset settings

1 Hold down •BACK –PRESET.
"PresetMode" is displayed.

2 Turn SEL. to select the setting item.
Press **SEL.** to enter the selected item.

3 Press •BACK –PRESET.
"Now Saving" is displayed.
Configuration is complete.

Troubleshooting

If a problem should arise, first check the following:

1. Are the connections correct?
2. Is the set being operated as described in this owner's manual?
3. Is the external device (DJ mixer, player or effects processor) operating correctly?

If this unit does not operate properly, check the items listed in the table below.

If the symptom is not covered on the check list, contact your dealer or service centers.

Service centers are listed at <http://www.d-mpro.com> or <http://www.denondj.com>.

Symptom	Cause/Solution
Cannot eject disc holder.	<ul style="list-style-type: none"> • Check that the power is on. • Discs cannot be ejected during playback. Stop playback before ejecting the disc.
"Disc Error" is displayed.	<ul style="list-style-type: none"> • The disc may be dirty or scratched. Either clean the dirt from the disc, or replace with another disc.
Power does not turn on.	<ul style="list-style-type: none"> • Check that the plug is inserted correctly into the wall socket, and that the power cord is inserted into this unit.
This unit does not operate properly, or there is no sound.	<ul style="list-style-type: none"> • Check the connections for all devices. • Check the file sampling frequency. Only files with a sampling frequency of 44.1 kHz can be played on this unit.
There is no sound. Or the sound is distorted.	<ul style="list-style-type: none"> • Check the mixer connections. • The mixer adjustments or switching may be unsuitable. Adjust the knobs on the mixer.
There is no sound. Or the sound is too quiet.	<ul style="list-style-type: none"> • Check the connections for all devices. • Switch the input source switching button to the device that is currently playing.
"Fail" is displayed.	<ul style="list-style-type: none"> • If the USB memory device or HDD is equipped with a security function, check that the security is disabled. • Memo data cannot be saved on a USB memory device or HDD formatted in HFS+ format. Use FAT16 or FAT32 format.
A CD-R or CD-RW disc cannot be played.	<ul style="list-style-type: none"> • The disc has not been finalized. Finalize the disc then play it. • The recording conditions and/or the quality of the disc itself are poor. Use a properly recorded disc.

Symptom	Cause/Solution
Data stored in a USB memory device cannot be displayed (read).	<ul style="list-style-type: none"> • Has the unit initialized the USB memory device with applicable formats? (FAT 16/FAT 32) • Are you using a USB hub? If so, directly connect the USB memory device to a USB port on the front panel of the unit. • Are you using a USB extension cable? If so, directly connect the USB memory device to the USB port on the front panel of the unit. • Are the USB memory device contents applicable to this unit? Use the "Files" menu to confirm whether the contents are applicable to the unit. • When a USB memory device of 192 MB or less is formatted with FAT 32, this unit may not be able to read it. If that is the case, format it with FAT 16. • This unit does not support a USB memory device containing encrypted data.
The USB memory device is not recognized.	<ul style="list-style-type: none"> • Some USB memory devices cannot be operated by the power supplied from this unit. The unit supplies 5 V/1 A to a USB memory device. Use a USB memory device that is compatible with the specifications of this unit. • Check if the USB memory device is firmly connected to the USB port.

Specifications

□ General

Type:	Compact disc player
Disc type:	Standard compact disc (12 cm disc), CD-TEXT CD-R, CD-RW discs
NOTE	
Finalized CD-R or CD-RW discs can be played back in this unit. However, according to recording quality, some CD-R/RW discs cannot be played.	
Installation:	19-inch rack mountable Player unit: 2U Remote control unit: 2U
Power supply:	U.S.A., Canada and Taiwan R.O.C. models: 120 V AC $\pm 10\%$, 60 Hz European models: 230 V AC $\pm 10\%$, 50/60 Hz
Power consumption:	25 W
Environmental conditions:	Operational temperature: 5 to 35°C (41 to 95°F) Operational humidity: 25 to 85% (no condensation) Storage temperature: -20 to 60°C (-4 to 140°F)

□ Audio section

Main out, Monitor out	24-bit (internal DSP Process)
Quantization:	
Sampling frequency:	44.1 kHz at normal pitch
Oversampling rate:	8 times
Total harmonic distortion:	0.01% or less
Signal to noise ratio:	90 dB or more
Channel separation:	85 dB or more
Frequency response:	20 to 20,000 Hz
Analog output	
Output level:	2.0 V r.m.s.
Load impedance:	10 k Ω or more
Digital output	
Signal format:	IEC958-Type2
Output level:	0.5 Vp-p 75 Ω

□ Functions

Instant start:	Within 20 msec.
Variable pitch:	$\pm 4\%$ (0.1% pitch), $\pm 10\%$ (0.1% pitch), $\pm 16\%$ (0.1% pitch) $\pm 24\%$ (1.0% pitch), $\pm 50\%$ (1.0% pitch), $\pm 100\%$ (1.0% pitch)
Pitch bend:	Pitch range $\pm 4\%$ - $\pm 24\%$: $\pm 32\%$ Pitch range $\pm 50\%$, $\pm 100\%$: $\pm 99\%$
Search precision:	1/75 sec. (1 subcode frame)
Max. scan speed:	Over 20 times normal speed
Max. MEMO memory steps:	1000 steps

* Specifications and design are subject to change without notice for purpose of improvement.


Service centers are listed at <http://www.d-mpro.com> or <http://www.denondj.com>.

Index

A		H		R	
Accessories	2	Hot Start	3	Rear panel	10
Auto Close	25			Relay Mode	25
Auto Cue	25	J		Relay play	22
Auto loop playback	20	Jump Time	25	Relay Time	25
B		L		S	
Bpm Disp	25	Loop point	20	Stutter	20
Brake	20			T	
Brake Time	25	M		Time Mode	25
C		Manual loop playback	19	V	
Cable		Memo Call	24	Version No	25
Coaxial cable	11	MemoClear	24, 25		
RCA cable	11	Memo function	23		
Remote control connection cable	11	Memo Set	23		
Stereo mini cable	11	P			
Connection		Pause	17		
HDD	15	Pitch	25		
Power cord	12	Pitch bend function	19		
USB memory device	15, 16	Playback	17		
Cue point	18	CD	13		
D		CD-R	14		
Display	9	CD-ROM	14		
E		CD-RW	14		
EOM Time	25	USB memory device	15		
F		Playback mode	17		
Fader Mode	25	Playback speed	19		
Fast forward/Rewind	18	Play Mode	25		
Finalization	4	Power on/off	13		
Front panel	6	Power on play	22		
		Power Play	25		
		P. Range	25		
		Preset Int	25		
		Preset settings	25		

Dimensions

Unit: in. (mm)

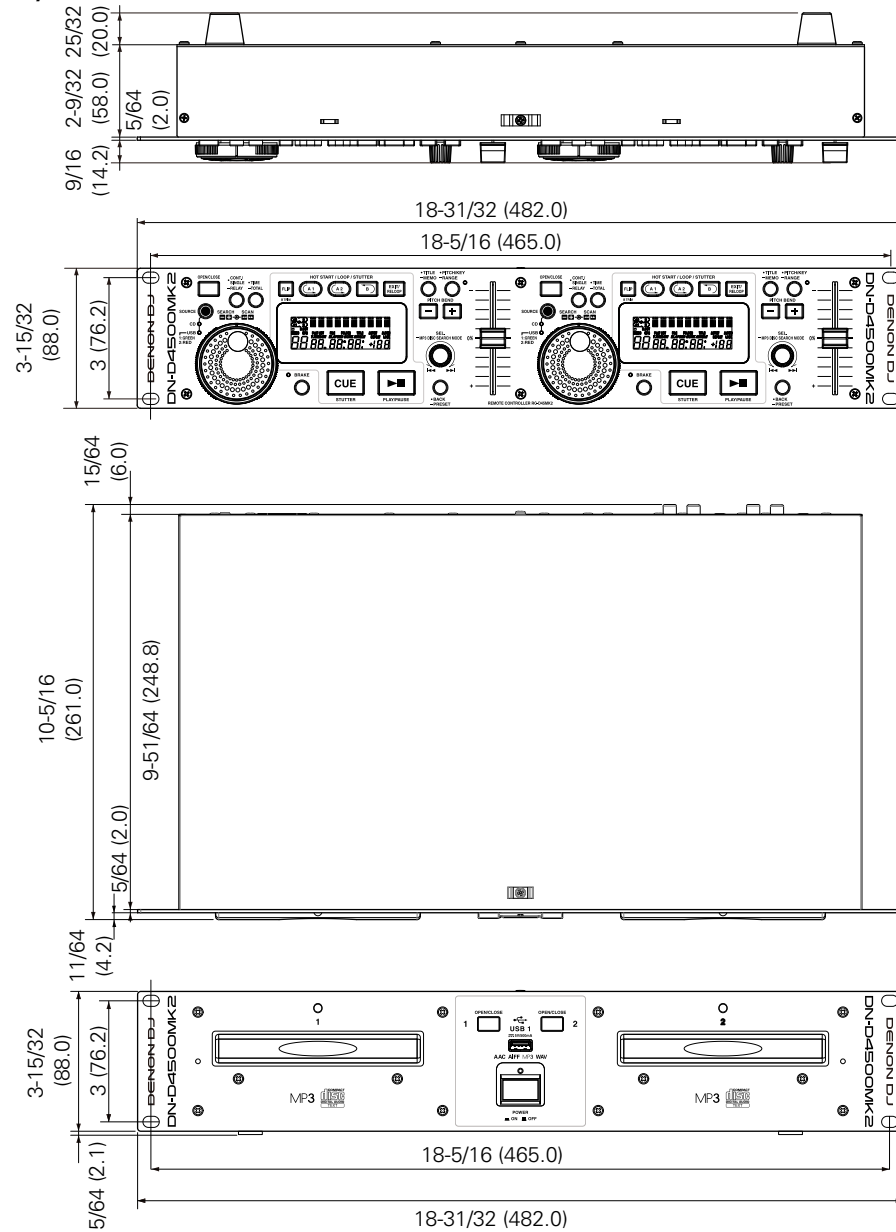

Weight: (Player unit: 11 lbs (5.0 kg), Remote control unit: 4 lbs 2 oz (1.9 kg))

D&M Holdings Inc.