

Roland

E-80

MUSIC WORKSTATION



Addendum

New functions for the E-80

OS version 1.06 of the E-80 introduces the following enhancements and additions that are not mentioned in the current version of the owner's manual.

Kick & Bass Booster

The E-80's Arranger allows you to emphasize the low frequencies of the kick drum and bass sounds used in the selected Music Style if you think they need a little more punch. This setting applies to the entire E-80.

- Press the **[MENU]** button.
The display changes to:



- Press the **[ARRANGER SETTING]** field, followed by the **[ARRANGER OPTIONS]** field.



- Press the desired KICK & BASS BOOSTER field to make your choice.

OFF	No change to the bass response of the kick drum and bass sounds (MIDI channels 10 and 2).
MEDIUM	Slight boost of the low frequencies.
HIGH	Strong boost of the low frequencies.

Note: This setting only applies to the Arranger. It has no effect on the Keyboard parts.

- Press the **[EXIT]** button to return to the main page.

Selectively loading User Program settings (User Program Hold)

A new button icon has been added to the list of settings that need not change when you select different User Programs:

- Press the **[LIST]** button and the **[HOLD SETTINGS]** field.

—or—

Press and hold the USER PROGRAM **[HOLD]** button.
The display changes to:



- Press the fields of the settings you do *not* want to recall.

See page 129 in the owner's manual for a discussion of the functions already available in previous software versions. The new parameter is called:

- **Pedals**—Press this field to ignore the settings of the HOLD FOOTSWITCH (see p. 76) and FOOT PEDAL (see p. 78) assignments.

Note: Any change to the "HOLD SETTING" button icons is only memorized if you select a different page (by pressing the **[Back]** field, for instance) before switching the E-80 off. If you change these settings and then immediately switch off the E-80, the "HOLD SETTING" selections are not memorized.

Ignoring certain One Touch settings (Hold)

A new button icon has been added to the One Touch settings that can be filtered.

- Press and hold a ONE TOUCH **1**~**4** button.
The display changes to:



- Press the fields corresponding to the settings that must not be loaded when you select another One Touch memory or Music Style.

See page 87 in the owner's manual for a discussion of the functions already available in previous software versions. The new parameter is called:

- **PEDALS**—Press this field to ignore the settings of the HOLD FOOTSWITCH (see p. 76) and FOOT PEDAL (see p. 78) assignments.

Note: Any change to the "HOLD" button icons is only memorized if you select a different page (by pressing the **Back** field, for instance) before switching the E-80 off. If you change these settings and then immediately switch off the E-80, the "HOLD" selections are not memorized.

Three new Drum Sets

The new software version provides three additional Drum Sets (for a total of 57). These are called "**IndoMix 1**" (CC00= 0/CC32= 4/PC= 101), "**IndoMix 2**" (CC00= 0/CC32= 4/PC= 102) and "**IndoMix 3**" (CC00= 0/CC32= 4/PC= 103).

See the updated "Parameter Reference" booklet for the sounds assigned to each key.