



## Electro Swarm



**CAUTION!** Please read and understand these instructions before installing or operating this unit.

### SPECIFICATIONS:

<b>Model:</b>	Electro Swarm
<b>Supply Voltage:</b>	90V ~ 240V 60Hz/50Hz
<b>LEDs:</b>	6 x 1W (2 Red, 2 Green, & 2 Blue)
<b>Power Consumption:</b>	15W
<b>Beam Angle:</b>	90 Degrees
<b>Weight:</b>	5.3 lbs./ 2.5kgs
<b>Size:</b>	14.5"(L) x 10.6"(H) x 10.6"(W)
<b>Fuse:</b>	2 Amp
<b>Working Position:</b>	Any Safe position
<b>Duty Cycle:</b>	None
<b>Colors:</b>	Multiple Colored Lenses
<b>Warranty:</b>	1 Year

**Caution!** Never open unit when in use.

### Operating Instructions:

The Electro Swarm is a powerful effect for clubs and dj's. The Electro Swarm creates a dramatic cluster of strobing, multi-colored beams. This unit features an internal microphone that allows the beams to be triggered by sound. The Electro Swarm is ready to be hung or set on the ground in a safe position. When mounting this unit to truss be sure to use a clamp. Plug the unit in to a standard wall outlet. After plugging the unit in, the fixture will react to the beat of the music via the sound active internal microphone. The unit has a sensitivity knob on the rear of the unit that makes more or less sensitive to sound. Turning the knob in clockwise direction will make the unit more sensitive to sound. The unit requires sound to activate the movement.

**Master-Slave Operation:** This function will allow you to link up to 16 units together and operate. The units will be sound activated. In Master-Slave operation one unit will act as the controlling unit and the others will react to the controlling unit. Any unit can act as a Master or as a Slave. See set up below.

1. Using standard XLR microphone cables, daisy chain your units together via the XLR connector on the rear of the units. Remember the Male XLR connector is the input and the Female XLR connector is the output. For longer cable runs we suggest a terminator at the last fixture.
2. The dipswitch settings for Master/Slave mode is as follows. On the Master unit flip dipswitch #1 and #2 to the "OFF" position. On the Slave unit set dipswitch #1 and #2 to the "ON" position.
3. Use the sensitivity knob on the rear of the master unit to make it more or less sensitive to sound.

**1 Year Limited Warranty:** Eliminator Lighting warranty is valid from the date of purchase. Our 1 year limited warranty covers manufacturing defects only. Serial number, place of purchase with dated valid receipt must be submitted at time of service. Eliminator Lighting warranty does not cover items or parts prone to wear and tear: lamps, leds, fuses, brushes and belts. Eliminator Lighting warranty is only valid with-in the United States.