



**CAUTION!** Please read and understand these instructions before installing or operating this unit.

# **SPECIFICATIONS:**

Model: LED Cloud

**Supply Voltage:** 100V ~ 240V 60Hz/50Hz

**LEDs**: 5 x 3W LEDs

**Power Consumption:** 27.5W

**Weight:** 4.4lbs./ 2kgs.

**Size:** 9.8" (L) x 7" (W) x 9.5" (H)

Fuse: 3 Amp

Working Position: Any Safe position

**Duty Cycle:** None **DMX Channels:** 4

Colors: RGBWA Warranty: 1 Year

> **Caution!** Never open unit when in use. Always disconnect main power before servcing. Remember to always replace with the exact same type fuse.

## Operating Instructions:

This unit is a 4 channel DMX intelligent LED unit. It can be run as a stand-alone or in a master-slave configuration. The unit has 3 operating modes; sound active mode, auto mode or DMX controlled. This unit has been tested at the factory, there is no assembly required. The unit is ready to be plugged in to a power outlet. To run the different operating modes, see the next page. To enhance the beams use this effect with a fog machine.

**Fuse Replacement:** Locate and remove the unit's power cord. Once the cord has been removed located the fuse holder located inside the power socket. Insert a flat-head screw driver into the power socket and gently pry out the fuse holder. Remove the bad fuse and replace with a new one. The fuse holder has a built-in socket for a spare fuse be sure not to confuse the spare fuse with active fuse.

#### Auto Run Mode:

- 1. Plug the fixture in and press the MODE button until "AU.XX" is displayed. "XX" represents the current set running speed.
- 2. Press ENTER and use the UP and DOWN buttons to adjust the running speed. The running speed can be adjusted between "AU.00" (slowest speed) to "AU.99" (fastest speed).

### Sound Active Mode:

In this mode the LED Cloud will react to sound.

- 1. Plug the fixture in and press the MODE button until "SU.XX" is displayed. "XX" represents the sound senstivity level.
- 2. Press ENTER and use the UP and DOWN buttons to adjust the sound sensitivity, the sensitivity can be adjusted between "SU.01" (least sensitive) to "SU.99" (most sensitive).

#### DMX Mode:

Operating through a DMX controller gives the user the freedom to create their own programs tailored to their own individual needs. The LED Mushroom has 3 DMX channels. See the chart on the next page for the DMX traits and values.

- 1. This function will allow you to control each individual fixture's traits with a standard DMX 512 controller.
- To run your fixture in DMX mode press the MODE button until "AXXX" is displayed. "XXX" represents the current displayed DMX address. Press ENTER and use the UP or DOWN buttons to find your desired DMX address.
- 3. After you have chosen your desired DMX address plug in the fixture via the XLR connections to any standard DMX controller.

## Master-Slave Configuration:

- 1. Daisy chain your units via the XLR connector on the rear of the unit. Use standard XLR data cables to link your units together. Remember that the Male XLR connector is the input and the Female XLR connector is the ouput. The first unit in the chain (master) will use the female XLR connector only. The last unit in the chain will use the male XLR connector only.
- 2. Connect the first "Slave" unit to the "Master."
- 3. Set the "Master" unit to your desired mode of operation. On the "Slave" unit, set the DMX address to "001". The "Slave" unit will now follow the "Master".

## **DMX TRAITS: 3 CHANNELS**

**CHANNEL 1: COLOR MACROS** 0 - 7 =**BLACKOUT** 8 - 15 = **RED** 16 - 23 = **GREEN** 24 - 31 = **BLUE** 32 - 39 = WHITE 40 - 47 = AMBER 48 - 55 = **RED & GREEN** 56 - 63 = **GREEN & BLUE** 64 - 71 = **BLUE & WHITE** 72 - 79 = WHITE & AMBER 80 - 87 = **RED & AMBER** 88 - 95 = **GREEN & AMBER** 96 - 103 = BLUE & AMBER 104 - 111 = RED & BLUE 112 - 119 = RED & WHITE 120 - 127 = GREEN & WHITE 128 - 135 = RED, GREEN, & BLUE 136 - 143 = GREEN, BLUE, & WHITE 144 - 151 = BLUE, WHITE, & AMBER

152 - 159 = RED. WHITE. & AMBER

CHANNEL 1: COLOR MACROS 160 - 167 = GREEN, WHITE, & AMBER 168 - 175 = RED, GREEN, & AMBER 176 - 183 = RED, GREEN, & WHITE 184 - 191 = RED. BLUE. & AMBER 192 - 199 = RED, BLUE, & WHITE 200 - 207 = GREEN, AMBER, & BLUE 208 - 215 = RED, GREEN, BLUE, & WHITE 216 - 223 = GREEN, BLUE, WHITE, & AMBER 224 - 231 = RED, GREEN, BLUE, & AMBER 232 - 239 = RED, GREEN, WHITE, & AMBER 240 - 247 = R/G/B/W/A248 - 255 = SOUND ACTIVE CHANNEL 2: STROBING/SOUND SENSITIVITY STROBING SLOW - FAST 0 - 255 = 0 - 255 =SOUND SENITIVITY ADJUSTMENT LEAST SENSITIVE - MOST SENSITIVE **CHANNEL 3: LED ROTATION** 

CHANNEL 3: LED ROTATION

0 - 255 = ROTATING SLOW - FAST

1 Year Limited Warranty: Eliminator Lighting warranty is valid from the date of purchase. Our 1 year limited warranty covers manufacturing defects only. Serial number, place of purchase with dated valid receipt must be submitted at time of service. Eliminator Lighting warranty does not cover items or parts prone to wear and tear: lamps, LEDs, fuses, brushes and belts. Eliminator Lighting warranty is only valid with-in the United States.