 


# SWITCHBOX.v2 Digital-DJ Manual


Step 1: Connect your DJ-Mixer to the Switchbox "Mixer" (use the incl. Multicore Cable)

Connect Phono 1 to "Phono 1" (left+right)  
 Connect Phono 2 to "Phono 2" (left+right)  
 Connect Line 1 to "Line 1" (left+right)  
 Connect Line 2 to "Line 2" (left+right)

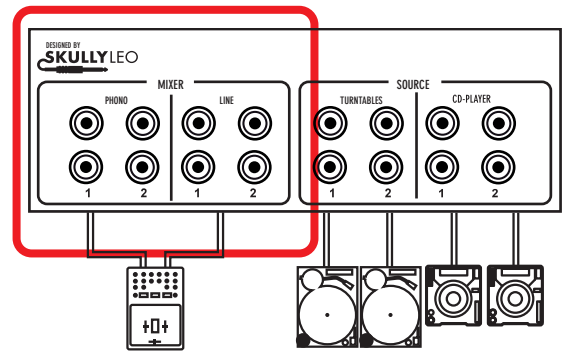



Step 2: Connect your Hardware to the Switchbox "Sources"

Connect your left Turntable to "Turntable 1"  
 Connect your right Turntable to "Turntable 2"  
 Connect your left CD-player to "CD-player 1"  
 Connect your right CD-player to "CD-player 2"

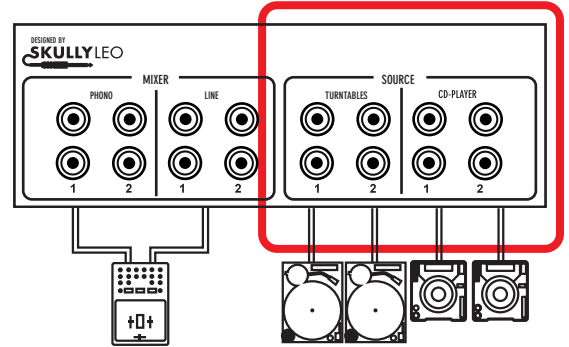

Step 3: Connect your Interface/Soundcard to Switchbox "Interface A" or "Interface B"

Pls. Choose your model in the Interface list below and follow the wiring instructions

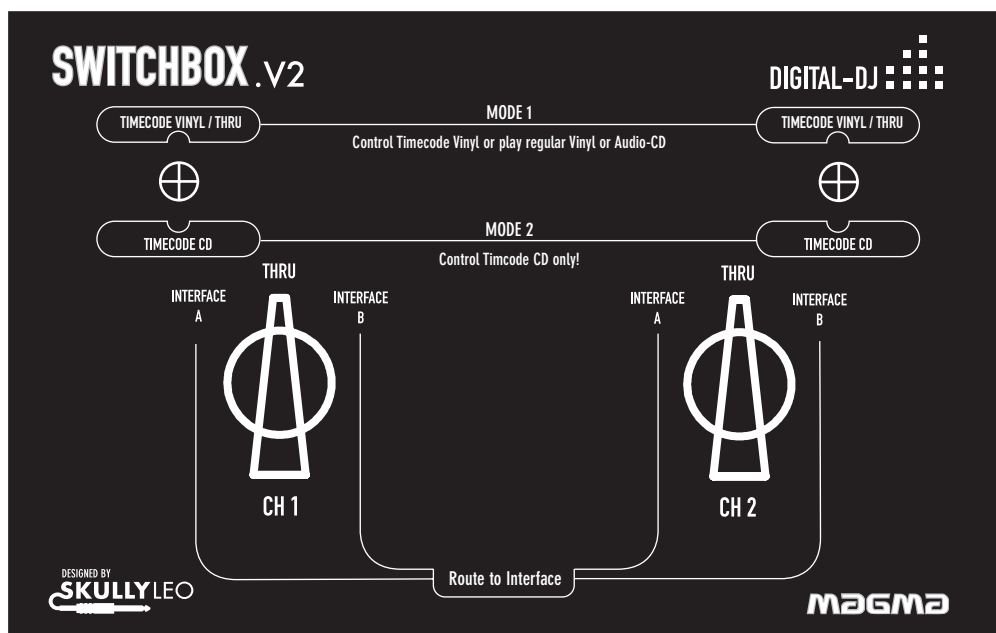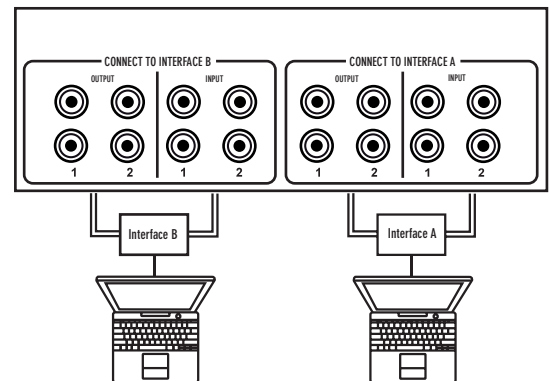

Step 4: Select the preferred Timecode Mode

If you want to play regular Vinyl or audio-CDs select Mode1 and THRU

If you want to control your music with Timecode-Records select Mode 1 and Interface A or B

If you want to control your music with Timecode-CDs select Mode 2 and Interface A or B

**ATTENTION! IMPORTANT NOTE:** If you want to play regular Audio-CDs from the CD-player, select THRU and always stay in Timecode Vinyl/THRU Mode! Never use THRU and Timecode CD mode together as this mode is only to control the Timecode signal with CD-players.

# SWITCHBOX.v2 Digital-DJ Manual

## How to connect your Audio-Interface to the Switchbox:

### Rane SL1\*

### Switchbox "Interface A/B"

Line 1	➡	Input 1
Line 2	➡	Input 2
Input 1	➡	Output 1
Input 2	➡	Output 2

\*Note: Thru1 and Thru2 of the SL1 Interface must not be wired!

### Rane SL3

### Switchbox "Interface A/B"

Output 3/4 left deck	➡	Input 1
Output 5/6 right deck	➡	Input 2
Input 3/4 left deck	➡	Output 1
Input 5/6 left deck	➡	Output 2

### NI Audio 8

### Switchbox "Interface A/B"

Out 1/2	➡	Input 1
Out 3/4	➡	Input 2
In 1/2	➡	Output 1
In 1/2	➡	Output 2

### Numark Vinyl Control

### Switchbox "Interface A/B"

Output 1	➡	Input 1
Output 2	➡	Input 2
Input 1	➡	Output 1
Input 2	➡	Output 2

### Mixvibes UMIK-44

### Switchbox "Interface A/B"

Output 1	➡	Input 1
Output 2	➡	Input 2
Input 1	➡	Output 1
Input 2	➡	Output 2

### Mixvibes U46MK2

### Switchbox "Interface A/B"

Output 1/2	➡	Input 1
Output 3/4	➡	Input 2
Input 1/2	➡	Output 1
Input 3/4	➡	Output 2

### Reloop Spin 2+\*

### Switchbox "Interface A/B"

Out 1	➡	Input 1
Out 2	➡	Input 2
In 1	➡	Output 1
In 2	➡	Output 2

\*Note: Thru1 and Thru2 of the Spin 2+ Interface must not be wired!

### M-Audio Torq Connective Vinyl

### Switchbox "Interface A/B"

Output 1	➡	Input 1
Output 2	➡	Input 2
Input 1	➡	Output 1
Input 2	➡	Output 2

### Stanton Final Scratch

### Switchbox "Interface A/B"

Out 1	➡	Input 1
Out 2	➡	Input 2
In 1	➡	Output 1
In 2	➡	Output 2

\*Note: Thru1 and Thru2 of the Interface must not be wired!