

HOTONE

NANO LEGACY Series
Amplifier Head

Thunder Bass

Owner's Manual

THANK YOU FOR PURCHASING A HOTONE PRODUCT!

www.hotoneaudio.com



Front
Panel

Thunder Bass
HOTONE

- 1.INPUT: 1/4" mono jack to plug in your bass.
- 2.BASS: Controls the low frequency response.
- 3.MIDDLE: Controls the mid frequency response.
- 4.TREBLE: Controls the high frequency response.
- 5.GAIN: Controls the gain level.
- 6.VOLUME: Controls the output volume.

Rear
Panel



- 1 18V DC:
Plug in 18V DC adapter (center negative).
- 2 PHONES/LINE OUTPUT:
1/8" stereo jack, for using headphones or recording.
- 3 AUX IN:
1/8" stereo jack, for connecting an external music player.
- 4 FX LOOP SEND:
1/4" mono jack, connect to your effects input jack.
(The Effects Loop is a patch point between the pre-amp and power amp).
- 5 FX LOOP RETURN:
1/4" mono jack, connect to your effects output jack.
- 6 SPEAKER OUTPUT:
1/4" mono jack, connect to your cabinet (speaker 4-16 Ω).

NANO LEGACY Series Amplifier Head

Thunder Bass is a 5W Class AB Bass Amplifier Head

Features

- Sound inspired by the legendary Ampeg SVT*
- Extremely compact configuration for portability
- High quality tone with Volume and Gain controls
- 3 Band EQ controls for shaping your tone
- FX LOOP for using external effects
- Speaker out can automatically fit cabinets of different impedances (4-16 Ω)
- Headphone output jack is very convenient for practicing and recording
- Aux In jack can let you play with an external music player

*Ampeg SVT is an amplifier model of LOUD Technologies Inc. The mentioned manufacturer and product names are trademarks or registered trademarks of the respective owners. The trademarks were used merely to identify the sound character of this product.

Specifications

Power Output: 5 Watts
Dimensions: 128 mm(W) x 75 mm(D) x 59.5 mm(H)
Weight: 440 g

www.hotoneaudio.com