

MODE SELECT SWITCH:

ECHO 600 - Lo-Fi Echo from 30 - 666ms + Small Room Reverb

SUN MODE - Double Tracking (0-30ms) and Slapback Echo Up to 180MS
with Modulation + Small Room Reverb

ROOM - Small Room Reverb with Predelay, and Variable Filtering

TIME:

ECHO 600 - Controls Delay Time
from 30 - 666ms

SUN MODE - Controls Delay Time
from 0 - 180ms. *Typical Range for
Double Tracking is from Zero
Position to the First Notch*

ROOM - Controls Pre Delay Time

REVERB:

Controls Decay Time of the
reverb in all modes.

REGEN/MOD:


ECHO 600 - Controls Regen, or the
number of repeats, for the Delay.

SUN MODE - Controls Rate and Depth
of Modulation, turn right for
faster/deeper modulation

ROOM - Controls Reverb Tone, Applies
10db Cut or Boost at 1.1k to Reverb

MIX:

Controls the level of
delay/reverb or effected signal
in final output.

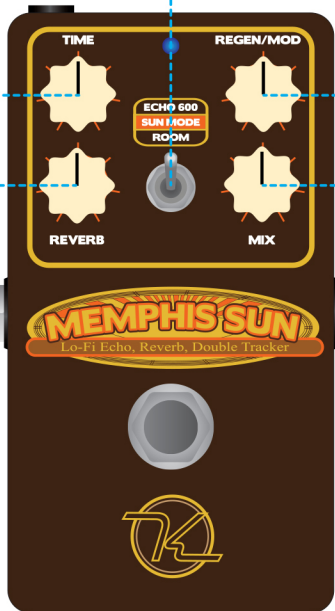

EFFECT TYPE:

Lo-Fi Echo, Reverb, Automatic
Double Tracker

Power Requirement:

9VDC Center Negative, 65mA+
Power Supply Required.

Input/Output:

Mono Instrument In,
Mono Output