



TONE:
Controls overall tone of the effect.
Clockwise for brighter sounds.

LEVEL:

Controls Output Level of pedal
+25dB of Boost

PHAT Switch:

Right for increased bass response
Left Fc=736Hz, Right Fc=66Hz

DRIVE:

DRIVE:

Clockwise for more
Distortion / Saturation
Turn off for Clean Boost

CLIPPING Switch:

Left for more saturation,
tighter distortion (Magical
Diodes)

Right for more dynamics and
increased output level
(Mythical Diodes)

LEVEL

DRIVE



PHAT

TONE

CLIPPING


OUT

OXBLOOD

IN

ON/OFF



OXBLOOD 
OVERDRIVE
EFFECT TYPE: Overdrive / Boost
Power Requirement: 9V Battery or 9VDC Center Negative 23mA+ Power Supply
Input/Output: Mono Instrument In, Mono Instrument Out