



Reloop Mixon 8 Pro Quick-Start Guide

Setup

Serato software

The Reelock Mixon 8 Pro is a “Serato DJ Pro hardware unlocked” device, meaning it works with Serato DJ Pro out of the box.

It is also a “paid upgrade to Serato DVS device”, meaning it requires the purchase & activation of a Serato DVS license, in order to be used with Serato DVS functionality.

Please ensure you have the latest version of Serato DJ Pro installed:

[Click here to download Serato DJ Pro](#)

Driver software & firmware


The Reelock Mixon 8 Pro is class compliant on macOS, but requires manufacturer specific drivers when used with Windows operating systems.

Regardless of your operating system, download and install the latest version of Serato DJ Pro, then connect your Reelock Mixon 8 Pro with a USB cable to your computer, and when prompted (on Windows operating systems), click the **Install Driver** pop-up.

It’s also strongly recommended that you install the latest firmware for your Reelock Mixon 8 Pro, where available.

You can download and install both the driver and firmware from [Reelock's website](#).


Overview

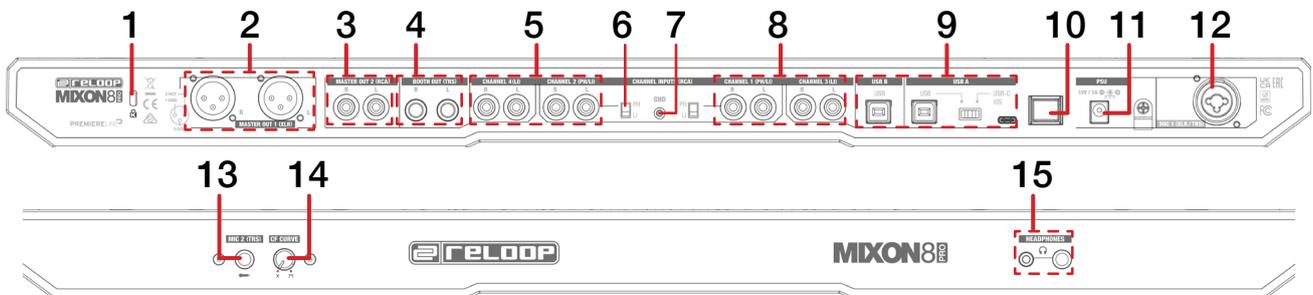

#	MIXON 8 PRO CONTROL	FUNCTION
1	KENSINGTON LOCK	Secure device
2	MASTER OUT 1	Connect output via XLR
3	MASTER OUT 2	Connect master output via RCA
4	BOOTH OUT	Connect booth output via TRS
5	CH 4 / CH 2	Connect line input device, or phono or line input device via RCA
6	LINE / PHONO	Toggle input for phono or line level device
7	GND	Connect grounding wire from phono input device
8	CH 1 / CH 3	Connect phono or line input device, or line input device via RCA

#	MIXON 8 PRO CONTROL	FUNCTION
9	USB B / A	Connect USB cable to USB B or USB A, and toggle USB A port between USB type B or USB type A cable
10	POWER	Press to turn device on/off
11	PSU	Connect supplied power cable
12	MIC 1	Connect microphone input via XLR or TRS
13	MIC 2	Connect microphone input via TRS
14	CF CURVE	Adjust crossfader contour
15	HEADPHONES (SECTION)	Connect headphone output via 3.5mm or 6.5mm port

Overview

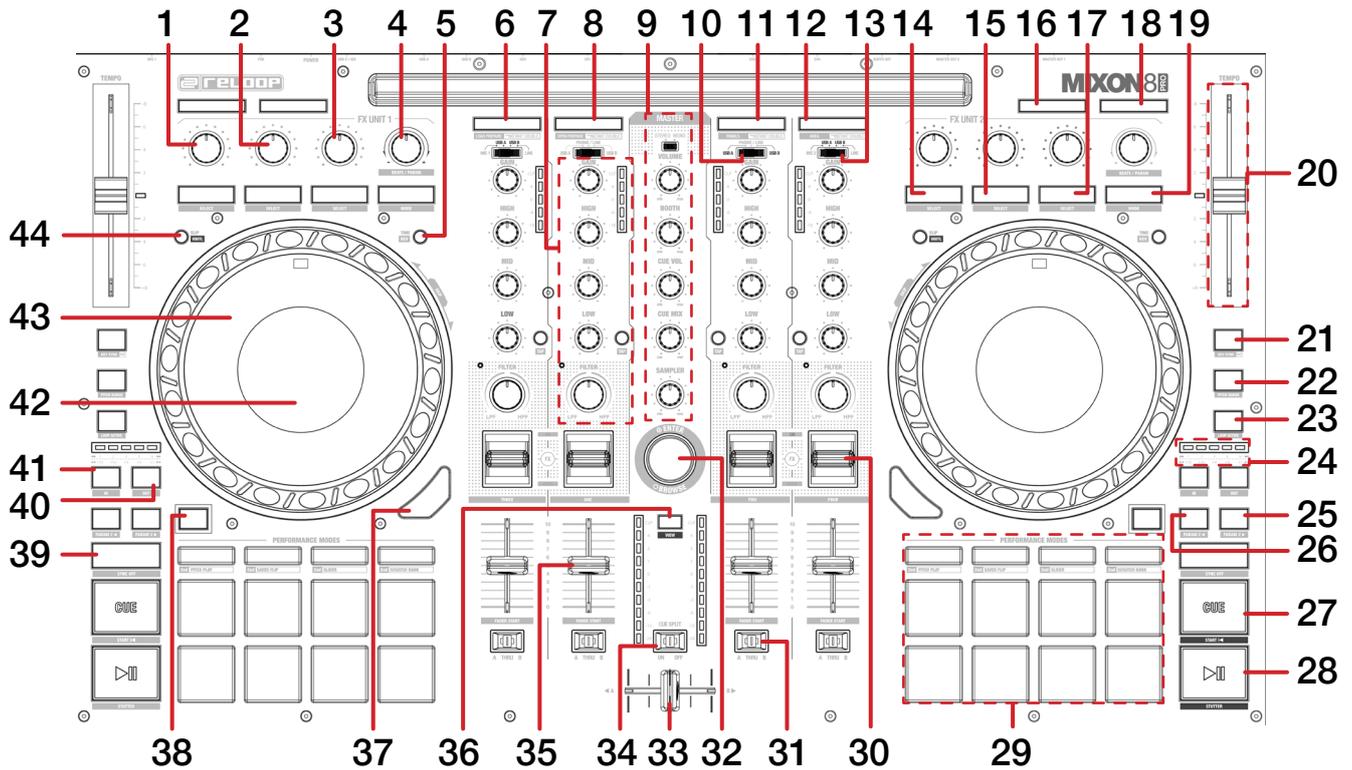


#	MIXON 8 PRO CONTROL	FUNCTION	SHIFT FUNCTION
1	FX LEVEL 1	Single FX mode: Adjust FX Depth for Parameter 1 Multi FX mode: Adjust FX Depth for Slot 1	Multi FX mode: Turn to cycle & select FX for Slot 1
2	FX LEVEL 2	Single FX mode: Adjust FX Depth Parameter 3 Multi FX mode: Adjust FX Depth for Slot 2	Multi FX mode: Turn to cycle & select Multi FX mode FX for Slot 2
3	FX LEVEL 3	Single FX mode: Adjust FX Depth Parameter 5 Multi FX mode: Adjust FX Depth for Slot 3	Multi FX mode: Turn to cycle & select Multi FX mode FX for Slot 3
4	BEATS MULTIPLIER	Turn to adjust FX beats multiplier value	-
5	TIME	Toggle between time elapsed or time remaining	Toggle Reverse playback
6	LOAD CHANNEL 3	Load selected track to deck 3. Double Press to Instant Double track on playing deck	Add selected track to Prepare crate
7	CHANNEL (SECTION)	Adjust gain, adjust EQ (High, Mid, Low), adjust channel Filter	Press Tap repeatedly to estimate & adjust Track BPM
8	LOAD CHANNEL 1	Load selected track to deck 1. Double Press to Instant Double track on playing deck	Open Prepare panel
9	MASTER (SECTION)	Toggle Stereo or Mono output, adjust Master, Booth, Cue & Sampler volumes, adjust Cue mix between Cue & Master	-
10	INPUT SELECTOR (CH1/CH2)	Choose between Phono or Line level source, or USB A or B	-
11	LOAD CHANNEL 2	Load selected track to deck 2. Double Press to Instant Double track on playing deck	Cycle through panels
12	LOAD CHANNEL 4	Load selected track to deck 4. Double Press to Instant Double track on playing deck	Cycle Files/Browse/Prepare/History areas
13	INPUT SELECTOR (CH3/CH4)	Choose between Mic 1 or Mic 2 source, or USB A or B	-
14	FX BUTTON 1	Single FX mode: Arm FX Slot 1 Multi FX mode: Arm FX Slot 1	Single FX mode: Press to cycle & select FX Slot 1

Overview

#	MIXON 8 PRO CONTROL	FUNCTION	SHIFT FUNCTION
15	FX BUTTON 2	Single FX mode: Toggle FX Parameter 2 Multi FX mode: Arm FX Slot 2	-
16	MIC1/MI2 ON	Toggle Mic 1 or Mic 2 on/off	-
17	FX BUTTON 3	Single FX mode: Toggle FX Parameter 4 Multi FX mode: Arm FX Slot 3	-
18	MIC1/MIC2 TALKOVER	Toggle Talkover for Mic 1 or Mic 2	-
19	TAP	Tap FX Tempo	Toggle FX mode (between Single & Multi)
20	TEMPO SLIDER	Adjust tempo/pitch	Ignore tempo/pitch adjustment
21	KEYLOCK	Toggle Key lock (or Pitch 'n Time DJ if activated). Long press to reset Key	Toggle Key Sync
22	SILENT CUE	Toggle Silent Cue (Press a Hot Cue on that deck to disable Silent Cue)	Toggle tempo range
23	AUTO LOOP	Toggle Autoloop on/off	Toggle Active Loop
24	LOOP LENGTH DISPLAY	Displays selected Loop length	-
25	PARAMETER (RIGHT)	Parameter 1 controls for use in Performance Pad modes	Parameter 2 controls for use in Performance Pad modes
26	PARAMETER (LEFT)	Parameter 1 controls for use in Performance Pad modes	Parameter 2 controls for use in Performance Pad modes
27	CUE	Cues from temp cue point / Set temp cue point	Load previous track
28	PLAY / PAUSE	Toggles Play/Pause on selected deck	Stutter play
29	PERFORMANCE PAD (SECTION)	SEE PERFORMANCE PADS FOR MORE INFORMATION	-
30	FX (PADDLE)	Push up to turn on and lock armed FX, or pull down to momentarily turn on armed FX	-
31	CROSSFADER ASSIGN	Assign each channel to crossfader side A, B, or THRU	-
32	ENTER / BROWSE	Turn to scroll library. Press in to cycle between Library and Crate area	Fast library scroll
33	CROSSFADER	Crossfade audio between channel 1-2	Crossfader start
34	CUE SPLIT	Toggle Split Cue on/off	-
35	CHANNEL FADER	Adjust channel volume (per channel)	Channel fader start (per channel)
36	BACK	Cycle back between Library & Crate area	Cycle View modes
37	DECK LAYER	Press to toggle specified deck layer as Active Deck (per side)	-
38	SHIFT	Shift modifier, which can be held while using another control for secondary SHIFT function	-
39	SYNC	Press to turn SYNC on (per deck)	Press to turn SYNC off (per deck)
40	X2	Double active Loop	Set Loop Out point / Edit Loop Out point
41	X1/2	Halve active Loop	Set Loop In point / Edit Loop In point
42	JOG WHEEL DISPLAY	Displays track & waveform information	-
43	JOG WHEEL	Turn jog to bend pitch, or control waveform within Serato DJ in vinyl mode	Fast track waveform scroll
44	SLIP	Toggle Slip mode	Toggle between vinyl and jog platter mode

Performance Pads

The Reloop Mixon 8 Pro comes with 8 performance pads, that can be used across 8 different performance pad modes, and 2 user pad modes, where all pads can be freely MIDI mapped.

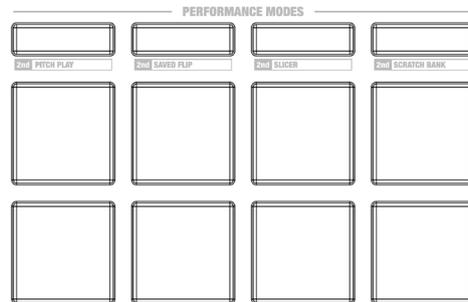

HOT CUE mode: Pads 1-8 trigger Serato DJ Pro Cue points, and if no Cue point is present on that slot/pad, pressing that pad will set a Cue point. Holding down the **SHIFT** button while pressing a populated pad will delete the Cue point from the respective pad/slot. If Serato Flip is activated: Parameter 1 left engages Flip Record, while right starts your Flip, and holding **SHIFT** means left is Flip Loop while right is Flip on/off.

LOOP ROLL mode: Holding Pads 1-8 activate a loop roll of varying sizes. Release the pad to exit the Loop Roll. Press Parameter 1 left & right controls to halve and double the Loop Roll.

SAVED LOOP mode: Pads 1-8 trigger Saved Loops, or save an Active Loop to an empty Loop Slot. Holding **SHIFT** while pressing a Pad will Re-loop the Saved Loop Slot. Parameter 1 Left & Right controls halve and double loop size respectively, while holding **SHIFT** will Loop Shift Left & Right.

SAMPLER mode: Press pads 1-8 in this mode to trigger samples loaded into the Serato DJ Pro Sampler. Holding **SHIFT** while pressing a Pad will stop a currently playing Sampler slot, or load a new sample to the Sampler slot if empty. Parameter 1 left & right cycles Sample banks forward and back, while holding **SHIFT** cycles the Sampler output.

PITCH PLAY mode: Press the **HOT CUE** mode button twice to enter **Pitch Play** mode. In this mode, pads 1-8 play Cue points over variable pitch ranges. See the 'Pitch Play' section for more information.

NOTE: Pitch Play mode requires that the Serato Pitch 'n' Time DJ expansion pack is activated & enabled.

SAVED FLIP mode: Press the **LOOP ROLL** mode button twice to enter **Saved Flip** mode. In this mode, pads 1-8 trigger stored Flips that you have previously made in the Flip slots. Holding **SHIFT** while pressing a pad toggles that Flip on/off, while Parameter 1 Left triggers Flip Record, Right Starts the Flip, and Parameter 2 Left Loops the Flip, while Right toggles the Flip on/off.

NOTE: Saved Flip mode requires that the Serato Flip expansion pack is activated & enabled.

SLICER mode: Press the **SAVED LOOP** pad mode button twice, to enter **Slicer** mode. In this mode a specified range (or domain) is divided into eight equal sections, and these eight sliced sections are assigned to the respective performance pads (1-8), and can be triggered by pressing them. The domain shifts as the track duration elapses. Use Parameter 1 Left & Right controls to decrease or increase the quantize size, or hold **SHIFT** to decrease or increase the domain size.

SCRATCH BANK mode: Press the **SAMPLER** pad mode button twice, to enter **Scratch Bank** mode. This mode allows you to assign files in your Serato DJ Pro library to a Pad. When Pads 1-8 are triggered, the corresponding file will be loaded to deck, allowing you to quickly load useful Scratch samples.

Click the Scratch Bank button  in the top tool bar of Serato DJ Pro to reveal the Scratch Bank Panel. In this panel you can load and eject files from the Scratch Banks, as well as choose the preferences you wish to load to the deck upon triggering the pad. These preferences include the start point of the file, Key Lock on/off and Repeat on/off. Clicking the  button in the top left corner of the panel will change between Advanced and Simple View.

Holding **SHIFT**, while pressing a Scratch Bank Pad that is already loaded to a virtual deck, will reload the previously loaded track to that virtual deck. Parameter 1 left & right cycle Scratch Banks forward & back respectively.

User mode 1: Press the **HOT CUE** mode button while holding **SHIFT** to enter User mode 1.

User mode 2: Press the **LOOP ROLL** mode button while holding **SHIFT** to enter User mode 2.

Pitch Play

Press the **HOT CUE** performance pad mode button twice on the Reelock Mixon 8 Pro to enter Pitch Play mode, where you can play Cue Points over variable pitch ranges.

There are 3 key ranges to choose from.

The following tables show pitched key ranges (in Semitones) while using the 8 performance pads in Pitch Play mode. To toggle between key ranges press the Parameter left & right buttons.

The root key pad (0) is always lit white, which will play the cue point at its regular pitch.

Pressing Parameter left & right while holding **SHIFT** will shift up or down a single semitone. In Pitch Play mode, pressing a pad will pitch the currently selected cue point up or down the following ranges:

Up Range: (Up 7 Semitones)

+4	+5	+6	+7
0	+1	+2	+3

Middle Range: (Up 3/Down 4 Semitones)

0	+1	+2	+3
-4	-3	-2	-1

Down Range: (Down 7 Semitones)

-3	-2	-1	0
-7	-6	-5	-4

When Pitch Play mode is first enabled, the middle range is selected. If a new track is loaded, key mode will default to middle range.

Pitch Play can only pitch one Cue point at a time. To change the selected Cue, hold the **SHIFT** button and press a performance pad where the cue point you want to select would be (as shown in the CUES performance pad mode). While holding **SHIFT**, press the corresponding performance pad for:

Cue 1	Cue 2	Cue 3	Cue 4
Cue 5	Cue 6	Cue 7	Cue 8

The selected cue point defaults to Cue Point 1 on track load, even if instant doubled. If a pad with no cue point is selected, then a new cue point will be created. Deleting a cue point however, is not possible in Pitch Play mode. Range is remembered if user goes to another pad mode, then back to key mode. If a new track is loaded, key mode will default to middle range.

NOTE: Pitch Play mode is available once the Pitch 'n Time DJ Expansion Pack has been activated in the Expansions window, under the My Account drop-down. Make sure "Enable Pitch 'n Time DJ" is then checked in the Expansion Pack tab of the SETUP screen.

You can find out more about Pitch 'n Time DJ, [here](#).

MIDI

The MIDI feature in Serato DJ Pro provides the ability to remap Serato DJ Pro software functions to your primary Serato controller, interface or mixer. You can also assign controls to a secondary MIDI controller to further enhance your performance.

[For more information on MIDI mapping with Serato DJ Pro click here](#)

To remap your supported Serato device, open the SETUP screen and click the MIDI tab. If your Serato device supports hardware remapping, it will show up in the MIDI Devices list at the top.

Select your connected device from the MIDI Devices list and make sure the “Allow Serato Hardware Remapping” option is checked.

Allow Serato Hardware Remapping

Once checked, the MIDI assign button at the top of the screen will become available for you to start remapping.

You can save, edit or delete MIDI presets in the MIDI tab of the SETUP screen. Clicking ‘Restore Defaults’ will erase any custom mappings for all connected devices and revert their functions back to default.

Beat Jump

To activate Beat Jump, open the Setup screen and under the DJ preferences tab turn on “Show Beat Jump Controls”.

Show Beat Jump Controls

When you close the Setup screen you will see Beat Jump controls underneath the existing Auto Loop values on each deck. Checking this box will turn on Beat Jump features in the deck area and let you control Beat Jump from on your supported Serato DJ Pro hardware.



When the Beat Jump option is enabled, performance pad modes AUTO LOOP or ROLL mode (where applicable) will use the bottom row of 4 pads (pads 5-8) as Beat Jump controls. This is designed to mirror the change in deck Auto Loop area (from 8 Auto Loop sizes to 4 Auto Loop sizes + Beat Jump controls).

DVS


The Reelock Mixon 8 Pro is 'paid upgrade to Serato DVS hardware' device, meaning it requires activation of a Serato DVS license to allow you to use turntables, media players or CD players to control Serato DJ Pro using NoiseMap™ Control Tone.

NOTE: Serato DVS is available once the Serato DVS expansion pack has been activated in the Expansions window, under the My Account drop-down. Make sure Vinyl / CDJ Control is then checked in the Expansion Packs tab of the Setup screen.

You can find out more and purchase DVS, by visiting our website [here](#).


Help

Show Tooltips

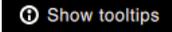
Click on the  button in the upper right-hand corner of Serato DJ Pro, then  to enable tooltips. Tool tips provide a handy way to learn the various features of Serato DJ Pro.

Move the mouse over a section of the screen to bring up a context sensitive tool tip.

Watch Tutorials

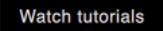Click on the  button in the upper right-hand corner of Serato DJ Pro, then  to launch your default internet browser and watch tutorials, to help you get familiar with Serato DJ Pro.

Get Support

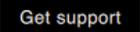Click on the  button in the upper right-hand corner of Serato DJ Pro, then  to launch your default internet browser and navigate to the Serato DJ Pro knowledge base, where you can find helpful articles and guides on Serato DJ Pro. Alternatively, type in the   box, with keywords, to search the Serato DJ Pro knowledge base for specific, related topics.