


SWITCH & CONTROL FUNCTION

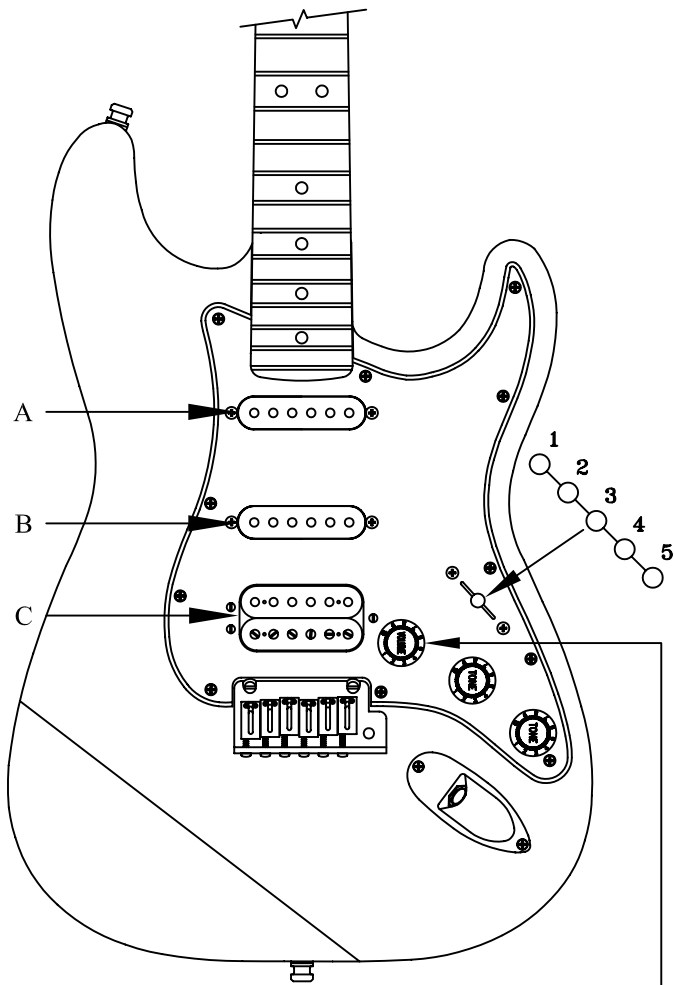

S-1 SWITCH VOLUME POT (UP & DOWN)

MV = MASTER VOLUME
 NT = NECK TONE
 BT = MID/BRIDGE TONE
 + = SERIES CONNECTION
 / = PARALLEL CONNECTION
 () = INDICATES PAIRED COILS

5 WAY SW POSITIONS, S-1 SWITCH UP					
1	2	3	4	5	POSITION
MV NT	MV NT+BT	MV BT	MV BT	MV BT	CONTROL
					← NECK (A)
					← MIDDLE (B)
					← BRIDGE (C)
	A/B		B/C		CONNECTION

5 WAY SW POSITIONS, S-1 SWITCH DOWN					
1	2	3	4	5	POSITION
MV NT	MV NT+BT	MV NT+BT	MV BT	MV BT	CONTROL
					← NECK (A)
					← MIDDLE (B)
					← BRIDGE (C)
A+B	(A+C)/B	(A+B)/C	B/C		CONNECTION

	PICKUP IS ON
	PICKUP IS OFF
<i>A</i>	PICKUP (NECK)
<i>B</i>	PICKUP (MIDDLE)
<i>C</i>	PICKUP (BRIDGE)