


SWITCH & CONTROL FUNCTION

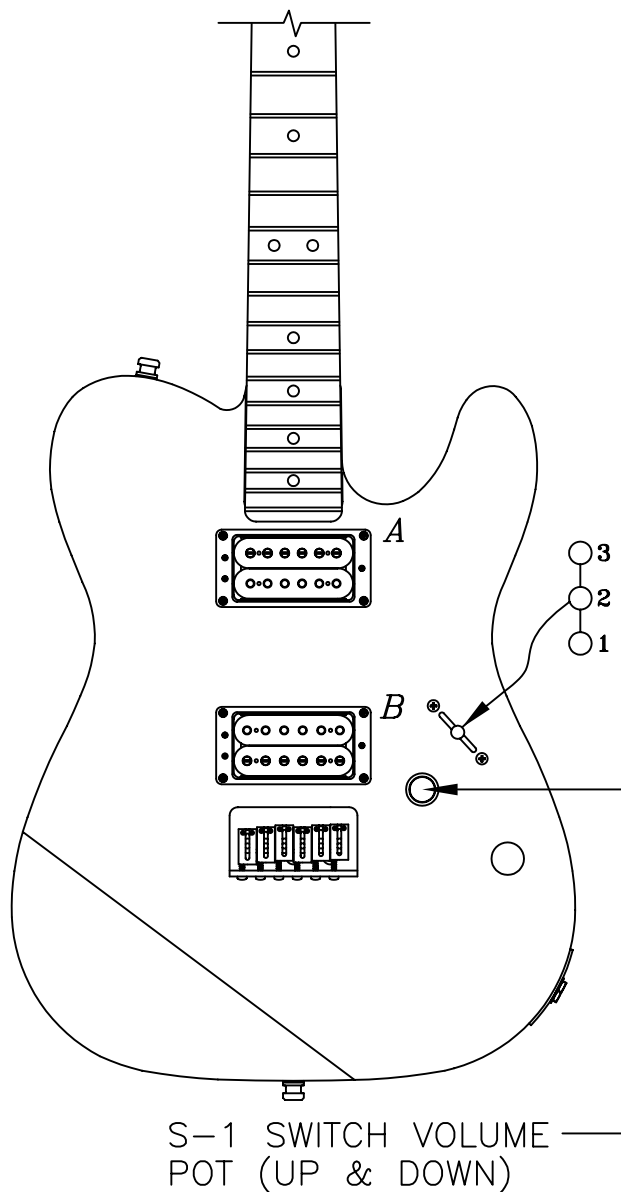

3 WAY SW, STEALTH SW UP			
			POSITION
MV+MT 1x2	MV+MT 1x2+3x4	MV+MT 3x4	CONTROL
			← NECK PICKUP (A) COILS 1 & 2
			← BRIDGE PICKUP (B) COILS 3 & 4

3 WAY SW, STEALTH SW DOWN			
			POSITION
MV+MT (2+CAP)x1	MV+MT 1+4	MV+MT (3+CAP)x4	CONTROL
			← NECK PICKUP (A) COILS 1 & 2
			← BRIDGE PICKUP (B) COILS 3 & 4

MV = MASTER VOLUME
 MT = MASTER TONE
 "x" = SERIES CONNECTION
 "+" = PARALLEL CONNECTION
 " () " = INDICATES PAIRED CONNECTION
 CAP = CAPACITOR

INDICATES POSITION
 OF 3 WAY SWITCH

	PICKUP IS ON
	PICKUP IS OFF
<i>A</i>	PICKUP (NECK)
<i>B</i>	PICKUP (BRIDGE)