


SWITCH & CONTROL FUNCTION

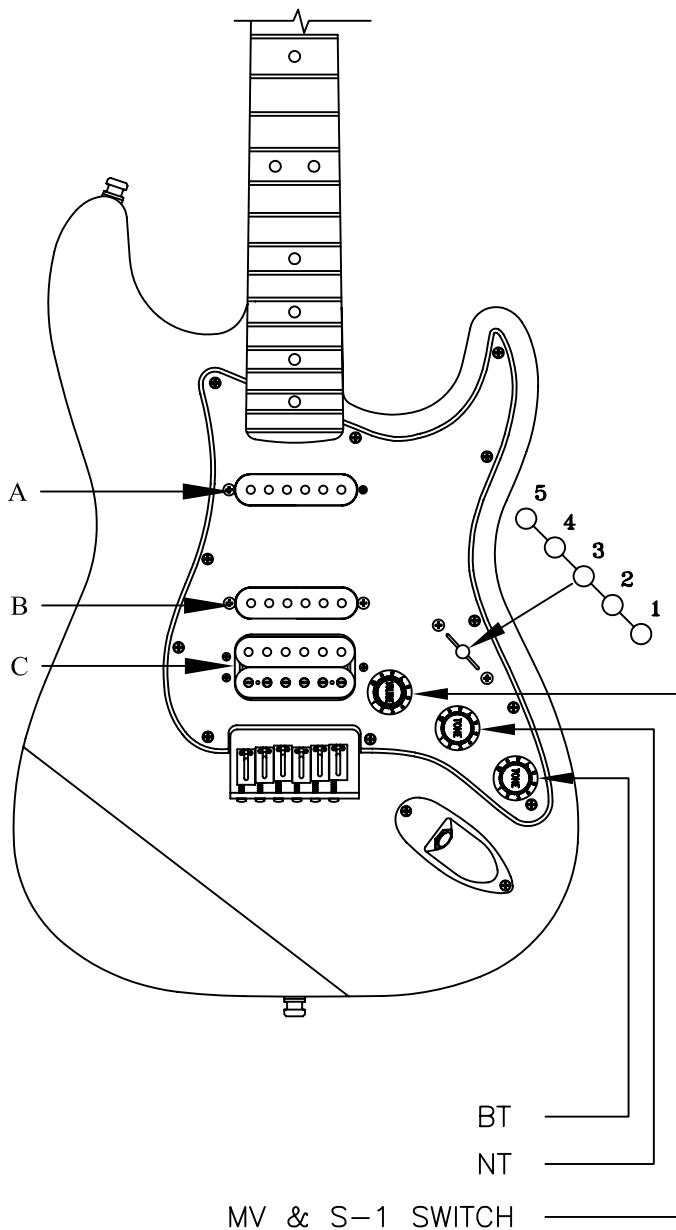

5 WAY SW POSITIONS, S-1 SWITCH UP					
					POSITION
MV NT	MV NT+BT	MV BT	MV BT	MV BT	CONTROL
					← NECK (A)
					← MIDDLE (B)
					← BRIDGE (C)
	A/B		B/C		CONNECTION

5 WAY SW POSITIONS, S-1 SWITCH DOWN					
					POSITION
MV NT	MV NT+BT	MV NT+BT	MV BT	MV BT	CONTROL
					← NECK (A)
					← MIDDLE (B)
					← BRIDGE (C)
A+B	(A+C)/B	(A+B)/C	B/C		CONNECTION

MV = MASTER VOLUME  
 NT = NECK TONE  
 BT = MID/BRIDGE TONE  
 + = SERIES CONNECTION  
 / = PARALLEL CONNECTION  
 ( ) = INDICATES PAIRED COILS

	PICKUP IS ON
	PICKUP IS OFF
<i>A</i>	PICKUP (NECK)
<i>B</i>	PICKUP (MIDDLE)
<i>C</i>	PICKUP (BRIDGE)