## TRIO QUICK START



- Press the FOOTSWITCH to arm TRIO (LEARN LED will flash rapidly). Keep your guitar quiet until you are ready to strum the first chord.
- Start strumming in a steady rhythm. You are teaching TRIO a chord progression so play clearly and avoid embellishments.
- As you complete your chord progression, press the FOOTSWITCH just as you strum the same down-beat you started on. This is when you want the band to join in.

## 2 FINE-TUNE & JAM

- Adjust **DRUMS** and **BASS** knobs to balance the levels of the band with your guitar.
- Adjust GENRE and STYLE knobs to try different variations of the song (STYLE LEDs light green or amber to indicate a style fit for your song with green being the best fit).
- Engage GUITAR FX button to apply effects to your guitar signal.
- Adjust the TEMPO knob or engage the ALT TIME button to change the song's tempo.

## **3** BAND CONTROL

- Press FOOTSWITCH once to start or stop playback.
- When stopped, press and hold FOOTSWITCH for 2 seconds to clear song part.

## CONNECTION DIAGRAM

