

MOOER

eleclady

Analog Flanger Pedal

## Owner's Manual

## Precautions

## PLEASE READ CAREFULLY BEFORE PROCEEDING

**Power Supply**

Please connect the designated AC adapter to an AC outlet of the correct voltage. Please be sure to use only an AC adapter which supplies 9V (+/-10%) DC, center minus. The maximum working voltage shall not exceed 12V, otherwise may be dangerous equipment damage, fire or other problems.

Unplug the AC power adapter when not using or during electrical storms.

**Connections**

Always turn off the power of this and all other equipment before connecting or disconnecting, this will help prevent malfunction and / or damage to other devices. Also make sure to disconnect all connection cables and the power cord before moving this unit.

**Handling**

Do not apply excessive force to the switches or controls.

Do not let paper, metallic, or other objects into this unit.

Take care not to drop the unit, and do not subject it to shock or excessive pressure.

**Cleaning**

Clean only with a soft, dry cloth. If necessary, slightly moisten the cloth.

Do not use abrasive cleanser, cleaning alcohol, paint thinners, wax, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

**Interference with other electrical devices**

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

**Location**

To avoid deformation, discoloration, or other serious damage, do not expose this unit to the following conditions:

- Direct sunlight
- Heat sources
- Magnetic fields
- Extreme temperature or humidity
- Excessive dusty or dirty location
- High humidity or moisture
- Strong vibrations or shocks

## Main Features


- Classic analog flanger sound with filter mode and oscillator effects
- 2 Working Modes: Normal/Filter
- Full metal shell
- Very small and exquisite
- True bypass
- DC 9V Adapter power supply

## Effects Explanation

**Normal:** Normal flanger mode, undulating electricity sound.

**Filter:** Freeze the flanging effect, create a static filter sound.

## Panel Instruction

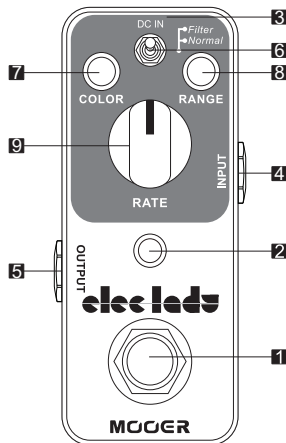**1. TRUE BYPASS Footswitch:**

Push down the footswitch to switch between effects and bypass status.

**2. ON/OFF LED:**

Instructs effects or bypass status of Eleclady, when the LED is lit up, the effects is on.

**3. DC IN Power Jack:**

For power supply, use a 9-volt DC regulated AC adapter (plug polarity is positive on the barrel and negative in the center).

**4. INPUT Jack:**

1/4" mono audio jack, for connecting guitar.

**5. OUTPUT Jack:**

1/4" mono audio jack, outputs the signal.

**6. Mode Switch:** Switch between Normal mode and Filter mode.**7. COLOR Knob:** Adjust the feedback of flanger.

**Note:** Setting the COLOR knob at its most clockwise point could cause an oscillator noise tone, this is normal, use this special sound to create unique effects!

**8. RANGE Knob:** Adjust the limit range of sweeping scope in Normal mode and manually adjust the filter matrix in Filter mode. The sweeping range will get larger when clockwise turning.**9. RATE Knob:** Adjust the speed of flanger in Normal mode. It will be disengaged in Filter mode.

## Specification

**Working Modes:** 2 (Normal, Filter)

**Input:** 1/4" monaural jack (impedance: 1M Ohms)

**Output:** 1/4" monaural jack (impedance: 510 Ohms)

**Power Requirements:** AC adapter 9V DC (center minus plug)

**Current Draw:** 10 mA

**Dimensions:** 93.5mm (D) × 42mm (W) × 52mm (H)

**Weight:** 160g

**Accessories:** Owner's Manual

*\* Disclaimer: Any specification's update won't be amended in this manual.*

MOUER

eleclady

模拟镶边单块

## 用户手册

## 注意事项

\*使用前请仔细阅读\*

## 电源供应

请使用正确的交流电源插座连接电源变压器。  
 请使用内负外正的9V(+/-10%)电源变压器，最大工作电压不得超过12V，否则将会导致设备损坏，着火或者其它问题。  
 不使用时或雷雨天时请拔出电源。

## 连接

连接设备或断开连接前，请务必关闭电源及其它设备，这将有助于避免故障和损坏其它设备。另外，要确保移动本机前断开所有的连接线和电源线。

## 放置场所

为防止变形、变色，及其它严重损坏，请避免以下情况：

- 阳光直射
- 磁场
- 多尘或不洁的地方
- 强烈震动或摇晃
- 热源
- 高温潮湿
- 湿度较大

## 电音干扰

在使用本机时，收音机和电视机可能会造成干扰。使用本机时要远离收音机和电视机。

## 清洁

请用干燥柔软的布清洁本机。如有必要，可用稍微湿润的布。切勿使用粗糙的清洁粉、酒精、涂料稀释剂、蜡、溶剂、清洁剂及化学试剂等浸渍抹布。

## 操作

请勿用蛮力使用开关及控制元件。  
 请勿让纸屑、金属制品及其它物体落入机内。  
 注意不要掉落，不要使其受到冲击及过度压力。

## 性能概述


- 经典的模拟镶边效果，带有静态滤波模式，可制造独特的振荡器噪声效果
- 两种工作模式：Normal/Filter
- 外观小巧精致
- 纯直通设计
- 9V电源供电

## 模式说明

**Normal:** 常规工作模式，周期性变化的镶边效果。

**Filter:** 将镶边效果冻结，产生一种静态的滤波效果。

## 面板说明

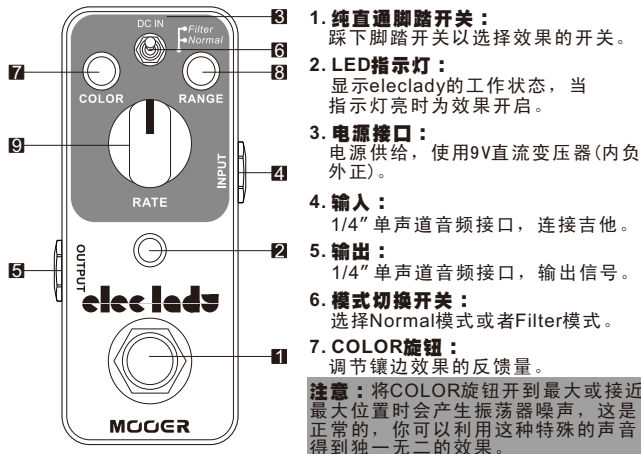

1. **纯直通脚踏开关：**  
 踩下脚踏开关以选择效果的开关。
2. **LED指示灯：**  
 显示eleclady的工作状态，当指示灯亮时为效果开启。
3. **电源接口：**  
 电源供给，使用9V直流变压器(内负外正)。
4. **输入：**  
 1/4"单声道音频接口，连接吉他。
5. **输出：**  
 1/4"单声道音频接口，输出信号。
6. **模式切换开关：**  
 选择Normal模式或者Filter模式。
7. **COLOR旋钮：**  
 调节镶边效果的反馈量。

**注意：**将COLOR旋钮开到最大或接近最大位置时会产生振荡器噪声，这是正常的，你可以利用这种特殊的声音得到独一无二的效果。

8. **RANGE旋钮：**  
 在Normal模式下调节镶边效果的扫频范围，在Filter模式下可手动调节滤波器矩阵的频率变化。
9. **RATE旋钮：**  
 在Normal模式下调节镶边效果的速度，在Filter模式下该旋钮不起作用。

## 技术参数

**工作模式：** 2 (Normal, Filter)

**输入：** 1/4"单声道音频接口(阻抗：1M Ohms)

**输出：** 1/4"单声道音频接口(阻抗：510 Ohms)

**电源供给：** 9V 直流变压器(内负外正)

**工作电流：** 10 mA

**尺寸：** 93.5mm (D) × 42mm (W) × 52mm (H)

**重量：** 160g

**附件：** 用户手册

\*免责声明：参数更新恕不另行通知。