

X-GUITAR

Factory Preset Program Chart

BANK A	A0	Acoustic	Acoustic
	A1	The New Black	Rhythm
	A2	Clean Chorus	Rhythm
	A3	Rhythm Distortion Chorus	Rhythm
	A4	Clean/Chorus/Delay	Rhythm
	A5	Solo Heavy Distortion Lead	Solo
	A6	Mid Distortion Auto Wah	Lead
	A7	Blues Silver w/Expression Pedal	Lead/Solo
	A8	Edgy Echo	Delay Rhythm
	A9	Brite Jazz	Jazz Solo

BANK E	E0	Cream Of The Crop	Rhythm
	E1	Ring Mod	Solo/Lead
	E2	Psycho Step	Solo/Lead
	E3	Young Neil	Rhythm
	E4	Clean 60's Slap	Rhythm
	E5	Brown Lead	Rock Rhythm
	E6	Ring Bite with Reverb	Solo
	E7	Perfect Pretender	Clean Rhythm
	E8	Page 1	Rock Rhythm
	E9	Clean Phase	Rhythm

BANK B	B0	Semi Dirty Silver	Rock Rhythm
	B1	Blues Solo Bright	Blues Solo
	B2	Harmony and Distortion	Lead
	B3	Dark Jazz	Solo Jazz
	B4	Studio Blues	Rhythm
	B5	Orly Blues	Blues Solo
	B6	Clean Tremolo	Rhythm
	B7	The Rhythm Method w/Flanger	Rhythm
	B8	The Rhythm Method w/Chorus	Rhythm
	B9	Thick Rhythm	Rhythm

BANK F	F0	BB Clean	Solo Clean
	F1	Dreamy Wah	Rhythm
	F2	Sting Operation	Clean Rhythm
	F3	Black Label Blues	Grungy
	F4	Real Wah	Rock Wah
	F5	Wamorello	Rhythm Grunge
	F6	V-Sky	Solo
	F7	Light Lez	Rhythm
	F8	Box Wah	Rhythm/Solo
	F9	Worble	Guitar Effect

BANK C	C0	Clean Wide Wah	Rhythm
	C1	You Got Me	Rock Rhythm
	C2	Solo Distortion Cry	Solo Rock
	C3	Thick Dirty Flange	Lead
	C4	Heavy Distortion Dry	Rhythm
	C5	Classic Stack	Rhythm
	C6	Barracuda	Rhythm
	C7	Drop Dead Ed	Rhythm/Solo
	C8	Distortion/Filter/Wah	Rhythm
	C9	Clean Going Around Speaker	Rhythm

BANK G	G0	Deep Rhythm	Rhythm
	G1	Easy Skank	Clean Rhythm
	G2	Numb Comfortably	Solo
	G3	Kurd	Acoustic
	G4	Fried Tube	Rock Rhythm
	G5	AM Gold	Rock Rhythm
	G6	Clean Lead	Solo/Lead
	G7	Pedal Delay	Rhythm
	G8	Bar Stool in Austin	Solo
	G9	Area 51	Lead/Solo

BANK D	D0	Studio Lead w/Delay	Lead
	D1	Clean Step Filter	Rhythm
	D2	Flanger Solo	Lead/Solo
	D3	Fifth Below Dry	Lead/Solo
	D4	Clean Funk Slap	Rhythm
	D5	Jeffrey	Rock Solo
	D6	Fusion Lead	Fusion Solo
	D7	Steely Man	Solo
	D8	Semi Distortion w/AutoWah	Rhythm
	D9	Mystery Lead	Lead/Solo

BANK H (Write your own patches here.)	H0		
	H1		
	H2		
	H3		
	H4		
	H5		
	H6		
	H7		
	H8		
	H9		

For fast program access and switching, copy your most-used patches from other banks to Bank H. You can also use Bank H – just like all the other banks – to store your own creations.

X Guitar Effect Settings

PRESET	COMP/LIMIT	DIST	DRIVE	EQ	NR	CAB	FX1	PARAM	FX2	PARAM	FX3	PARAM	DIGFX	LEVEL	ROUTE	EXPRESSION PEDAL
A0	C4	Rc	1	37	5	DF	tP	41	DF	--	r3	15	DF	26	0	Tremolo
A1	C3	Od	39	16	7	DF	tP	43	DF	--	A0	0	DF	17	2	Tremolo
A2	C3	Rc	1	40	3	DF	C8	24	tP	45	r5	15	DF	28	0	Tremolo
A3	C1	5d	43	27	7	DF	C2	9	DF	--	r1	11	DF	18	0	
A4	C4	Rc	1	37	11	DF	C4	31	tP	46	92	74	DF	27	6	Tremolo
A5	C2	5d	70	DF	9	DF	tP	45	DF	--	H5	7	DF	16	0	Tremolo
A6	C2	5d	54	11	8	DF	U5	11	DF	--	S3	57	DF	18	0	
A7	C2	tC	Pd	45	3	DF	DF	--	DF	--	A7	6	DF	24	0	Distortion
A8	C2	tC	6	28	24	DF	C4	20	tP	45	E7	66	DF	24	0	
A9	C3	DF	--	45	DF	DF	tP	44	DF	--	H3	5	DF	29	0	

B0	C2	tC	17	12	3	DF	tP	48	DF	--	r5	10	DF	21	0	Tremolo
B1	C5	bL	40	31	17	DF	tP	44	DF	--	E1	37	DF	18	0	Tremolo
B2	C3	5d	54	41	9	DF	P2	3	DF	--	r7	10	DF	18	0	
B3	C1	DF	--	5	DF	DF	tP	49	DF	--	r5	2	DF	29	0	Tremolo
B4	C2	Cd	40	18	37	DF	tP	47	DF	--	r7	12	DF	18	0	Tremolo
B5	C9	dE	5	DF	3	DF	tP	56	DF	--	A4	7	DF	20	0	Tremolo
B6	C7	Rc	1	35	DF	DF	tE	38	DF	--	r7	12	DF	27	0	
B7	C3	rY	5	18	4	DF	F1	12	tP	58	d4	82	DF	22	4	Tremolo
B8	C3	rY	5	18	4	DF	C2	27	tP	58	d4	82	DF	24	4	Tremolo
B9	C3	Cd	51	7	7	DF	tP	41	DF	--	d9	1	DF	19	2	Tremolo

C0	C4	DF	--	10	3	DF	U9	9	DF	--	DF	--	DF	25	0	
C1	C3	Od	58	27	99	DF	tP	50	DF	--	H5	5	DF	16	0	Tremolo
C2	C3	tC	75	10	58	DF	Y4	5	DF	--	r3	20	DF	22	0	
C3	C4	7E	66	40	9	DF	F5	8	tP	55	r5	17	DF	18	0	Tremolo
C4	C1	Od	65	DF	9	DF	DF	--	DF	--	DF	--	DF	16	0	
C5	C3	5d	50	DF	39	DF	tP	53	DF	--	H4	8	DF	16	0	Tremolo
C6	C4	Od	8	45	5	DF	F2	10	tP	52	H2	2	DF	21	0	Tremolo
C7	C3	Od	42	24	9	DF	C2	24	tP	49	H1	0	DF	18	0	
C8	DF	FU	99	50	69	DF	U2	20	S3	71	96	1	dP	21	3	Step Filter
C9	C2	Rc	22	39	37	DF	L9	27	DF	--	S3	33	DF	29	0	

D0	C3	Cd	99	15	39	DF	tP	42	DF	--	S0	47	DF	17	0	Tremolo
D1	C4	DF	--	15	9	DF	S9	51	DF	--	DF	--	DF	26	0	
D2	C9	Ld	85	24	9	DF	F5	7	DF	--	DF	--	DF	15	0	
D3	C9	Ld	24	25	9	DF	DF	--	SP	--	P3	3	DF	18	0	
D4	C9	DF	--	37	DF	DF	C2	30	tP	54	d5	75	DF	30	0	Tremolo
D5	C7	bL	37	25	8	DF	DF	--	DF	--	H2	6	DF	17	0	
D6	C3	dE	30	26	7	DF	C5	30	tP	47	H3	6	DF	20	0	Tremolo
D7	C3	tC	68	DF	6	DF	C8	25	tP	52	d6	70	DF	21	0	Tremolo
D8	C3	Ld	20	50	3	DF	U9	12	tP	46	r5	5	DF	23	0	Tremolo
D9	C9	Ld	60	DF	8	DF	F0	1	tP	46	E1	66	DF	17	0	Tremolo

E0	C4	tC	55	7	37	DF	tP	48	DF	--	H4	10	DF	21	0	Tremolo
E1	C4	tC	79	50	37	DF	r9	16	DF	--	H4	13	DF	26	0	
E2	C4	tC	79	50	37	DF	S6	47	tP	51	H4	13	DF	24	0	Tremolo
E3	C2	bL	78	17	39	DF	tP	47	DF	--	r9	15	DF	17	0	Tremolo
E4	C5	DF	--	42	DF	DF	DF	--	DF	--	E2	38	DF	26	0	
E5	C3	5d	49	48	37	DF	DF	--	DF	--	S3	99	DF	20	0	
E6	C2	bL	41	42	37	DF	tP	50	DF	--	DF	--	DF	17	0	Tremolo
E7	C2	tC	2	33	35	C1	DF	--	DF	--	H1	19	DF	23	0	
E8	C2	DF	--	20	DF	DF	DF	--	t7	44	A9	14	DF	25	2	
E9	C7	DF	--	42	DF	C2	C7	28	S1	35	E1	57	DF	26	6	

F0	C4	DF	--	39	3	DF	C9	36	tP	44	r6	10	DF	30	0	
F1	L9	DF	--	41	3	C1	C9	25	U6	3	H5	15	DF	25	2	
F2	C4	DF	--	36	35	C1	C6	30	94	80	r5	13	DF	24	0	
F3	C3	tC	44	37	35	DF	DF	--	DF	--	S8	50	DF	20	0	
F4	C3	Rc	1	37	4	DF	UP	--	DF	--	DF	--	DF	25	2	
F5	C3	Ld	64	17	39	DF	Pu	Pd	DF	--	DF	--	DF	18	0	
F6	C4	Ld	60	18	28	DF	P1	7	DF	--	DF	--	DF	20	0	
F7	C3	DF	--	36	35	DF	L2	32	DF	--	DF	--	DF	27	0	
F8	C1	7E	70	42	99	DF	DF	--	UP	--	DF	--	DF	16	2	
F9	C4	DF	--	22	DF	DF	S7	93	DF	--	DF	--	DF	24	0	

G0	C3	Rc	64	47	3	DF	DF	--	DF	--	A9	20	DF	25	0	
G1	C4	DF	--	43	38	C3	C9	10	DF	--	E0	9	DF	27	0	
G2	C3	5d	49	44	9	DF	DF	--	DF	--	E3	46	DF	17	7	
G3	C3	DF	--	41	15	C3	DF	--	DF	--	r5	20	DF	25	0	
G4	DF	7E	54	29	9	DF	DF	--	DF	--	r2	15	DF	16	0	
G5	C9	rY	51	7	99	C3	H9	Pd	DF	--	r1	15	DF	20	0	Tremolo
G6	C7	Ld	1	DF	4	DF	DF	--	DF	--	DF	--	DF	22	0	
G7	C9	5d	53	7	8	C3	DF	--	DF	--	tP	Pd	DF	18	0	Delay
G8	DF	tC	6	DF	4	DF	DF	--	DF	--	A5	8	DF	20	0	
G9	C3	Ld	80	6	8	DF	YP	--	SP	Pd	H1	0	d7	22	6	