

TASCAM[®]

a whole world of recording

MX-2424

Jumper configurations for the Hitachi GF-1050 DVD-RAM drive when connected to the MX-2424

The jumper positions indicated below are as seen from the rear of the drive from left to right with the SCSI connector on the right. The indicated settings are for installation into the front panel of the MX-2424 or into an external drive enclosure with proper termination as indicated in the SCSI Instructions document. Installed jumpers are indicated with an "X".
Factory default SCSI ID setting is ID 3.

	SCSI Address	SCSI Address	SCSI Address	Write Cache	Write Verify	Term Power (Internal)	Term Power (SCSI Bus)	Termination
ID = 1			X	X	X	X	X	
ID = 2		X		X	X	X	X	
ID = 3		X	X	X	X	X	X	
ID = 4	X			X	X	X	X	
ID = 5	X		X	X	X	X	X	
ID = 6	X	X		X	X	X	X	