
# **HE18** Buzz Off





Owners Manual

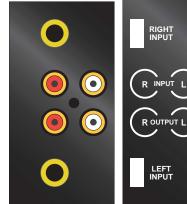

# **HE18 Buzz Off**

output to your next device connect the offending line into the input, and connect the als, the unit is safe and convenient to operate. Simply unbalanced line. The HE18 helps remove hum and buzz from a balanced or Perfect for musicians or audio profession-

TATION CHARGES PREPAID. Products returned to us or to an authorized Service and service, provided the product is returned to Rolls Corporation, TRANSPORto repair or replacement (at our option), during the warranty period of any part which proves defective in material or workmanship under normal installation, use The obligation of Rolls Corporation under this warranty shall be limited service for a period of one (1) year from the date of purchase as shown on the from defects in materials and workmanship under normal installation, use and

This product is warranted to the original consumer purchaser to be free

LIMITED WARRANTY

Center, or any use violative of instructions furnished by us. by any person or party other than our own service facility or an authorized Service defacement, misuse, abuse, neglect, accident, destruction or alteration of the serial number, improper electrical voltages or currents, repair, alteration or maintenance manutacture. This warranty shall be invalid if the product is damaged as a result of

such purchase receipt, the warranty period shall be one (1) year from the date of Center must be accompanied by a copy of the purchase receipt. In the absence of

long an implied warranty lasts, so the above WRITTEN LIMITED WARRANTY. BE LIMITED IN DURATION TO THE ONE YEAR DURATION OF THIS MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALI INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF or liabilities. ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES; This one-year warranty is in lieu of all expressed warranties, obligations Some states do not allow limitations on how

vary from state to state warranty gives you specific legal rights, and you may also have other rights which tial damages so the above limitation or exclusion may not apply to you. This states do not allow the exclusion or limitation of special, incidental or consequen-ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, WHATSOEVER. Some INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR IN NO EVENT SHALL WE BE LIABLE FOR ANY SPECIAL

- ï Helps eliminate ground hum and buzz
- Dual channel
- No power required completely passive
- i Converts balanced to unbalanced lines and vice versa







## INTRODUCTION

Thank you for your purchase of the HE18 Buzz Off. If you've got hum or buzz in your audio signal, the HE18 is the solution you need. Almost all AC hum is caused by ground loops. These ground loops act like radio antennae, picking up hum and noise. The HE18 removes many causes of noise by eliminating the ground potential.

# **INSPECTION**

1. Unpack and Inspect the HE18 package

Your HE18 was carefully packed at the factory in a protective carton. Nonetheless, be sure to examine the unit and the carton for any signs of damage that may have occurred during shipping. If obvious physical damage is noticed, contact the carrier immediately to make a damage claim. We suggest saving the shipping carton and packing materials for safely transporting the unit in the future.

2. Please visit our website at **www.rolls.com**, click on the Register Your Warranty Here text and follow the instructions to register your HE18. Or complete the Warranty Registration Card and return it to the factory.

### **DESCRIPTION**


INPUT(S): 2 ea; 1/4" Tip-Ring-Sleeve jacks

2 ea; RCA jacks

OUTPUT(S): 2 ea; 1/4" Tip-Ring-Sleeve jacks

2 ea; RCA jacks



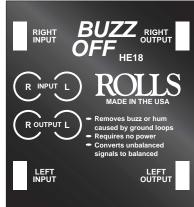



### **OPERATION**

To insert the HE18 in a system with a buzz or hum, disconnect the device you suspect is causing the noise. Connect that device's Output to either of the Inputs (1/4" or RCA), and connect the HE18 Output(s) to the next device in the signal chain.

For example; if you've got a buzz in your video system, connect the HE18 between the video unit and amplifier to isolate the signals.

PLEASE NOTE: THE HE18 IS INTENDED TO RECEIVE LINE LEVEL (0db to +4 dB) SIGNALS. DO NOT CONNECT A MICROPHONE LEVEL SIGNAL OR A SPEAKER (POWERED) LEVEL SIGNAL TO THIS UNIT. CONNECTING A SPEAKER LEVEL SIGNAL (ie. THE OUTPUT OF A POWER AMPLIFIER) WILL CAUSE PERMANENT DAMAGE TO THE HE18.

# **SPECIFICATIONS**

Max Out: Bal: +18 dB

Unbal: +12 dB

Max In: Bal: +22 dB

Unbal: +22 dB

Input Impedance: RCA: 10 k Ohm

1/4": 10 k Ohm balanced

Output Impedance: RCA: 10 k Ohm

1/4": 10 k Ohm balanced

THD: .05% @ 1 kHz
Weight: 1 lbs. (.45 Kg)
Size: 4.15" x 2.46" x 1.55"

**SCHEMATIC** 

