
JANSTANDSTM by Ultimate Support


Set up your keyboard on a sturdy, lightweight stand, with the JS-XS300 keyboard stand. Easily adjustable to sitting or standing heights thanks to the large tightening knob, the X-style keyboard stand accommodates a variety of playing situations. The JS-XS300 folds flat for easy transport and storage.

SETUP INSTRUCTIONS — JS-XS300

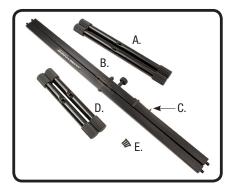


PARTS INCLUDED:


- A. (2) Bottom Support Arms
- B. (1) Cross-bar
- C. (1) Allen Wrench, Attached to Cross-bar
- D. (2) Top Support Arms
- E. (4) Screws

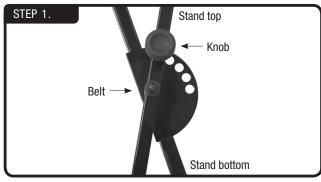

 Open the cross-bars until they snap into a stable position. See picture for upright position reference.

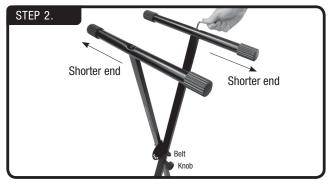

Using the provided Allen wrench and screws, attach the long supports legs to the bottom of the stand. The shorter end of each support leg should be facing away from the attaching cross-bar center joint (see picture).

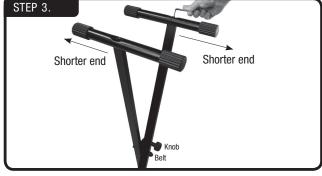

Attach the shorter support arms to the top of the stand. Again, the shorter end of the support arm should be facing out away from the attaching cross-bar center joint (see picture).



4. To adjust stand height, pull the spring-loaded knob until the pin clears the adjustment plate. Adjust legs until stand is at desired height, then release knob so that the pin snaps into place in one of the holes on the adjustment plate. Do not turn the knob - this can result in the loss of the spring.

