

XD-V30 Digital Wireless System

Pilot's Handbook

Manuel de pilotage Pilotenhandbuch Pilotenhandboek Manual del Piloto 取扱説明書

See www.line6.com/manuals for Advance Guide

Advanced Users Guide available @ www.line6.com/manuals

Important Safety Instructions



WARNING : TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE SCREWS. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING : TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THE APPLIANCE TO RAIN OR MOISTURE.

CERTIFICATION

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

Warning: Changes or modifications not expressly approved in writing by Line 6 may void the users authority to operate this equipment. **RF Exposure Statement:** This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radi-ate radio frequency energy and, if not in-stalled and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numerique de la classe B est conforme a la norme NMB-003 du Canada.

The FCC compliance sticker is attached to the THH06 battery compartment. Remove the THH06 base by unscrewing counter clockwise to see this compliance sticker.



 


 


- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- This apparatus shall be connected to a MAINS socket outlet with a protective earthing connection.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- WARNING: To reduce the risk of fire or electric shock do not expose this apparatus to rain or moisture.
- The appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Connect only to AC power outlets rated: 100/120V 220/240V 50/60Hz (depending on the voltage range of the included power supply).
- Prolonged listening at high volume levels may cause irreparable hearing loss and/or damage. Always be sure to practice "safe listening."
- Service is required when the apparatus has been damaged in any way, such as:
 - power-supply cord or plug is damaged.
 - liquid has been spilled or objects have fallen into the apparatus.
 - the unit has been exposed to rain or moisture.
 - the unit is dropped or the enclosure is damaged.
 - the unit does not operate normally or changes in performance in a significant way.



RXT06 Receiver Operation





 Channel Select - Rotate the knob to select a receiver channel. For the system to operate both RXT06 and transmitter (THH06 or TBP06) must be set to the same channel.

2. Battery Level Indicators

- 3 Green = Full charge
- 2 Green = Excellent charge
- 1 Green = OK charge
- 1 Red = Low charge
- Flashing Red = Very low charge

 
3. Transmitter Signal Level Indicators

- 3 Green = Data excellent
- 2 Green = Data OK, may have some interference
- 1 Green = Data minimal, may have significant interference
- No LED = No data, no interference
- 1 Red = No data, some interference
- 2 Red = No data, more interference
- 3 Red = No data, high interference
- ٠
- 4. Audio LED Green = Audio signal is present
- 5. Power LED Blue = Power On
- **6.** Unbalanced Output Use a standard 1/4" cable to send audio output to an unbalanced mic level connection when an XLR balanced connection is unavailable.
- **7. Balanced Output -** (Prefered) Use a standard XLR cable to connect to a balanced XLR mic input.
- **8. Power Supply -** To turn on the receiver, plug the Line 6 DC-1g power supply into the receiver's 9V DC input jack.

THHO6 MICROPHONE OPERATION


- 1. Power Button Press briefly to turn on. Hold 2 seconds to turn off.
- **2.** Chanel Select Set THH06 Microphone to the same channel as the RXT06 Receiver. Press briefly to select a Channel from 1 to 6.
- **3. Chanel LEDs -** Illuminates blue to show the current active channel THH06 is transmitting on. Channel 6 LED will illuminate red when battery life is low and blink red when very low (change batteries).

Battery Installation / Removal



THH06 uses two AA batteries. To install or remove batteries, remove the microphone base by turning it counter clockwise then open the battery door to access battery compartment. Observe correct polarity when installing. **NOTE**: Do not over tighten microphone base.

 Using the Lock feature




The **LOCK** switch is located behind the battery compartment indicated in the illustration above. The **LOCK** switch comes from the factory in the unlocked position. This allows you to make any necessary adjustments for your initial setup. After you made all of your adjustments it's advised that you set the **LOCK** switch to its locked position.

When unlocked the **LOCK** switch will be set to the Left position. In this mode you are able to power on and off or switch channels.

Once you've selected a channel and ready to use the microphone, slide the switch to the Right to it's locked position. This will prevent the front panel controls from being able to change channels or shut the microphone off accidentally.

To turn the microphone off when THH06 is in **LOCK** mode it's necessary to unscrew the microphone base and slide the **LOCK** switch to its unlocked position to the right. Once unlocked, press and hold the **POWER** button for 2 seconds.

TBP06 TRANSMITTER **O**PERATION

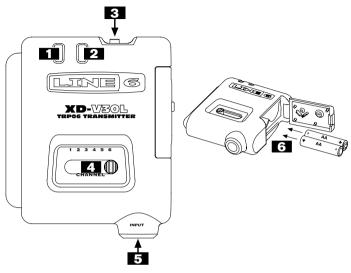

I. Audio LED - Green LED = Audio Signal

2. Battery LED

- Blue LED = Full Charge
- Solid Red LED = Low Charge
- Flashing Red LED = Very Low Charge
- 3. Power Slide switch to turn on/off transmitter.
- **4. Channel Select -** Set TBP06 Microphone to the same channel as the RXT06 Receiver.

5. Input - Connect the 1/4" inch TRS plug from LM-44 here.

Attaching and positioning the mic: Use the mic clip to attach the lavalier mic to clothing taking care to point the microphone towards the intended sound source. Avoid fixing mic to where mechanical noise can be generated such as zippers, inside pockets, etc.

6. Battery Installation - Open the side door to access the battery compartment. The inside of the battery compartment door indicates the correct battery direction. For best results use only non-rechargeable alkaline batteries.

REGISTER AND GET FREE STUFF

Included with the XD-V30 is a handy, postage-paid card for you to send back to us to register your purchase. It is very important you either fill that registration card out right now and send it to us in the mail, or register online at www.line6.com/register. That gets you all set up for warranty service in case you should ever have a warranty issue with your product.

www.line6.com/manuals

Select XD-V30 in our online manual archive to download our online companion manual describing details of the features in your XD-V30 Digital Wireless System.