



# MEGA GO BATTERY REPLACEMENT BAR 50

The following instructions will help you replace your dead battery in the Mega Go Bar 50. To replace the battery you need to carefully follow these instructions. If you have any questions please contact American DJ customer support.

**Customer Support:** American DJ provides a customer support line, to provide set up help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at [www.AmericanDJ.com](http://www.AmericanDJ.com) for any comments or suggestions. Service Hours are Monday through Friday 8:00 a.m. to 4:30 p.m. Pacific Standard Time.

Voice: (800) 322-6337  
Fax: (323) 582-2941  
E-mail: [support@AmericanDJ.com](mailto:support@AmericanDJ.com)




Start by removing both bracket end caps. Unscrew the four phillips screws that hold each end in place.





Once the bracket end caps have been removed, slide out the plastic LED cover.

After you have removed the LED cover. Look carefully at the LED strip. You should see an area at one end where the LED strip separates. At that end, slide the LED strip out, so that small strip is removed from the housing. It is still connected to the other strip, so do not try to fully remove it. After this strip is out of the housing. Slide the larger LED strip back the opposite way.

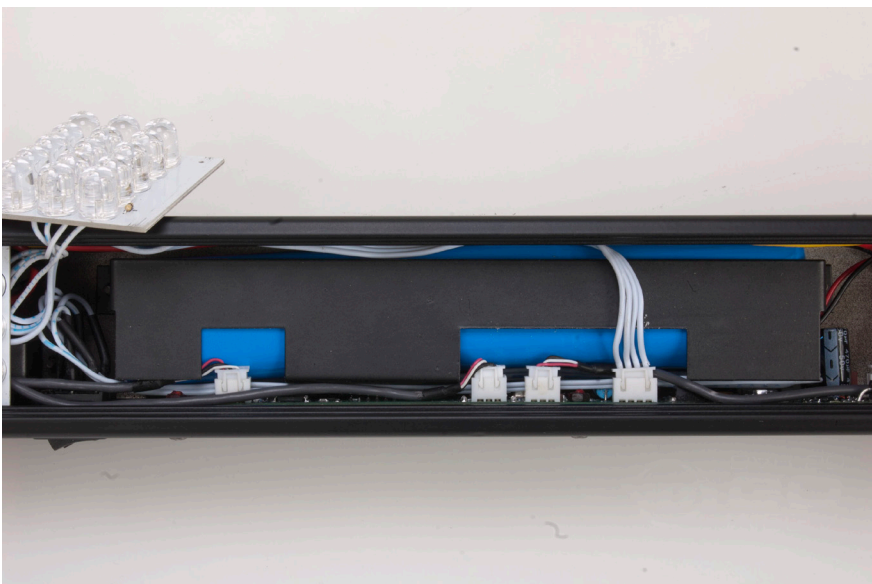


Slide the strip until the full battery housing is shown. This is as far as you need to slide the LED strip. Sliding it any farther could separate wires and cause damage.




Carefully disconnect the LED wire harness from the PC board.

After disconnecting the wire harness, “flip” the bar over so the rear is facing up. Remove the two phillips screws that secure the battery bracket.

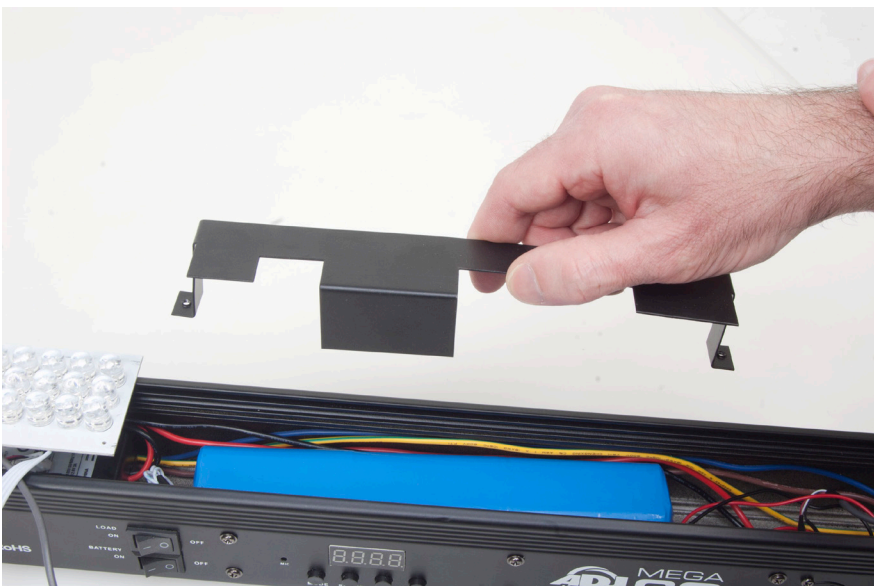



After unscrewing and removing the screws, “flip” the unit back over, and carefully remove the battery bracket.



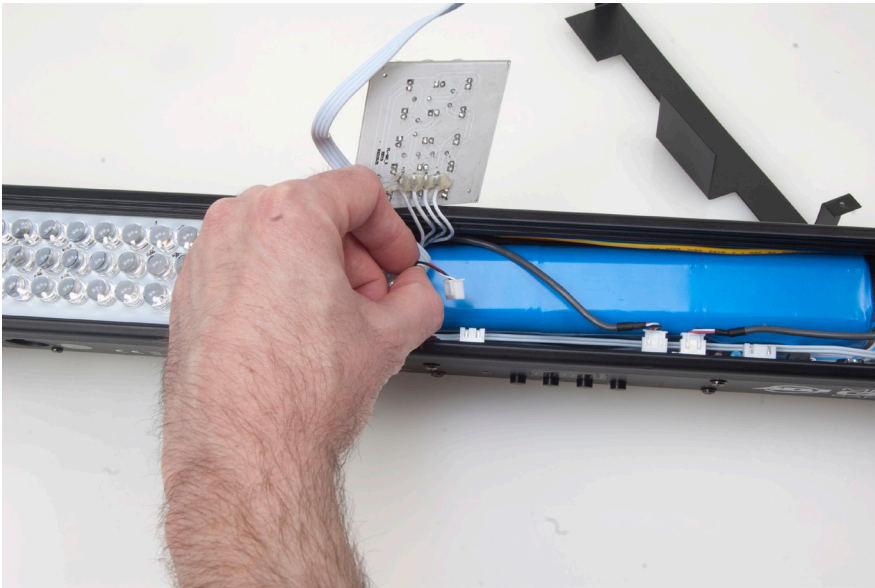


Disconnect the IR sensor cable from the PC board.

Disconnect the DMX In connection cable.

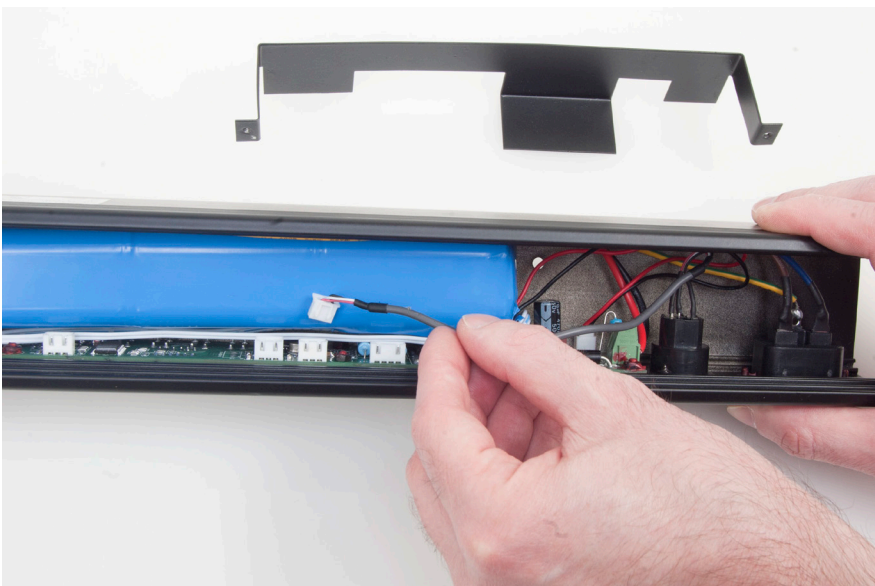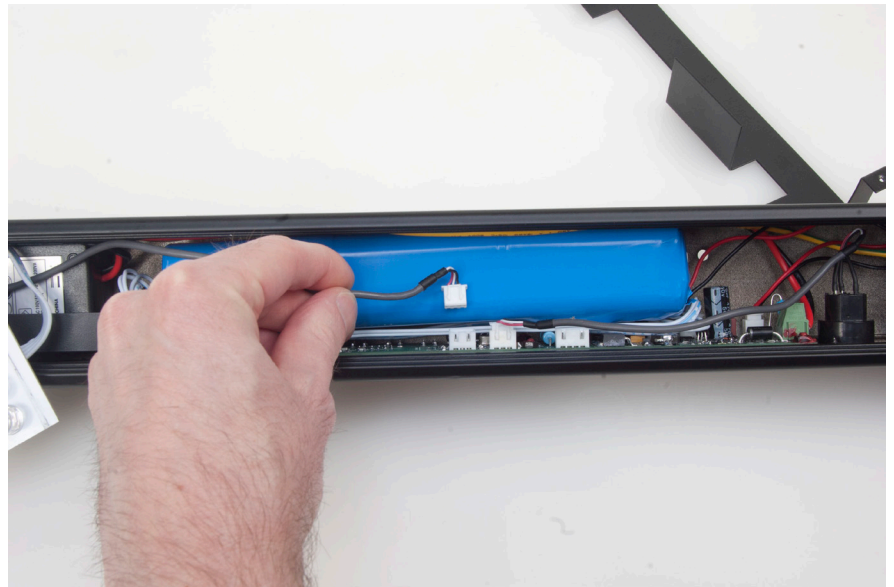


Disconnect the DMX Out connection cable.

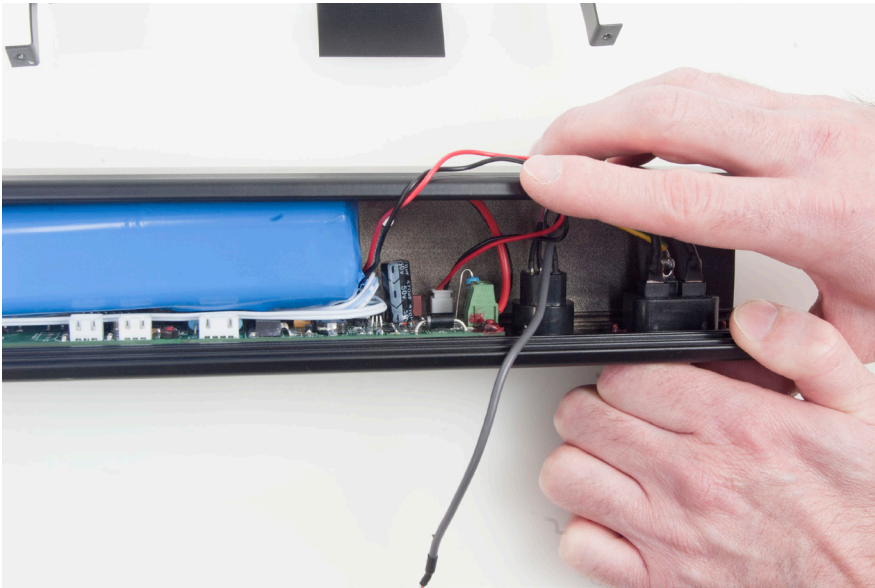

Disconnect the battery cable.



Carefully remove the battery.

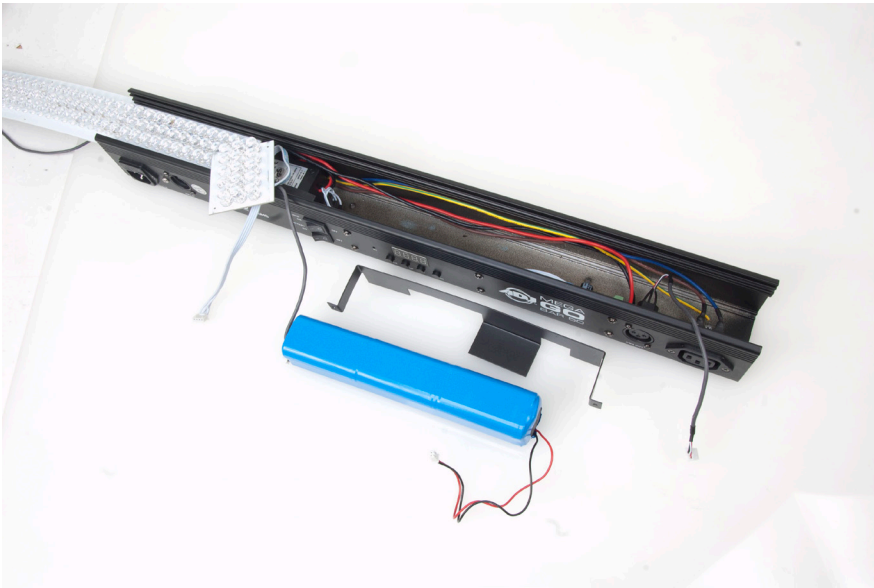

After you have replaced the battery, simply reassemble in reverse order. Make sure that all cables are connected correctly. When sliding the LED strip back into place, do this gently. You might feel some resistance. **DO NOT** force the LED strip. Slide the strip back in the opposite direction, make sure that all cables are out of the way. Please contact American DJ customer service if you need any help.