# THANK YOU FOR CHOOSING A MORLEY KIKO LOUREIRO DISTORTION WAH VOLUME PEDAL. YOU NOW OWN THE BEST PEDAL MADE!

Please take a few minutes to familiarize yourself with the features of your new pedal. We hope you enjoy using it as much as we enjoyed building it.

## **ABOUT OUR ELECTRO-OPTICAL CIRCUITRY:**

An LED (Light Emitting Diode) shines on an LDR (Light Dependent Resistor). A shutter alters light between the two components controlling functions like Wah, volume and switching. Electro-Optical design ensures smooth pedal control without unwanted noise typical with potentiometer (pot) controlled pedals.

#### **ABOUT THE CONNECTIONS:**

9V: To ensure noise free operation, use ONLY Morley's 9VDC 300 mA regulated adapter.IN: Input jack. Plug instrument into this jack using 1/4" guitar cable.OUT: Connect amplifier to this jack using a 1/4" guitar cable.

#### **USING AN AC ADAPTER:**

All Morley pedals use Morley's 9VDC 300 milliamp regulated adapter. Center pin polarity is negative. Using a non-regulated adapter could cause a low frequency hum in your amplifier. Using an adapter with the wrong polarity may damage the pedal.

#### **USING A BATTERY:**

All Morley pedals are designed to use one 9V battery when not using an adapter. We suggest you use a good quality alkaline battery. To prolong battery life, unplug your cord completely from the input jack when not using the pedal. When the pedal is not used for extended periods, remove the battery from the pedal. Remove the battery door located on the bottom of the pedal (a short cord is attached to the door to help prevent loss).

#### TWO YEAR WARRANTY

All Morley® pedals are warranted for two years from date of purchase. To obtain warranty service, call Morley toll free at 1-800-284-5172 x14.

### **KIKO LOUREIRO FEATURES (MODEL KIKO):**

• WAH Switch: Selects between Wah and Volume modes. LED lights when in Wah mode.

• DISTORTION Switch: Switches between Distortion mode and bypass. LED lights in Distortion mode.

• TONE Knob: When in Distortion mode, adjusts tone of distortion.

• DRIVE Knob: When in Distortion mode, adjusts drive (crunch) of distortion.

• LEVÉL Knob: When in Distortion mode, adjusts level (output) of distortion.

## **KIKO SPECIFICATIONS:**

Power: 9V Battery or 9VDC 300mA regulated (center pin negative)

Indicator: WAH mode LED on, Volume mode LED off Indicator: DISTORTION mode LED on, Bypass LED off Dimensions: 9.13" (L) x 5.88" (W) x 2.75" (H) Current Draw: 8 mA @ 9VDC Weight: 3.3 lb./ 1.51 kg www.morleypedals.com

