



ONE Q

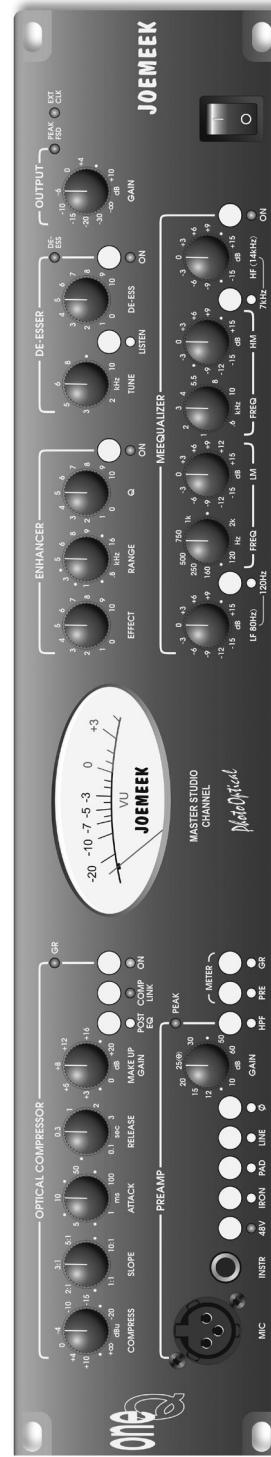


Joemeek User Guide

visit us on the web at joemeek.com

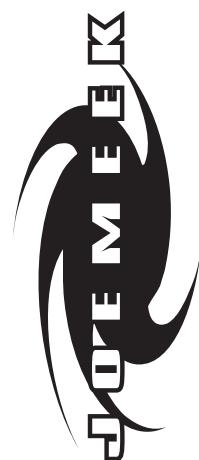

DISTRIBUTED BY PMI AUDIO GROUP
JOEMEEK
1845 W. 169th Street
Gardena, CA 90247
USA

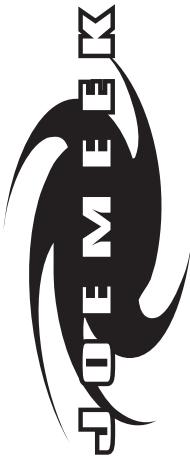

Joemeek is manufactured and marketed under the direction of:

PMI AUDIO GROUP

USA: 1845 W. 169th Street

Gardena, CA 90247

toll free: 877-563-6335

fax: 310-323-0900

email: info@joemeek.com

UK: P.O. Box 358
Torquay, Devon TQ2 5XS
tel: +44 (0) 180 3215111
email: eusales@joemeek.com

Written by Allan Bradford, MSc



Contents

oneQ Controls at a Glance	4
Overview	6
Preamplifier.....	6
Insert Point.....	7
Compressor.....	8
Meequalizer.....	10
Enhancer.....	12
De-Esser.....	12
Output Stage.....	12
Digital Interface.....	13
Using the oneQ	14
Getting Connected.....	14
Using the Preamp.....	14
Using the Compressor.....	15
Using the Meequalizer.....	15
Using the Enhancer.....	15
Using the De-Esser.....	16
Using the Output Stage.....	16
Troubleshooting	16
Technical Specification	18

JOEMEEK reborn – the legend grows

The Next Generation of Joemeek studio processors represents a quantum leap in the history of the Joemeek legend. Long regarded for its "Big Sound", the original Joemeek gear was both revered and reviled for its somewhat "quirky" nature. Now we have taken the best of what made the Joemeek products sound great, refined it, distilled it, added to it and repackaged it.

Properly and robustly engineered for predictable, controllable performance, the new range retains the famous Joemeek sound, with its wide, flat frequency response extending from subsonic to ultrasonic. It also uses genuinely low noise circuitry, with lots of headroom (immunity to overload). Accurate calibration and metering, together with clear panel labelling, give you complete confidence in what's going on. While some equipment pays lip-service to quality and "professional rules" but fails to deliver, the Next Generation Joemeek products are founded on good solid electronic and audio engineering, and withstand direct comparison with the very best names in mixers and outboard gear.

The Joemeek range provides everything you need to get your performance onto tape/disc.

About the Designer

The Next Generation of Joemeek has been completely re-engineered by renowned audio electronics consultant Allan Bradford. With his background in physics and 30 years experience with the design of instruments, mixers, processors and amplifiers, Allan's unique range of expertise ensures that Joemeek remains at the forefront of music technology.

4 oneQ Controls at a Glance



48V PHANTOM POWER switch - feeds 48V power to the microphone XLR connector. Most condenser microphones require phantom power to operate.

IRON switch - selects transformer coupling of the Mic (XLR) inputs. The LED lights when active.

PAD switch - selects 20dB attenuation of the Mic (XLR) inputs. The LED lights when active.

LINE switch - selects the Line and INSTRument (1/4" jack) inputs instead of the Mic (XLR) input. The LED lights when active.

Ø switch - reverses the phase of all inputs.

MIC input - low impedance microphone input. Plugs in here overrides anything plugged into the Line input.

INSTRUMENT input - high impedance microphone input. Parallels the Rear Panel MIC socket. Use only one of these two sockets at a time.

PREAMP GAIN - sets the amount of audio amplification. Too little gain and the sound will be too quiet; too much and the signal could become distorted.

PEAK LED - lights 6dB below clipping.

HPF - "high-pass filter". Mainly for use with microphones, this helps remove stage rumble, handling noise and "pops". The LED lights when active.

LF - controls the volume of Low Frequencies or "Bass" in the audio spectrum. 15dB of boost or cut is available at the selected frequency.

120Hz switch - sets the frequency at which the HF control operates, in for 120Hz, out for 80Hz. The LED lights when in.

LM - controls the Lower Middle frequencies in the audio spectrum. 15dB of boost or cut is available at the selected frequency.

HM FREQ - sets the frequency at which the LM control operates, anywhere from 200Hz to 2kHz.

HM - controls the Higher Middle frequencies in the audio spectrum. 15dB of boost or cut is available at the selected frequency.

HM FREQ - sets the frequency at which the HM control operates, anywhere from 1kHz to 6kHz.

HF - controls the volume of the High Frequencies or "Treble" in the audio spectrum. 15dB of boost or cut is available at the selected frequency.

7kHz switch - sets the frequency at which the HF control operates, in for 7kHz, out for 14kHz. The LED lights when in.

EQ ON switch - turns the equalizer on. The LED lights when active.

Enhancer EFFECT - sets the amount of enhancement.

METER - analogue movement shows output signal level (VU), preamp signal level or the amount of Compressor gain reduction (GR) in dB, depending on the settings of the Meter switches. The momentary PRE switch overrides both "VU" and "GR" metering.

COMPRESS - sets the level of signal (or "Threshold") above which the signal starts to be compressed.

SLOPE - sets the compression ratio applied to signals above threshold.

ATTACK - sets how quickly the compressor responds to peaks above threshold.

RELEASE - sets the time taken for the signal to return to its normal size after compression. In general, the longer the time, the less obvious the compression.

MAKE UP GAIN - restores the level of the signal after compression.

POST EQ switch - places the Compressor after the Mequalizer in the signal path. (When this switch is out the Compressor is before the Mequalizer in the signal path). The LED lights when active.

COMP LINK - for stereo work, the master oneQ's "Compress", "Attack" and "Release" control both master and slave oneQ (the corresponding slave oneQs controls are redundant). This avoids stereo image shifts. All other controls still operate independently on both master and slave and must be set the same for correct stereo balance.

Compressor ON switch - turns the compressor on. The LED lights when active.

Enhancer RANGE - sets the frequency above which enhancement is applied. Enhancer Q - adds a resonant peak at the frequency set by the RANGE control.

Enhancer ON switch - turns the Enhancer on. The LED lights when active.

De-Esser TUNE - sets frequency at which gain reduction takes place.

De-Esser LISTEN switch - assists with tuning into the "Ess" sound by listening to the output of the side chain filter. The LED lights when active.

DE-ESS - sets the threshold above which gain reduction is applied to the "Ess" sound. The red "De_Ess" LED lights when gain reduction is taking place.

De-Esser ON switch - turns the Enhancer on. The LED lights when active.

OUTPUT GAIN - the volume control or "Fader" for the output of the oneQ. **PEAK FSD LED** - lights 6dB below clipping. "FSD" means "Full Scale Digital" and this LED also warns you if the Digital Interface is about to be overloaded.

'EXT CLK' LED - illuminates when the oneQ's digital output is successfully locked to an external word clock.

+4dB/-10dBv switch - selects the operating level of the 1/4" jack output, either to the professional +4dB level, or to the -10dBv semi-pro level.



The JOEMEEK oneQ is like having one channel of a professional recording studio in one box. It takes microphones or instruments, amplifies them, compresses and equalizes them ready to be recorded. Simple to use yet extremely powerful, the oneQ will bring out the best in any microphone or instrument and give the gloss of a professional studio production to all your performances. As well as recording it will also be found useful for live work.

Think of each channel of the oneQ as six separate items of equipment:

- The Preamplifier
- The JOEMEEK Optical Compressor
- The Meequalizer
- The Enhancer
- The De-Esser
- The Fader

Preamplifier

This is the all-important front end to the oneQ. Its job is to accept any type of microphone, instrument or other source of audio signal, and make it loud enough. Microphones often need rather a lot of amplification, while guitars, keyboards and CD players need less. Mics need to be connected to low impedance inputs, while instruments prefer high impedance inputs. To ensure correct impedance matching, the inputs are split into an XLR connector for Mics, and 1/4" jack "Line" and "INSTRument" connectors for everything else. A switch on the front panel decides which input connector is active, the XLR or the 1/4" jacks. The LED next to the switch lights to show that the Line inputs (jacks) are selected. In other words:-

Switch out (LED off) = "Mic"
Switch in (LED on) = "Line" or "Instr"

When using dynamic or ribbon mics, do not turn Phantom Power on. It probably won't do any harm but it certainly won't do any good, so leave it off! Consult the microphone handbook if you are unsure what kind of mic you have.

The main control, labelled "Input Gain", covers a range of amplification from 10dB to 60dB. In many other preamps the action of the Gain control is rather uneven, with the 40dB to 60dB range being crammed into the last 1/6th of a turn. All Joemeek preamps use a specially designed control that ensures smooth operation over the whole range of rotation. The (θ) symbol next to the 25dB mark, means unity gain, or 0dB, for a signal in the Line input. Hence for Line inputs the range of gain adjustment either side of this mark, is +35dB, -15dB.

The PEAK LED lights 6dB below clipping, so occasional brief flashes are OK but if it's on all the time you need to back the Input Gain off!
HPF means "high-pass filter". Mainly for use with microphones, this helps remove stage rumble, handling noise and "pops". The LED lights when active.

Technical stuff

Very low noise - does it matter? Yes and no, it all depends what you are doing - what really matters is "signal-to-noise ratio". All electronics produce a certain amount of background noise - it's in the nature of things. Providing there is only a relatively small amount of noise, the signal will cover it up, or "mask" it. So providing the signal is much bigger than the noise, you won't be aware of the noise. In other words the "signal-to-noise ratio" needs to be a big number, ideally such as 80dB or 90dB.

So how do you achieve that in practice? The trick is to keep the microphone as close to the sound source as possible without overloading it, so as to get as much signal out of it as possible. Then you set the Gain control to give only as much gain as is needed to get a decent level into the recorder.

Both Mic and Line inputs are electronically balanced. Note: although the Line input is not normally used for microphones, it can also be suitable for some high output unbalanced microphones, such as battery powered Electret types.

The front and rear panel Mic inputs (XLR) are balanced and wired as follows:
Pin 2: + (hot)
Pin 3: - (cold)
Pin 1: ground

The Line input (jack) is balanced and wired as follows:

Tip: + (hot)
Ring: - (cold)
Sleeve: ground

The front panel Instrument input (jack) is balanced and wired as follows:

Tip: + (hot)
Sleeve: ground (NB: use a mono jack plug).

Note that if something is plugged into the Instrument input, anything plugged into the rear panel Line input will be cut off.

Phantom power

Most high-quality studio mics are "Phantom powered", which is to say they have electronics inside them, which get their power from the preamp. Most mics require a supply of 48 Volts, so Phantom Power is often labelled "48V". The "48V" switch turns this power on or off and a red LED lights when active. When switching the Phantom Power on, quite a loud thump may be produced, so it is a good idea to turn down the Output Gain (or to momentarily select the Line input), when pressing the switch.

Of course when there is no signal going on, you may hear the background noise of the electronics. In that case, given the amount of gain in a typical studio monitoring system, this noise "floor" should ideally be in the region of -80dBu or lower, in order for it not to be noticed.

The oneQ microphone preamplifier uses state-of-the-art electronics and has an equivalent input noise of around -128dBu (with 150ohm input load). Despite all the hyperbole and obfuscation, the theoretical best possible performance for silicon-based electronics is about -132dBu. So the preamplifier design used in the oneQ and all other NextGen Joemeek products approaches this limit. To improve significantly on this would require highly specialised electronics and probably a vat of liquid Nitrogen to cool it!

The maximum gain available from the preamp is 60dB, in which case the noise floor will be -68dBu. This is actually quite noisy - if you record that noise onto a digital recorder and play it back you can definitely hear it. In practice of course, you do not record and play back "silence" and the rest of the mix will probably be more than 70dB louder than this noise and will mask it completely. Even so it is generally a good idea not to use gains greater than 40dB or 50dB and indeed, it should rarely be necessary to do so.

Insert Point

This is simply an unbalanced "Send and Return" jack on the rear panel. It allows you to patch any other pieces of equipment into the signal path, such as an effects processor or noise gate. To use it you will need a "Y" lead wired as follows:

Tip: send
Ring: return
Sleeve: ground

When no jack is inserted, the socket is internally linked, or "normalised", so that the signal flows uninterrupted. Note that the Insert Point is after the Preamp but before the Compressor and EQ.

METER

The analogue meter displays one of three things, depending on the setting of the "METER" switches.

In VU mode (GR switch out), the Meter shows signal level at the outputs, after the Output Gain fader. Note that this is relative to the selected operating level of "+4dBu" or "-10dBv". In other words, if you have selected "+4dBu" and the meter reads "0", then you have +4dBu coming out of the 1/4" jack output socket. If you have selected "-10dBv" and the meter reads "0", then you have -10dBv coming out of the output jack.

In Gain Reduction mode (GR switch in), the Meter changes to read "0" dB, when no signal is present. Whenever the compressor reduces the gain of a signal, the meter then moves "backwards" to show the amount of gain reduction taking place at any moment. Note that unlike many other products, in the oneQ this reading is a true measurement of gain reduction, derived by comparing the input and output of the PhotoOptical gain cell.

The third mode "PRE" allows the output of the preamp to be metered directly, rather like the "PFL" button on a mixing console. This is useful for adjusting the gain of the Preamp. The momentary PRE' switch overrides both 'VU' and 'GR' metering.

Compressor

The hardest device to understand, yet one of the most useful, the PhotoOptical Compressor is what gives Joemeek products their unique character. Its job is to make quiet sounds louder and loud sounds quieter, or in other words to reduce the dynamic range of the programme material.

- 1. Make Sounds Stand Out**
Because compressors make loud sounds quieter, you can boost the volume of the quiet bits without the loud bits getting even louder. That means you can raise the average level of an instrument or vocal in the mix, which has the effect of lifting it and bringing it forwards. This can actually improve vocals for example, bringing them out in front of a mix, making them sound denser, more even, and more confident!

2. Crank Up The Volume

Raising the average volume of whole mixes means they can be heard in noisy environments, such as vehicles and factories. Boosting the average level is what makes radio stations sound LOUD and the same technique is used on TV commercials too, which is why they always seem annoyingly louder than the movie you were trying to watch!

3. Protection

Fast response times are generally used to control brief transients. In other words if an occasional peak sticks its head above a maximum permitted level, the compressor clobbers it; this is known as limiting and a compressor designed solely for this purpose is known as a Limiter. Limiters are primarily used to protect recorders and monitor systems from overload, radio transmitters from overmodulation, etc. The Joemeek compressor is not primarily intended for this purpose as the Attack is not really fast enough to satisfy radio station requirements, although it is generally good enough to protect recorders and monitors, where the effect of transients is less critical. Normally you should not hear a limiter operating but if it is driven hard constantly, it can render a mix somewhat flat and lifeless.

4. Accommodation

The dynamic range of the human ear is phenomenal, extending from

the threshold of hearing (eg: a pin dropping onto soft carpet) to threshold of pain (eg: standing next to a jet aircraft) - some 120dBA in all. By contrast, vinyl, cassette tape and radio broadcasts all have a dynamic range of about half that. Since the advent of the CD, the dynamic range of the medium is far less of an issue and compressors are used more to give a certain "feel" to a production. AM and FM radio however, is still very much compressed to fit its restricted dynamic range.

5. Modification

A compressor can change the dynamics, or "envelope" of the track and it is here that the Joemeek Compressor excels!

Types of Compressor

Most compressors work in essentially the same way: a volume-controlling element or "gain cell" is inserted into the audio signal path. The level of the signal at any given moment is measured and that information is used to control the gain cell. So if the signal gets bigger, the volume is turned down. Various types of gain cell in common use include FETs, valves (tubes), light-dependent-resistors (photoelectric), digital potentiometers and voltage-controlled-amplifiers, better known as VCAs.

The oneQ Compressor is a unique recreation of the sort of photoelectric compressor used by record producer Joe Meek in the 1960's. Using modern components for consistency and reliability, it nonetheless reproduces faithfully the same punchy sound that was so characteristic of the pop records of that time.

Compression Ratio

What?? OK, it's simpler than it sounds. If the input gets 10dB louder but the output only increases by 5dB then the compression ratio is '2 to 1'. If the input goes up 10dB but the output only goes up 1dB, then the compression ratio is "10 to 1". In a theoretically ideal compressor, this ratio is the same for any size of signal above the threshold but for that to be true, the gain cell and its control circuitry must be perfectly linear over a very wide range. In

It's a bit like manually riding the volume control, except the compressor does it automatically, responding far quicker and more accurately than you ever could by hand. The compressor is applied in several ways:

- 1. Make Sounds Stand Out**

Because compressors make loud sounds quieter, you can boost the volume of the quiet bits without the loud bits getting even louder. That means you can raise the average level of an instrument or vocal in the mix, which has the effect of lifting it and bringing it forwards. This can actually improve vocals for example, bringing them out in front of a mix, making them sound denser, more even, and more confident!

2. Crank Up The Volume

Raising the average volume of whole mixes means they can be heard in noisy environments, such as vehicles and factories. Boosting the average level is what makes radio stations sound LOUD and the same technique is used on TV commercials too, which is why they always seem annoyingly louder than the movie you were trying to watch!

3. Protection

Fast response times are generally used to control brief transients. In other words if an occasional peak sticks its head above a maximum permitted level, the compressor clobbers it; this is known as limiting and a compressor designed solely for this purpose is known as a Limiter. Limiters are primarily used to protect recorders and monitor systems from overload, radio transmitters from overmodulation, etc. The Joemeek compressor is not primarily intended for this purpose as the Attack is not really fast enough to satisfy radio station requirements, although it is generally good enough to protect recorders and monitors, where the effect of transients is less critical. Normally you should not hear a limiter operating but if it is driven hard constantly, it can render a mix somewhat flat and lifeless.

4. Accommodation

The dynamic range of the human ear is phenomenal, extending from

practice only compressors based on VCAs and digital potentiometers are likely to behave in this way.

Some compressors have a control to set the ratio anywhere between 1:1 (ie: no compression), and 20:1 (which would be regarded as a "brick wall limiter"). In the oneQ the "Slope" or "Compression Ratio" is variable from 1:1 (ie: no compression) to 10:1. Slopes around 3:1 are gentle for vocals while higher slopes are hard for drums and guitars. However that's not all there is to it.

Variable Ratio

In the Joemeek optical compressor the compression 'threshold' is not clearly defined and the compression ratio varies with the amount of compression applied. Suppose the 'Slope' control is set to 5:1. For signals only just exceeding threshold, the ratio is little more than 1:1. As the compressor is driven harder the ratio rises to 5:1, at least up to a point. It is a feature of the Joemeek compressor that the compression ratio actually reduces again during large transients and, adjusted correctly, this helps to retain brightness that is often lost with other types of compressor. This is why vintage compressors often sound more lively than their modern counterparts.

Controls

'COMPRESS' sets the level of signal (the "Threshold") above which the signal starts to be compressed. Turning the compression control clockwise lowers the compression threshold, and drives the compressor harder.

'SLOPE' sets the average compression ratio applied to signals above threshold. Lower settings (anti-clockwise) have less effect. Turning the control clockwise increases the ratio and makes the effects of compression more dramatic. At maximum (10:1) the Joemeek compressor effectively becomes a limiter.

'ATTACK' sets how quickly the compressor reacts to peaks above threshold. Turn this control anticlockwise for a quick response. Slower (clockwise) allows the fast leading edge of percussive sounds to pass uncompressed for a moment, before the compressor reacts to control the gain. This example of "changing the envelope" of a sound exaggerates the percussive nature of drums and other instruments. Settings around mid-position are used where the compression needs to be less obvious. Vocals for example, require Attack times around 10ms for natural sounding results. Faster attack times (anti-clockwise) in conjunction with large amounts of compression, result in extreme "pumping" effects.

'RELEASE' sets how long the compressor goes on squashing the sound for, once the signal has dropped below threshold. If it stopped instantly there would be very noticeable modulation or "pumping" of the sound. So we may want it to stop compressing less abruptly and that is what the Release control is for. Generally, the longer the Release time, the less obvious is the compression. Of course some "pumping" might actually be desirable as a special effect and that is another way in which the envelope of a sound can be modified. The oneQ Release is variable from 100ms up to 3 seconds giving a wide variety of effects.

How the compressor behaves actually changes with programme content and volume. So experiment with the controls with different kinds of material to discover the range and depth of effects that can be achieved. The 'COMP' in/out switch allows comparison between compressed and uncompressed sound (blue LED lights when active). Remember that the 'MAKE UP GAIN' is there to restore the level of the signal after compression. Correctly adjusted, there will be no change in volume as the Compressor 'ON' switch is operated.

The Compressor is normally after the Preamplifier and the Insert Point, and before the Meequalizer. Pressing the POST EQ switch however, places the Compressor after the Meequaliser.

'COMP LINK'


This is important when two oneQ's are used together for stereo work. When two mono compressors are used for stereo, differing amounts of gain reduction occur in each channel, which causes the stereo image to wander. The "Comp Link" switch avoids this problem by summing the compressor control paths of both oneQ's and assigning control of the slave oneQ's gain cell to the master oneQ. The "Compress", "Attack" and "Release" on the master then operate both oneQ's and the corresponding slave oneQ controls are redundant. Note however that all other controls still operate independently on both oneQ's and must be set the same for correct stereo balance. The LED lights when active.

Meequalizer

The oneQ "Meequalizer" is a highly effective, versatile and musically rewarding four-band equalizer, or tone control system. Each stage allows boost or cut of up to 15dB around the frequency in question. The "EQ" switch turns the equalizer on, and the green LED lights when active.

The LF band is centred at either 80Hz or 120Hz. Cutting can be used to reduce unwanted LF noise, such as hum or rumble. Boosting can bring out the warmth and body of bass lines and (especially around 80Hz) kick drums.

The Lower Mid band can be tuned or "swept" anywhere between 200Hz and 2kHz. It may help to think of it as like a graphic equalizer, only instead of lots of frequency bands, you have just one, but it can be moved to cover any given frequency band. Cutting the Lower Mid can reduce boominess or other annoying resonances. Boosting can bring out the body and warmth of a vocal, or the harmonics of bass instruments.

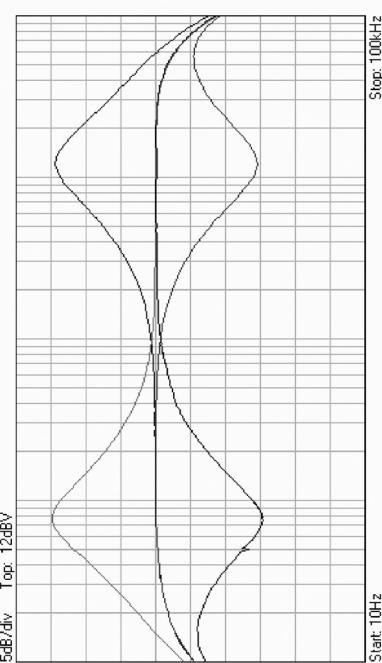


The EQ 'ON' switch allows comparison between equalised and unequalised sound (LED lights when the Meequalizer is active).

The Meequalizer is normally after the Preamplifier, the Insert Point and the Compressor. Pressing the POST EQ switch however, places the Meequalizer before the Compressor.

Technical stuff

Each section of the Meequalizer has a peaking or "bell" shaped frequency response, which will be found to be musically more satisfying than conventional "shelving" equalizers. The use of bell curves at LF and HF also avoids boosting subsonics and ultrasonics which can have adverse effects on other studio equipment, such as recorders, monitor amplifiers and speakers. The "Q" value of the peaking filters is 0.9 (or 1.6 octaves). Zero phase distortion ensures the best possible audio coherence.

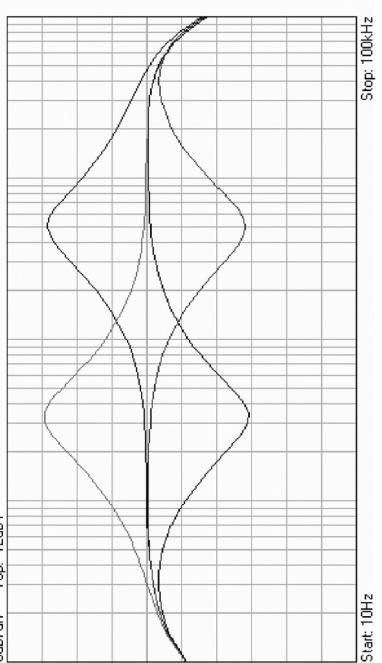

Mid frequency response (at 300Hz and 5kHz)

The enhancer imparts a sense of presence and clarity to all types of programme material. It does so by analysing a range of upper mid frequencies and synthesizing musically related harmonics, which are then added in small quantities to the original signal.

The 'EFFECT' control sets the percentage of harmonics to be mixed with the original, while 'TUNE' selects the range of upper mid frequencies used for harmonic synthesis (the part of the audio spectrum above the indicated frequency will be processed). 'Q' emphasizes a narrow range of frequencies around the frequency set by the 'TUNE' control and this can be used to concentrate processing on a particular band of frequencies. Using the 'TUNE' and 'Q' controls together allows the Enhancer to lift out a particular part of a voice or mix.

The 'ON' switch allows comparison between processed and unprocessed sound (LED lights when the Enhancer is active).

DE-ESSER

The De-Esser can be used to remove or reduce annoying sibilance in vocal recordings, such as the "S" or "T" sound. It is basically a frequency-conscious compressor that compresses only a narrow range of frequencies rather than the whole spectrum.

The 'TUNE' control sets the filter to match the "Ess" frequency and the best way to do this is to press the 'LISTEN' switch so as to hear only the output of the filter, then adjust the 'TUNE' control until the "Ess" is at maximum loudness. The 'DE-ESS' control sets the amount of gain reduction within the 'Ess' band.

The 'ON' switch allows comparison between processed and unprocessed sound (LED lights when the De-Esser is active) and the 'DE-ESS' LED lights when gain reduction is taking place.

possible common-mode rejection of interference, can be achieved at the receiving end.

Digital Interface

The Joemeek Digital Audio Interface provides high quality digital audio outputs plus the ability to synchronize to an external word clock. The digital audio outputs are compatible with most digital recorders, as well as Digital Audio Workstations and mixers. S/PDIF format is available from the optical and RCA phono connectors, while the transformer coupled XLR connector provides an AES3 compatible output.

Alternatively the oneQ may be set to the frequency of an external master word clock, generated, for example, by the studio's recorder or DAW. When connected to the BNC socket provided, a suitable external word clock will be detected automatically and will override the oneQ's internal word clock. The front panel LED labelled 'EXT CLK' illuminates when the oneQ is successfully locked to an external word clock.

To avoid distortion, care should be taken not to overdrive the input to the Digital Interface. The red LED next to the Output Gain control is labeled "PEAK FSD" which stands for "Full Scale Digital". Occasional flashes are OK but if it is on all the time, turn something down!

'OUTPUT GAIN'. This output volume control provides up to 10dB of gain and also goes right down to nothing, so acting as a fader to fade a sound out completely.

CONNECTORS

Two outputs are provided, jack and XLR, so you can simultaneously feed (say) a recorder and a monitor amplifier. The switch adjacent to the 1/4" jack selects the output operating level to either +4dBu (suits most professional studio equipment) or -10dBv (suits semi-pro or hi-fi equipment). The XLR output is always +4dBu. Check with the handbook for whatever you are feeding, to find out which level is required.

The XLR output is balanced and wired as follows:

Pin 2: + (hot)
Pin 3: - (cold)
Pin 1: ground

The jack output is balanced and wired as follows:

Tip: + (hot)
Ring: - (cold)
Sleeve: ground

Balanced or Unbalanced

To run the XLR output unbalanced, it will be necessary to ground pin 3 of the cable connector. To run the 1/4" jack output unbalanced, just plug in a mono jack plug. Either way, this increases the gain of the "+" signal by 6dB, so there is no drop in level compared with balanced gear.

All outputs on all NextGen Joemeek products are properly balanced, which is to say there is a signal on both pins! In this way the maximum

Note that the Digital Interface is a two-channel device, with channel one fed by the oneQ's internal circuitry. In order to utilize the second digital channel, an external analog input is provided in the form of a balanced 1/4" jack on the rear panel wired as follows:


Tip: + (hot)
Ring: - (cold)
Sleeve: ground

In this way the output of the oneQ and another analog source can be fed into one digital input of a recorder or digital workstation.



GETTING CONNECTED

The figure shows the oneQ being used instead of a mixing desk in a recording setup:

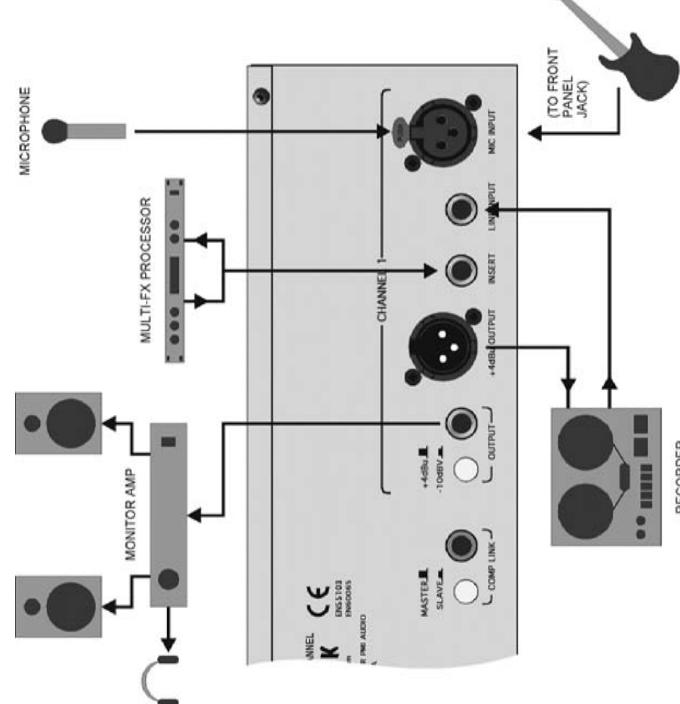

- A microphone is connected to the Mic Input

- A guitar is connected to the Instrument Input

- The insert point is being used to divert the preamplified signal through an external effects processor

- The 'recorder' output is connected to the Line Input for playback. Previously recorded tracks may also be replayed via the Line Input to permit compression and equalization

POWER SUPPLY

Connect the oneQ power cord to the AC connector on the rear panel and switch on the mains supply. NB: ensure that the oneQ is set to the correct mains voltage for your region – either 115V or 230V. Orientate the fuse holder / mains voltage selector draw so that the required voltage appears at the top. If in doubt consult a competent engineer.

Using the Preamp

Turn the 'INPUT GAIN' control to minimum and connect the input source. If you are using a condenser microphone, remember to switch on the 48V Phantom Power. Set the 'OUTPUT GAIN' to "0dB". Turn up the 'INPUT GAIN' until the microphone sound registers on the VU Meter, adjusting it so that the meter reads between "0" and "+3" on sound peaks. When the red LED (labeled "Peak") lights, the oneQ is within 6dB of clipping. Occasional flashes are OK but if it is on all the time, turn the Input Gain down!

Remember you can check the preamp gain at any time by pressing the "Meter Pre" button.

Using the Compressor

Start with the Compressor and Mequalizer off and adjust the input and output gain so that the VU Meter reads around 0dB. Now switch the meter to read gain reduction using the 'GR' pushbutton.

Set 'COMPRESSION' and 'ATTACK' fully anti-clockwise, with 'SLOPE' and 'RELEASE' at mid-position. Press the Compressor "ON" push-button and turn up the 'COMPRESSION' control until the compressor GR meter starts to read -3dB or -5dB on audio peaks. You should now be able to hear the compressor working as the volume diminishes. Use the 'MAKE UP GAIN' control to restore the signal to its previous (uncompressed) level. Alter the SLOPE and listen to how the severity of the gain reduction changes. Try changing the Attack and Release times should emphasise this even more and the compressor should start to 'pump' audibly.

The overall result of compression depends on the combined settings of the Compress, Slope, Attack and Release controls. Experiment with different combinations to discover what best suits the material you wish to compress. Watch the GR meter and don't overdo things - it's possible to apply 20dB of gain reduction before you realise it!

Use the Compressor 'ON' switch to make comparisons between compressed and uncompressed signals.

Using the Meequalizer

Always start with the Meequalizer boost/cut controls (LF, MID and HF) set to "0" (the control knobs set vertically, in their centre notches). This setting is also known as "flat".

Troubleshooting

Then turn up the 'Q' control and use the 'TUNE' control to hunt around for particular elements of a voice or mix. With the Enhancer you will usually find that "less is more" and it is as well to keep the 'EFFECT' and 'Q' settings fairly low. It is very easy to add too much harmonic and though the effect can be dramatic at first, it will soon become wearing and contribute to listening fatigue. If you can hear audible distortion creeping in you are definitely overdoing it, so turn down the 'EFFECT' control and/or raise the 'TUNE' setting.

Use the 'ON' switch to make comparisons between processed and unprocessed sound. The nature of harmonic enhancement is such that you may not realise how much effect it is having until you turn it off!

Using the De-Esser

Set the 'DE-ESS' control fully anticlockwise. Press the 'ON' and 'LISTEN' switches so as to hear only the (somewhat shrill) output of the filter, then adjust the 'TUNE' control until the "Ess" sounds are at maximum loudness. Turn the 'LISTEN' switch off again and advance the 'DE-ESS' control until the sibilance is reduced to an acceptable, natural sounding level.

Be sure that the 'LISTEN' switch is off (out) prior to any recording!

Use the 'ON' to make comparisons between processed and unprocessed sound.

Using the Output Stage

Final adjustments to the output level can be made with the OUTPUT Gain control, again keeping an eye on the VU meter and PEAK FSD LED. Note how this control can also be used to fade out the signal completely.

5) Too little or too much compression

• Turn the 'Input Gain' control up or down respectively, to adjust the signal level to the compressor

6) The Mequalizer doesn't work.

• Is the EQ 'ON' switch in (LED on)?
• Is 'Input Gain' control turned up?
• Is 'Output Gain' control turned up?

7) The Enhancer doesn't work

• Is the Enhancer 'ON' switch in (LED on)?
• Is 'Effect' control turned up sufficiently?
• Does the programme material contain only low-bass frequencies?

8) The De-Esser doesn't work

• Is the De-Esser 'ON' switch in (LED on) and the 'LISTEN' switch out (LED off)?
• Is 'De-Ess' control turned up?
• Does the programme material contain only low frequencies?

9) Too much noise

• Is the 'Input Gain' control too high? Try moving the mic closer to the source
• Is the 'Compressor' control turned up enough?
• Is the 'Slope' control turned up enough?
• Is there enough signal, as set by the 'Input Gain' control, to drive the compressor?

10) Sounds distorted

• Is the 'Input Gain' control too high?
• Is the 'Output Gain' control too high?
• Is there too much EQ boost?
• When using the compressor, is the Release control set too low?
• Is the Enhancer on with the 'Effect' control set too high and/or the 'Tune' control set too low?

- 1) **No Power (no lights work)**
 - Is the power supply plugged in (both ends)?
 - Is the mains power on?
 - Is the mains voltage set correctly for your region?
 - Has the mains fuse blown?

2) The microphone doesn't work

- Is it connected to the correct (XLR) input on the front or rear panel?
- If it is a condenser microphone, is the phantom power switched on?
- Is the 'Line' switch out (LED off)?
- Is the 'Input Gain' control turned up?
- Is the 'Output Gain' control turned up?

3) The line input doesn't work

- Is the source connected to the correct (jack) input on the back of the unit?
- Is the 'Line' switch in (LED on)?
- Is the 'Input Gain' control turned up?
- Is the 'Output Gain' control turned up?

4) The compressor doesn't work

- Is the Compressor 'ON' switch in (LED on)?
- Is the 'Compress' control turned up enough?
- Is the 'Slope' control turned up enough?
- Is there enough signal, as set by the 'Input Gain' control, to drive the compressor?

- 5) Too much noise
- 6) The Meequalizer doesn't work.
- 7) The Enhancer doesn't work
- 8) The De-Esser doesn't work
- 9) Too much noise
- 10) Sounds distorted

Technical Specification

Input impedances	Mic: 1.2kohm; Line: 20kohm	Compressor release time	0.1 sec to 3 sec (adaptive)
Pre-amp overall gain	10dB to 60dB (variable)	EQ Boost and Cut	+/-15dB (zero phase-shift bell response)
Common mode rejection	70dB	EQ "Q"	0.9 (1.6 octaves)
Equivalent input noise	-128.5dBu (unweighted)	LF Frequency	80Hz/120Hz switchable
Distortion	0.001% (below Compressor threshold)	LHF Frequency	200Hz to 2kHz variable
Frequency response	15Hz to 70kHz (-3dB)	HMF Frequency	1kHz to 6kHz variable
Maximum input before clipping	Mic: +21dBu; Line: +45dBu	HF Frequency	7kHz/14kHz (selectable)
Headroom before clipping	+21dBu	Nominal output levels	+4dBu/-10dBv
Pad	20dB attenuation	Output impedance	100 ohm
High Pass Filter	12dB per octave cut below 80Hz	Output Level switch	12dB attenuation
Compressor threshold	-6dBu to +22dBu (variable)	Noise Floor	-85dBu (typical, with ~40dB mic gain)
Compressor ratio	1:1 to 10:1 (variable)	VU Meter	Analogue movement
Compressor attack time	1 msec to 100 msec (adaptive)	Power supply	115V / 230V ac mains, 50/60Hz
		Power consumption	30W
		Mechanical	482W x 88H x 220D (overall)
		Weight	3 kilos

Notes



Notes

Joemeek Limited Warranty

THIS PRODUCT IS FOR PROFESSIONAL USE ONLY
PMI Audio Group warrants that all products will be free from defects in material or workmanship:

A: For a period of (3) three years from the date of purchase (hereinafter the labor warranty period), PMI Audio Group will repair or replace this Product if determined to be defective. After the expiration of the labor warranty period, the Purchaser must pay labor charges.

B: In addition, PMI Audio Group will supply, at no charge, replacements for defective parts for a period of (three years) from the date of purchase. During the labor warranty period, to repair the Product, Purchaser must return the defective Product, freight prepaid, or deliver it to PMI Audio Group Service Center. The product to be repaired is to be returned in either its original carton or a similar package affording an equal degree of protection. PMI Audio Group will return the repaired Product freight prepaid to the Purchaser. PMI Audio Group is not obligated to provide Purchaser with a substitute unit during the warranty period or at any time.

Conditions

1. **Notification of claims: Warranty Service:** If Purchaser discovers that the Product has proven defective in material or workmanship, then written notice with an explanation of the claim shall be given promptly by Purchaser to PMI but all claims for warranty service must be made within the warranty period. If after investigation PMI determines that the reported problem was not covered by the warranty, Purchaser shall pay PMI for the cost of investigating the problem at its then prevailing time-and-materials rate. No repair or

replacement by Purchaser of any Product or part thereof shall extend the warranty period as to the entire Product. The specific warranty on the repaired part only shall be in effect for a period of ninety (90) days following the repair or replacement of that part or the remaining period of the Product warranty, whichever is greater.

2. **Exclusive Remedy: Acceptance:** Purchaser's exclusive remedy and PMI's sole obligation is to supply (or pay for) all labor necessary to repair any product found to be defective within the warranty period and to supply, at no extra charge, new or rebuilt replacements for defective parts. If repair or replacement fails to remedy the defect, then and only in such an event, shall PMI exchange to Purchaser a new or reconditioned unit. Purchaser's failure to make a claim as provided in paragraph 1 above or continued use of the product shall constitute an unqualified acceptance of such Product and a waiver by Purchaser of all claims thereto.

3. **Exceptions to Limited warranty:** PMI shall have no liability or obligation to Purchaser with respect to any Product subjected to abuse, improper use, negligence, accident, modification, failure of the end-user to follow the operating and maintenance procedures outlined in the users manual, attempted repair by non-qualified personnel, operation of the unit outside of the published environmental and electrical parameters, or if such products original identification (trademark, serial number) markings have been defaced, altered, or removed. PMI excludes from warranty coverage, Products sold AS IS and/or WITH ALL FAULTS and excludes used products which have not been sold by PMI to the Purchaser. PMI also excludes from warranty coverage consumables such as fuses and batteries, tubes, etc.

4. **Proof of purchase:** The dealer's dated bill of sale must be retained as evidence or the date of purchase and to establish warranty eligibility

Disclaimer of Warranty

EXCEPT FOR THE FORGOING WARRANTIES, PMI HEREBY DISCLAIMS AND EXCLUDES ALL OTHER WARRANTIES, EXPRESS OR LIMITED, INCLUDING, BUT NOT LIMITED TO ANY OR ALL IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND/OR ANY WARRANTY WITH REGARD TO ANY CLAIM OF INFRINGEMENT THAT MAY BE PROVIDED IN SECTION 2-312(3) OF THE UNIFORM COMMERCIAL CODE AND/OR IN ANY COMPARABLE STATE STATUE. PMI HEREBY DISCLAIMS ANY REPRESENTATIONS OR WARRANTY THAT THE PRODUCT IS COMPATIBLE WITH ANY COMBINATION OF NON-PMI AUDIO PRODUCTS PURCHASER MAY CHOOSE TO CONNECT TO THE PRODUCT.

Limitation of Liability

THE LIABILITY OF PMI, IF ANY, AND PURCHASER'S SOLE AND EXCLUSIVE REMEDY FOR DAMAGES FOR ANY CLAIM OF ANY KIND WHATSOEVER, REGARDLESS OF THE LEGAL THEORY AND WHETHER ARISING IN TORT OR CONTRACT, SHALL NOT BE GREATER THAN THE ACTUAL PURCHASE PRICE OF THE PRODUCT WITH RESPECT TO WHICH SUCH CLAIM IS MADE. IN NO EVENT SHALL PMI BE LIABLE TO PURCHASER FOR ANY SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND INCLUDING, BUT NOT LIMITED TO, COMPENSATION, REIMBURSEMENT OR DAMAGES ON ACCOUNT OF THE LOSS OF PRESENT OR PROSPECTIVE PROFITS OR ANY OTHER REASON WHATSOEVER.

Information in this User Guide is subject to change without notice. No part of this User Guide may be reproduced or transmitted in any form or by any means, electronic, mechanical or by any other means, for any purpose, without the express written permission of PMI Audio Group.

PMI Audio Group may have trademarks, copyrights or other intellectual property rights covering the subject matter of this User Guide. Except as expressly provided in any written agreement from PMI Audio Group, the furnishing of this User Guide is provided for the sole use of the authorized User [or Service Agent where applicable] and does not give the User any license to use any trademarks, copyrights or other intellectual property of PMI Audio Group.

PMI, PMI AUDIO, TED FLETCHER, MEQUALIZER, STUDIO PROJECTS, JOEMEEK, TOFT AUDIO DESIGNS, CURRENTSENSE, MEERPHONE, TRAKPAK, and (if it Sounds Right...It is Right) are either registered trademarks or trademarks of PMI Audio Group in the U.S.A. and/or other countries. Copyright © 2005 PMI Audio Group. All rights reserved.

Owners Registration Card

TO BE COMPLETED AT TIME OF PURCHASE

Name _____

Date of Purchase _____

Serial Number _____

Dealer's Name _____

RETAIN FOR YOUR RECORDS
PLEASE DISPATCH AND RETURN
YOUR REGISTRATION
TO JOEMEEK WITHIN 14 DAYS
OF PURCHASE

Specifications and model numbers are subject to
change without notice

Product Registration Information
Please Fill in the Below Sections and Return

Name: _____
Address: _____
City: _____ State: _____ Zip Code: _____
Telephone Number: _____ email Address: _____
Model Purchased: _____ Date Purchased: _____
Serial Number: _____ Dealer: _____
Comments: _____

What magazines do you read to influence your buying decision: (please check all that apply)

Mix Electronic Musician EQ Sound on Sound Pro Audio Review Recording Audio News Audio MIDI