

Numark

OPERATING INSTRUCTIONS



CONTENTS

Safety Precautions	1
Setup & Installation	2
Controls	3
Cable Setup	7
Platter Setup	8
Interchanging Tonearm Tubes	9
Tone Arm Setup	10
Cartridge Setup	11
Important Notes	12
Interchanging Controls	13
Operation	15
Specifications	15
Trouble Shooting	16
Warranty Information	17
Return Information	18

CAUTION!

TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



IMPORTANT

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



NOTICE

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

NOTICE

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Thank you for buying this Numark product.

Please read these operating instructions so you will know how to operate this equipment properly. After you have finished reading these instructions, keep them for future reference.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION:

This product satisfies FCC regulations when shielded cables and connectors are used to connect the unit to other equipment. To prevent electromagnetic interference with electric appliances such as radios and televisions, use shielded cables and connectors for connections.

IMPORTANT NOTICE:

RECORD THE MODEL NUMBER AND SERIAL NUMBER OF THIS EQUIPMENT BELOW.

MODEL NO: _____

SERIAL NO: _____

SAFETY PRECAUTIONS

READ INSTRUCTIONS

All the safety and operating instructions should be read before the product is operated.

RETAIN INSTRUCTIONS

The safety and operating instructions should be retained for future reference.

HEED WARNINGS

All warnings on the product and in the operating instructions should be adhered to.

FOLLOW INSTRUCTIONS

All operating and use instructions should be followed.

CLEANING

Unplug this product from the wall outlet before cleaning. The product should be cleaned only with a polishing cloth or a soft dry cloth. Never clean with furniture wax, benzene, insecticides or other volatile liquids since they may corrode the cabinet.

ATTACHMENTS

Do not use attachments not recommended by the product manufacturer as they may cause hazards.

WATER AND MOISTURE

Do not use this product near water - for example, near a bathtub, washbowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.

ACCESSORIES

Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

CART

A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.

POWER SOURCES

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.

LOCATION

The appliance should be installed in a stable location.

NONUSE PERIODS

The power cord of the appliance should be unplugged from the outlet when left unused for a long period.

GROUNDING OR POLARIZATION

If this product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other), it will fit into the outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. If this product is equipped with a three-wire grounding type plug, a plug having a third (grounding) pin, it will only fit into a grounding type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.

POWER-CORD PROTECTION

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

OUTDOORS ANTENNA GROUNDING

If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

LIGHTNING

For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

POWER LINES

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.

OVERLOADING

Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

OBJECT AND LIQUID ENTRY - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

SERVICING

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

DAMAGE REQUIRING SERVICE

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

When the power-supply cord or plug is damaged.

If liquid has been spilled, or objects have fallen into the product.

If the product has been exposed to rain or water.

If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.

If the product has been dropped or damaged in any way.

When the product exhibits a distinct change in performance - this indicates a need for service.

REPLACEMENT PARTS

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

SAFETY CHECK



Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

HEAT

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.


SETUP & INSTALLATION

This turntable has been designed exclusively for DJ use and can be setup in a variety of different ways depending on your mixing style. The turntable should rest on a level and stable surface that is clear of obstructions. If a mixer is placed between two turntables make sure that there is at least $\frac{1}{4}$ " (7mm) between the mixer and the turntables to prevent damage to the turntables and to reduce unwanted system noise.

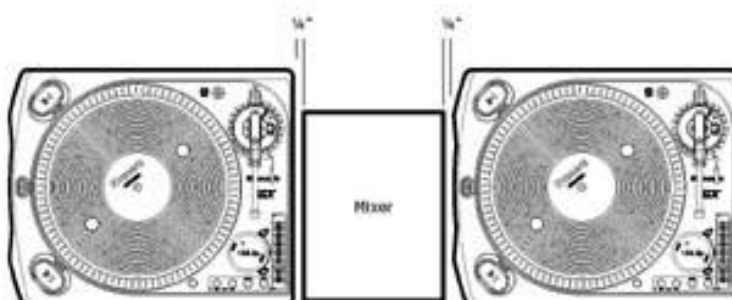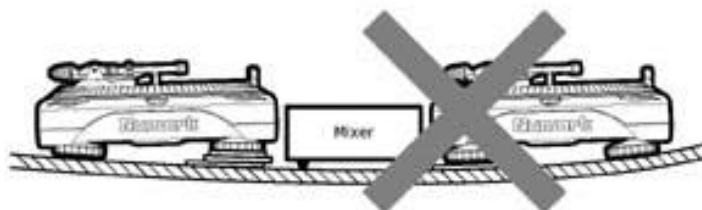

Setup Style 1 (traditional)

Best For:
Long mixes and blending
techniques

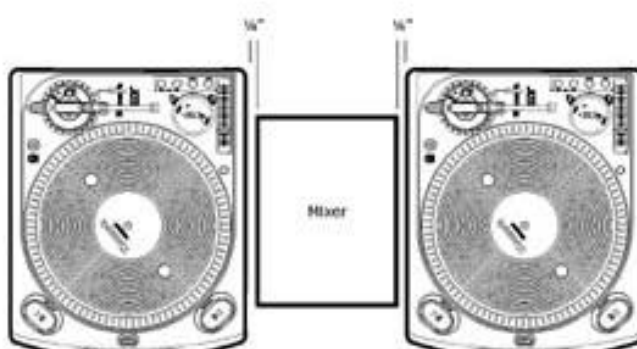

Setup Style 2 (battle style, scratching)

Best For:
Scratching, cutting, and aggressive
mixing techniques

There are many variations of these setups. Find the best setup that works for your mixing style by experimenting with different turntable and mixer placements. It is strongly recommended that the top mixer surface and the top flat surface of the turntable be at the same level.

CONTROLS

General Controls

1. Power Button

This button turns on the turntable when pressed. It illuminates blue when the turntable is switched on.

2. Start/Stop Buttons

These buttons start and stop the turntable motor. Both buttons have the same function.

3. Platter

This turntable has a special edge design that has been optimized for "dragged" platter slow downs. (NOTE: The pattern will appear to stand still when the Pitch Range is set to 0% and the Target Light is being used.)

4. Reverse Button

Pushing this button down will reverse the rotation direction of the turntable platter.

5. Start Time Adjuster

This control can be rotated to increase or decrease the startup time of the motor.

6. Braking Time Adjuster

This control can be rotated to increase or decrease the stopping time of the motor.

7. Strobe Target Light and Power Jack


This aluminum light can be rotated depending on the head shell position and the amount of light required on the vinyl record surface. The light also strobes against the platter edge making the pattern appear to stand still when the Pitch Range is at 0%.

8. 33 and 45 RPM Buttons

These buttons control the RPM of the turntable platter. When both of the 33 and 45 RPM buttons are pressed, the 78 RPM mode will engage.

9. Key Lock

This button locks the key of the music at the relative position of the Pitch Fader. This processing effect is only available when the LINE output is used.

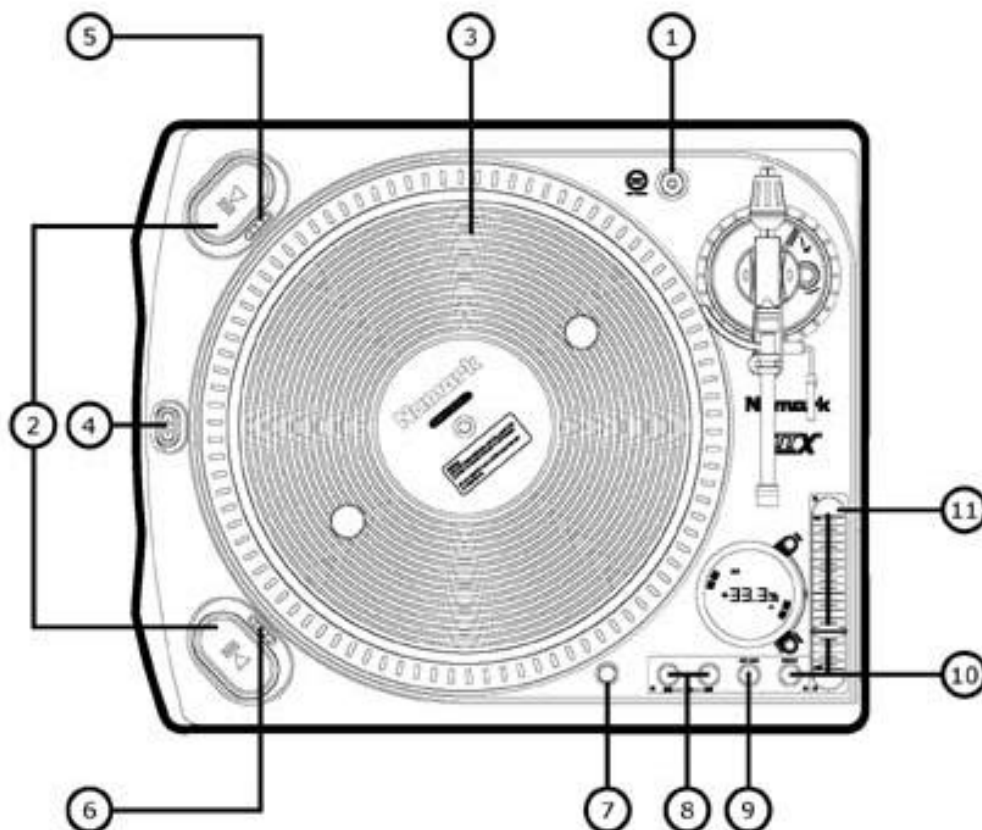

CONTROLS *continued*

10. Quartz Button

This button locks the pitch at 0% using Quartz Motor Control when it is pressed.

11. Pitch Fader

This slide control allows the pitch of the playback source to be changed. In the center position the pitch is at 0%. Moving the fader knob closer to you will increase the pitch. The Pitch Slider is enclosed in an Interchangeable/Replaceable Cartridge.

Tone Arm Parts

12. Counterweight and Scale Ring and S-Weight

The Counterweight is used to balance the head shell and cartridge assembly so that the proper amount of stylus pressure is applied to the record. The S-Weight should be used in most cases when the S-Shaped tube is used. It is fastened to the tonearm by threading it into the rear weight balance shaft. The S-weight can be stored below the counterweight in the top cabinet while not in use.

13. Height Adjust Ring

Turning this ring counter-clockwise raises the tonearm up to 6mm to accommodate for different Slipmat thicknesses. This ring can not be adjusted unless the Height Lock Lever (12) is unlocked.

14. Height Lock Lever

Turning this lever towards the direction of the arrow (clockwise) unlocks the Height Adjust Ring (11) so that the tonearm height can be adjusted.

15. Anti-Skate Adjustment

This knob is used to compensate for inward tracking forces. See tonearm setup for more details on its settings.

16. Secondary Tube Lock Collar

This collar is used to secure the tonearm tubes (straight or s-shaped) to the tonearm assembly.

WARNING:

DO NOT OVERTIGHTEN THIS LOCK COLLAR!

WARNING:

CONNECTING HEADSHELLS TO THIS COLLAR MAY DAMAGE THE INTERNAL PIN HEIGHTS OF THE CONTACTS! ONLY CONNECT NUMARK TUBES TO THE SECONDARY TUBE LOCK COLLAR.

17. Arm Clip


This specially designed arm clip secures the tone arm while it is being transported or not in use. The arm clip has been designed to remain in the up position while unlocked.

18. Tonearm Cue System

This cueing system allows the tone arm to be positioned at a certain point above the record and slowly engaged. When the lift lever is in the up position the tone arm should rest on the armrest. When the lift lever is lowered, the tone arm is slowly lowered until the stylus is resting on the record.

19. Tone Arm Lock Nut

This Aluminum nut is used to secure the head shell and cartridge assembly to the tone arm tube. See cartridge setup for more details.

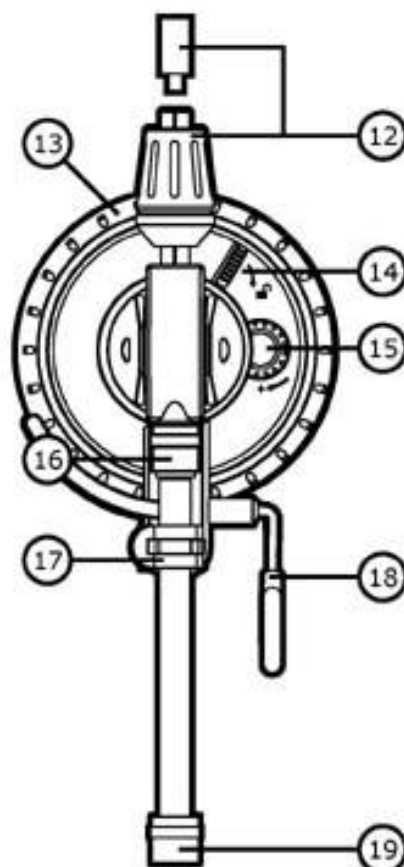

CONTROLS continued

Bottom Parts

20. Adjustable Rubber Dampening Feet

When all of the feet of the turntable are completely tightened, the top flat surface of the turntable will be at 85mm. Unscrewing these feet raises the turntable up to compensate for unlevelled surfaces.

21. Carrying Handles

These handles provide a secure grip so that the turntable may be comfortably transported.

22. Voltage Selector Fuse

This rotating Fuse Holder switches the internal voltage transformer between 100V, 120V, 220V and 240V. The turntable should be shipped with the proper voltage setting for your region. Check that the arrow is pointing to the proper voltage before connecting the IEC power cord to prevent damage to the turntable.

23. IEC Power Terminal

This IEC Power Terminal can be used with any IEC power cable, but it is recommended that the supplied IEC power cable be used.

24. RCA Output w/Selectable Level

These stereo output jacks allow the turntable to be connected to a compatible device with a PHONO level input OR a LINE level input.

25. PHONO/LINE Level Switch

This two position switch should be set to the proper output level depending on the connected source.

NOTE: KEY LOCK processing is only available when the LINE output is used.


NOTE: No ground wire is needed for the PHONO level output. The PHONO level output bypasses all of the digital signal processors for a more traditional output sound.

26. Remote Start Jack (CABLE NOT INCLUDED)

This 3.5mm jack allows the turntable to be remotely started or stopped by a foot switch or other "Lock-Switch" based device. NOTE: This jack may provide undesired results when used with "Fader Start" mixers. Test performance with each device until the desired performance is reached.

27. Digital Output (SPDIF, Coax)

This post-session output is used connecting the TT-X1 to a compatible device that can accept an incoming digital sampling rate of 44.1 kHz. Always connect and disconnect this output while the power is OFF. This output may be connected while the PHONO/LINE output is connected.

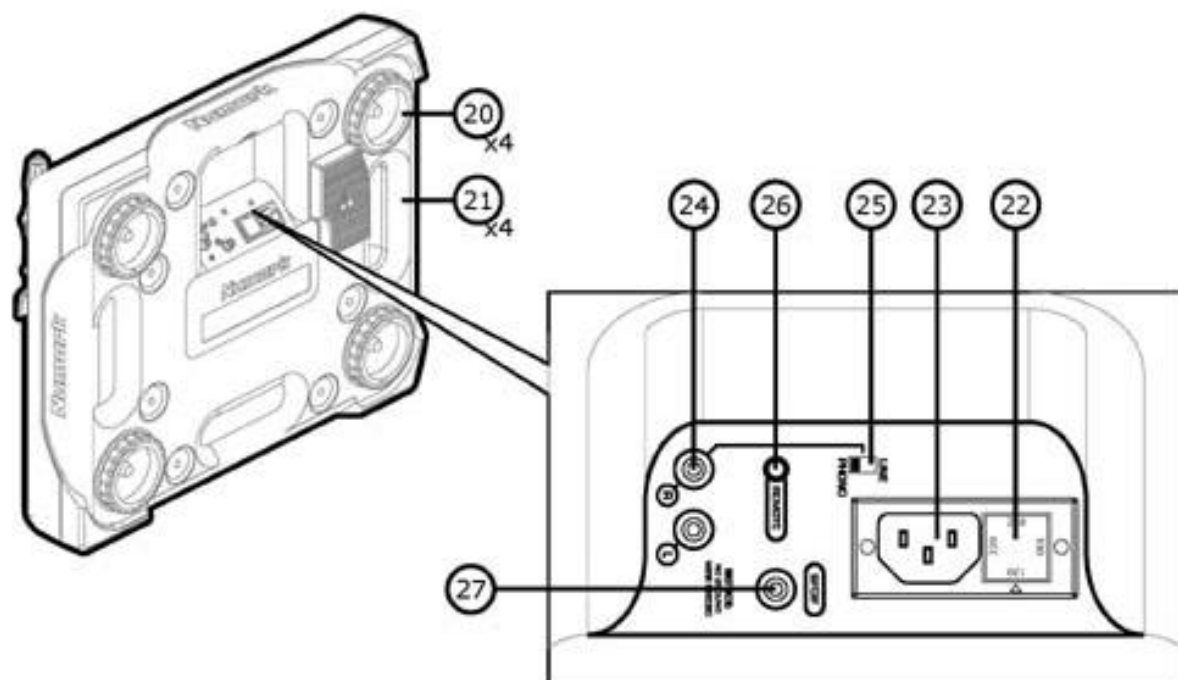

CONTROLS continued

Understanding the Display

The Display of the TT-X1 was developed to instantly provide usable feedback regardless of the turntable orientation. Understanding its functions may improve your skill level.

28. Platter Direction Sensors

Whether the turntable platter is turning or stopped, these segments indicate the direction of rotation. They move in pairs on opposite sides of the display.

NOTE: If the platter is removed while the turntable is powered on, the entire ring of segments will flash indicating that the drive magnets have been pulled apart and the motor has entered PROTECTION MODE. It is recommended that the turntable be powered off after it enters PROTECTION MODE before replacing the platter.

29. Multi-Function Segment Indicators

Depending on the display mode, these Indicators may provide pitch, BPM or motor settings. See the independent functions of the PITCH, BPM and MOTOR CONTROLS for additional information.

30. BPM Button

Pressing this button will toggle the center section of the display between the current pitch setting and an estimated beats per minute (BPM) reading. If this button is pressed and held for 2 seconds, the BPM counter will recalculate the BPM estimation. If the display is indicating a steady "---" this means that the TT-X1 is calculating the BPM range OR it is unable to distinguish an estimate. If the BPM estimation is a flashing "---" then this indicates that there is no audio being processed.

31. Pitch versus BPM Indicators

The word PITCH and the PERCENTAGE symbol are both active while the display indicates the pitch setting. The BPM indicator is only active when the display is set to provide BPM estimations.

32. Pitch Range Button

This button toggles the pitch range between 10, 20 and 50% when pressed in succession. If this button is pressed and held for 2 seconds, the pitch range will be set to 8% until the button is pressed again. If this button is pressed and held together with the BPM Button (3), then the contrast of the Display will be reduced until the buttons are released.

33. Pitch Range Indicators

Depending on the pitch range (8, 10, 20, 50%) these indicators will be active. When the pitch range is set to 8%, none of these indicators are active.

34. Motor RPM settings

The 33, 45 or 78 segments will be active for the respective motor RPM mode.

35. Key Lock Indicator

This symbol indicates that the onboard digital signal processors are correcting the KEY of the playback source.

NOTE: The KEY LOCK function can only be used while the output is set to LINE level.

36. Quartz Lock Indication


If the QUARTZ LOCK function is engaged, this segment becomes active and the display will flash "- Q -" if the PITCH FADER is adjusted until the QUARTZ LOCK function is deactivated.

37. Start Time Indicator

If this indicator is active while the motor is starting, it means that the startup time has been adjusted using the Start Time Adjuster (5.)

38. Brake Time Indicator

If this indicator is active while the motor is stopping, it means that the stop time has been adjusted using the Braking Time Adjuster (6.)

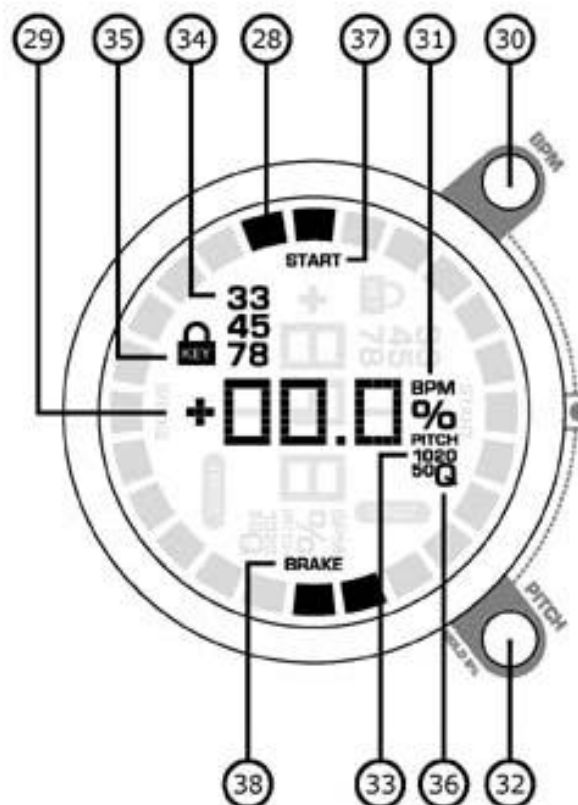

CABLE SETUP





This turntable is shipped with two sets of special cables:

- (1) Right Angle IEC Power Cord
- (1) Right Angle RCA cord

NOTE: Before connecting any cables, make sure that the voltage selector switch is set to the proper setting!

Making the power and audio connections:





1. Begin by lifting the turntable up from the rear handle and resting it on its side. (NOTE: The turntable must be supported because it is not stable in this position!)
2. Next connect the Red Right Angle RCA Plug to the Red RCA jack with the "R" indication.
3. Then connect the White Right Angle RCA Plug to the White RCA jack with the "L" indication.
4. Finally connect the IEC power cord to the IEC Power terminal. It should only fit in the Terminal one way.
5. Rest the turntable back down on a level surface and route the cables to nearby power and audio accessories.

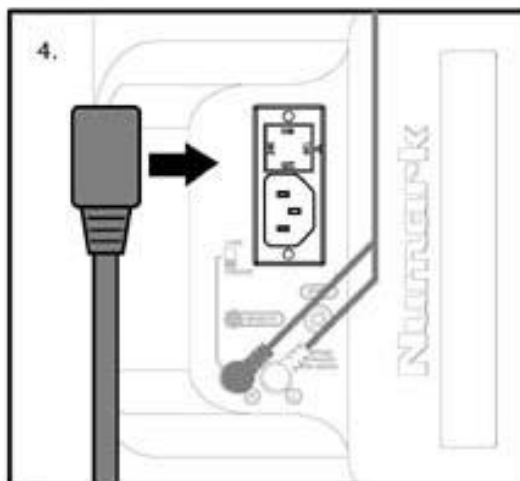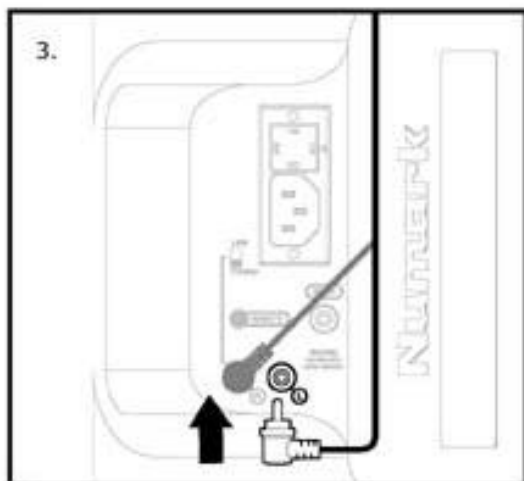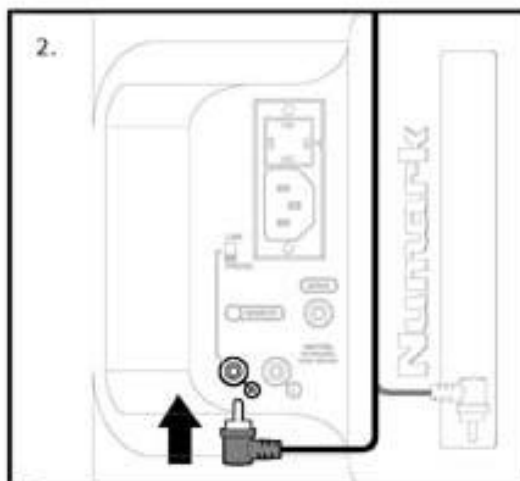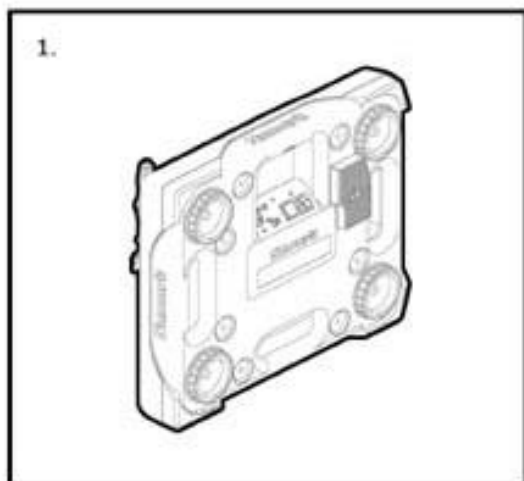

PLATTER SETUP

WARNING: Incorrect Platter setup can lead to poor turntable performance, platter instability, or permanent motor damage.

1. Start by inspecting the bottom of the aluminum platter to check that both locking pins have rubber fittings on them.
2. Next, rotate the platter spindle so that two holes are aligned parallel with the front of the turntable.
3. Carefully install the platter onto the center spindle and motor assembly making sure that the Numark logo and the two holes are aligned parallel with the front of the turntable.
4. The two locking pins should drop into the top of the spindle assembly for a stable and secure fit. If they do not, grasp the center spindle with one hand while rotating the platter with the other until the locking pins drop into place. If the platter is properly installed, it should not wobble and should rotate smoothly without any noise.

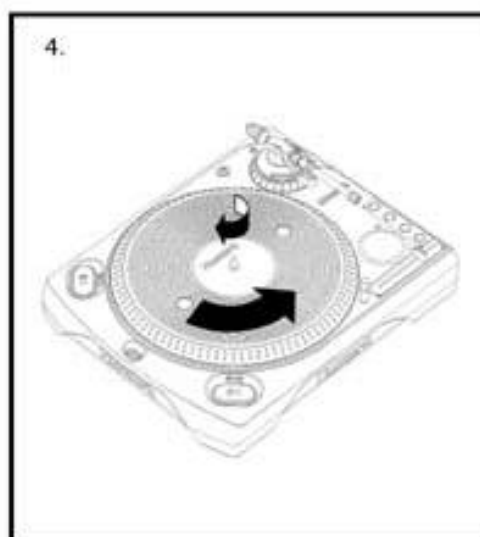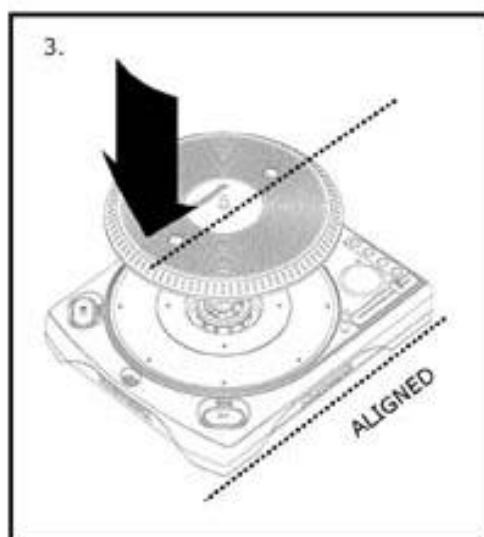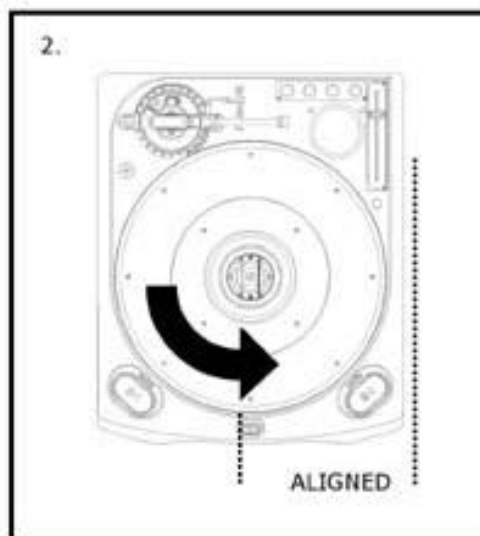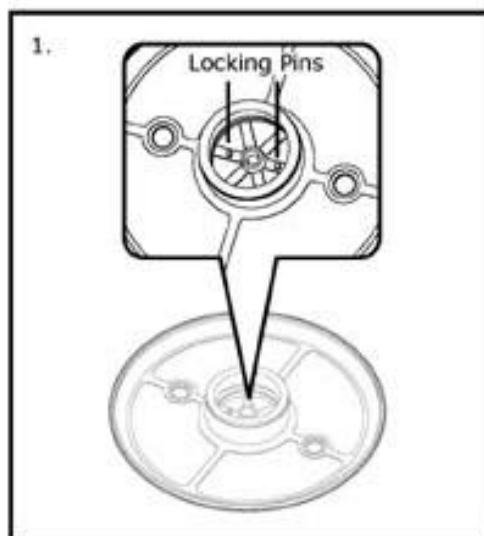


INTERCHANGING TONEARM TUBES

WARNING: An incomplete understanding of this procedure could lead to permanent damage to the headshell, your records, or the tonearm assembly.

NOTICE: Interchanging tonearm tubes unnecessarily may shorten the life of the tonearm tubes and/or tonearm components.

This turntable features the world's only tonearm assembly capable of accommodating two different tonearm tube styles: S-Shaped and Straight. The S-Shaped tube produces a higher signal to noise ratio with most cartridge assemblies. The Straight tube is ideal for heavy back-cueing or scratching. Decide which tube to use based on your mixing style.

1. Power off the turntable and any connected mixers, amplifiers or monitoring devices.
2. Remove the Cartridge from the tonearm tube that is currently installed on the tonearm tube by rotating the locking collar counter clockwise.
3. Unclip the tonearm tube from the armrest.
4. Remove the tonearm tube by rotating the locking collar counter clockwise.
5. Insert the desired tonearm into the tonearm assembly with the screws **FACING TOWARDS THE TURNTABLE BODY**.
6. Tighten the tonearm tube in place by rotating the inner collar clockwise.
WARNING: It is only necessary to tighten the tonearm tube lock collar until resistance is felt. Over tightening the tonearm tube lock collar will damage the tonearm tube.
7. Reinstall the headshell and proceed to **TONEARM SETUP**.

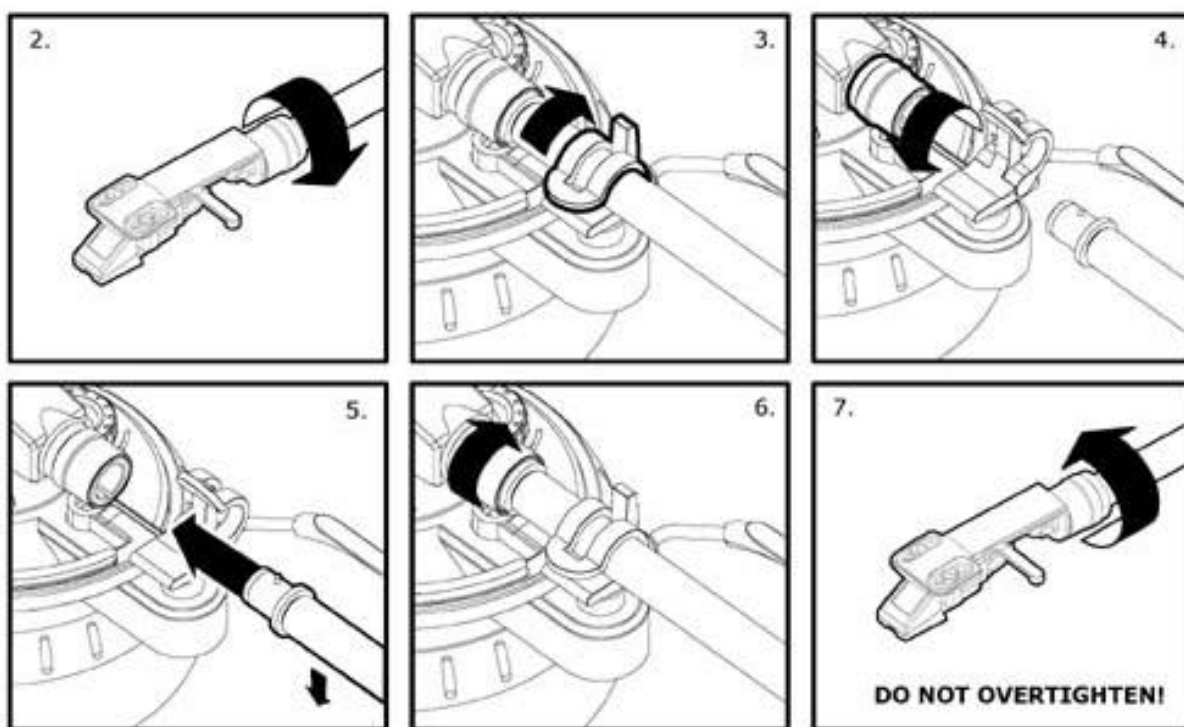

TONE ARM SETUP

A properly adjusted tone arm and cartridge setup will minimize vinyl record wear and optimize the performance of the turntable. Follow these simple steps for setting the tone arm on the turntable:


NOTE: In most cases, when using the S-Shaped tonearm tube, the additional S-Weight must be fastened to the tonearm to achieve proper stylus pressure. Balancing the Tone Arm

1. Begin the balancing process by lifting the cue lever to the up position (or make sure that the stylus protector is on the cartridge.)
2. Next, rotate the counterweight clockwise until it is in the complete forward position (NOTE: this is also the maximum amount of pressure that can be applied to the cartridge.)
3. Now there should be a feeling of weight and resistance when the head shell is raised and lowered. Begin rotating the counterweight counter-clockwise (away from the pivot point) until this weight and resistance feeling is gone. If done properly, the tone arm will pivot with very little resistance back and forth indicating that there is exactly 0 grams of stylus pressure.
4. With the counterweight in its new position further away from tone arm pivot point, grasp the scale ring of the counter weight and rotate it until "0" is in the vertical position.
5. Finally, rotate the counterweight (and scale ring) clockwise (towards the pivot point) until the desired amount of weight is reached. If the scale rotates 360 degrees beyond the zero point, the new scale reading should be added to 3.5.

*The included head shell and cartridge assembly requires a minimum of 3 grams and no more than 5 grams for optimum performance.

Setting the Anti-Skate Adjustment

In most cases, the Anti-Skate should be set to its minimum setting. Anti-Skate compensates for inward tracking forces that occur with certain cartridges when the stylus nears the center of the record. If the turntable is experiencing excessive skipping during back-cueing and scratching while nearing the center spindle, try increasing the Anti-Skate in the increments indicated on the dial. Start by adding an increment of 1, test its performance, then increase it more, and so on.

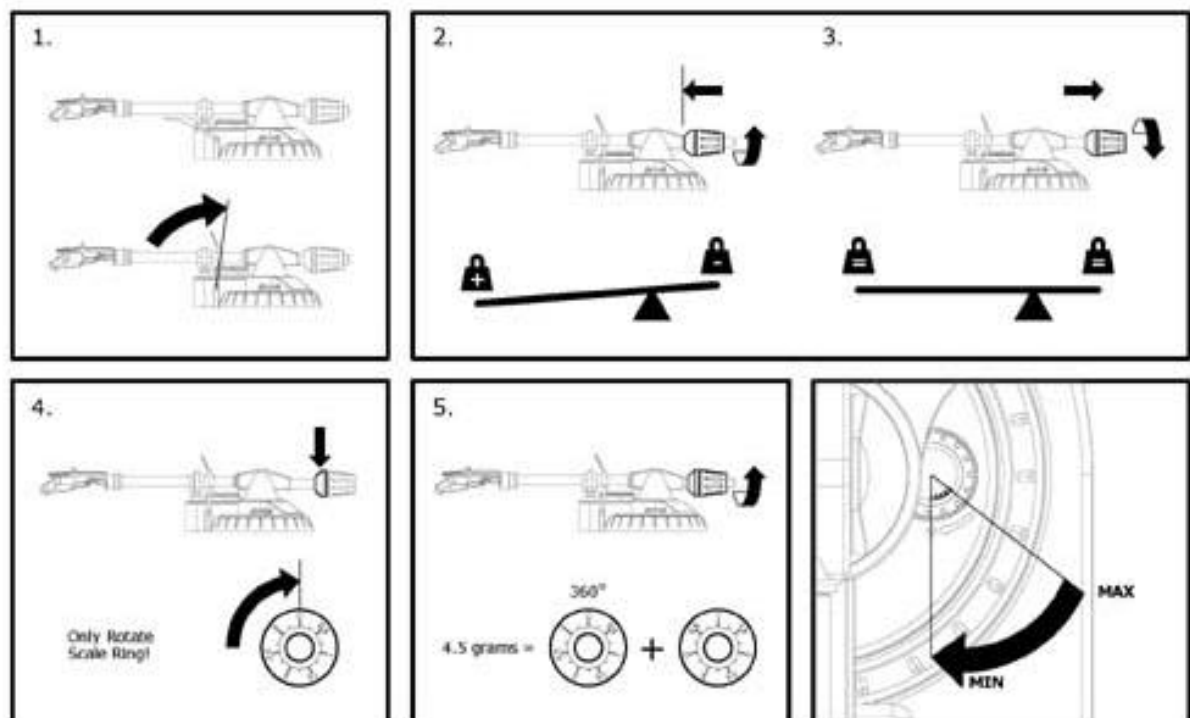

CARTRIDGE SETUP


For Head Shell Mounted Cartridges:

The cartridge that comes with this turntable should be preinstalled on the head shell. If it isn't, please follow the below instructions for installing a cartridge onto the head shell.

1. Position the head shell and the cartridge so that the four connector pins are visible. Make sure that the stylus cover is installed to prevent damage to the stylus during installation.
2. Prepare to connect the cartridge to the head shell using the green, red, blue and white connector wires.
3. Starting with the upper left pin and going clockwise install the white, the red, the green and finally the blue wires to the connector pins. Be careful not to bend the metal clips on the end of the wires. These metal connectors should never make contact with one another.
4. Using the screws and bolts that are included with the cartridge, loosely fasten the cartridge to the head shell body.
5. Once temporarily fastened, position the cartridge so that both screws are aligned with the optimum position mark on the Head shell (Numark HS 1 Head shell and Numark Cartridges only.) Moving the both screws to a mark away from the optimum position indicated on the head shell may increase or decrease performance depending on the cartridge used. For safe vinyl record treatment, the screws should always be aligned perpendicular to the head shell (any angle may increase "record burn.")
6. Once the cartridge is positioned correctly, secure the cartridge to the head shell by tightening the mounting screws.

For Integrated Head Shell Cartridges (Numark CS-1, CC-1, CX-1, etc.)

7. Align the pin on the rear of the Cartridge Assembly so that it is in a vertical position and insert it into the tone arm lock nut.
8. Secure the cartridge to the tone arm by turning the tone arm lock nut clockwise until the head shell feels secure and does not wobble to the left or right. **WARNING:** Over tightening the tone arm lock nut may result in permanent damage to the tone arm or the cartridge.
9. Remove the stylus protector before playback.

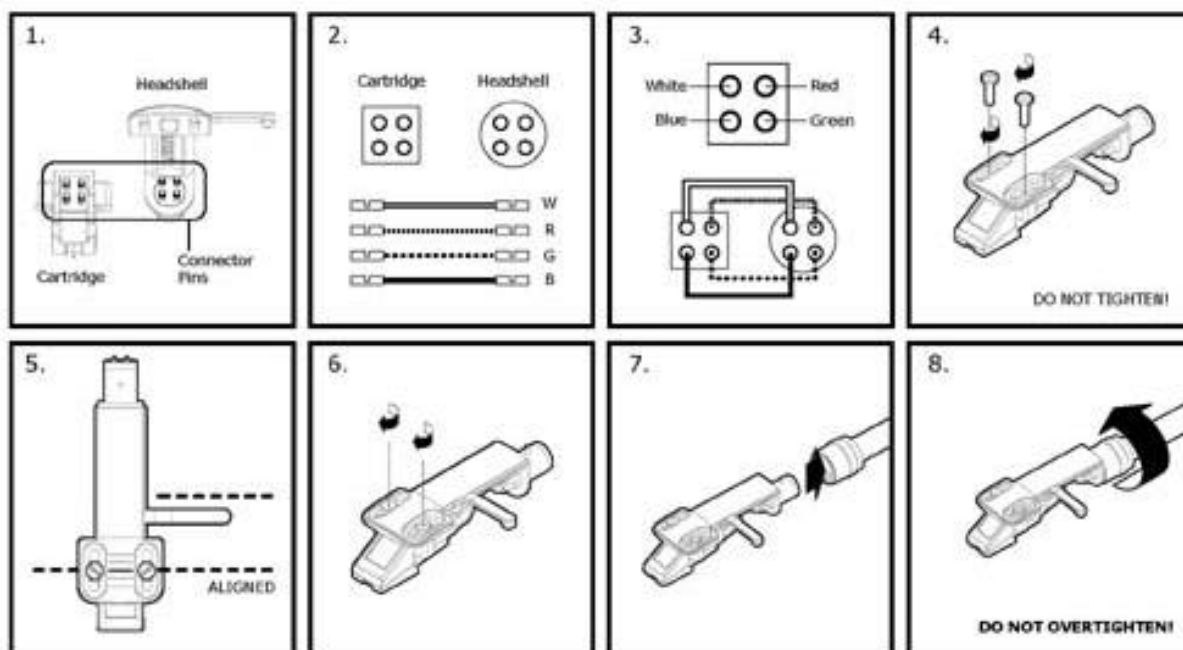

OTHER IMPORTANT NOTES


Please read these precautionary notes to insure a complete understanding and long life of this premium DJ turntable.

1. Unnecessarily removing the platter may cause damage to the magnet mounting structure, the motor or the platter resulting in undesired performance. The turntable should ALWAYS be powered off before the turntable platter is removed for any reason.
2. Repeatedly "interchanging" tonearm tubes may cause premature wear to components of the tonearm assembly or the tonearm tubes. Interchange tubes only on an "as needed" basis.
3. Turning off the turntable while the output is set to LINE level or while the SPDIF output is in use will result in an absence of audio. Keep this in mind during use - if the "motor off" effect is desired effect, it is recommended that the BRAKE MOTOR CONTROL be adjusted.
4. Do not attempt to adjust or tighten any tonearm components. Undesirable performance may be a result of an improperly adjusted tonearm or worn cartridge.
5. Never interchange tonearm tubes or the PITCH FADER and BUTTON CARTRIDGES while the turntable is powered on.
6. Any attempt to "customize" the TT-X1 turntable beyond interchanging the tonearm tubes and fader/button cartridges is not recommended and may result in PERMENANT DAMAGE to the turntable or a VOIDED WARRANTY.

INTERCHANGING THE PITCH FADER AND BUTTON CARTRIDGES


The TT-X1's unique design allows the configuration of the PITCH FADER and BUTTON CONTROLS to be interchanged depending on the orientation of the turntable. In the event of damage or excessive wear, these components should only be replaced with NUMARK COMPATIBLE PARTS. Check the nearest NUMARK DEALER for additional information.

1. Turn the turntable off OR unplug it from its power source.
2. Remove the PITCH FADER KNOB and store it in a safe place.
3. Use the included SERVICE TOOL to remove the two screws that secure the PITCH FADER CARTRIDGE PLATE. Once removed, place these screws in a safe place.
4. Use the flat side of the SERVICE TOOL to pry off the PITCH FADER CARTRIDGE PLATE by inserting it into the cutaway at the center of the plate and prying upwards.
5. Use the included SERVICE TOOL to remove the two screws that secure the BUTTON CARTRIDGE PLATE. Once removed, place these screws in a safe place.
6. Using the flat side of the SERVICE TOOL again, pry off the BUTTON CARTRIDGE PLATE by inserting it underneath the plate and prying upwards (see picture.)
7. The cartridges may now be safely removed. Begin this process by using the flat side of the SERVICE TOOL to pry the PITCH FADER CARTRIDGE out of the turntable (see picture.) Once removed, detach the wiring clip from the bottom of the cartridge.

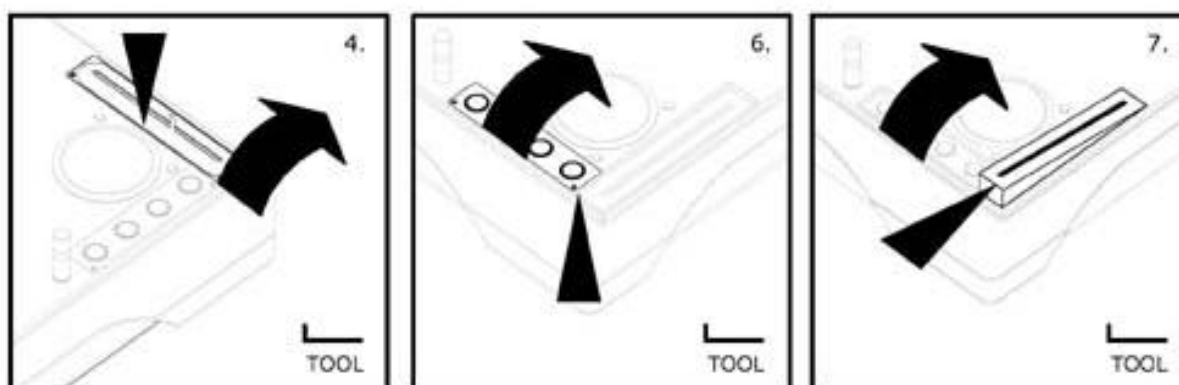

INTERCHANGING THE PITCH FADER AND BUTTON CARTRIDGES continued

8. Remove the Button Cartridge now by using the SERVICE TOOL to pry out the cartridge from the turntable. Once removed, detach the wiring clip from the bottom of the cartridge (see picture.)
9. The cartridges may now be safely interchanged. Find the WIRING CLIP for the PITCH FADER CARTRIDGE and connect it to the bottom of the cartridge (see picture.)
10. Reinsert the PITCH FADER CARTRIDGE into the desired bay of the turntable. Take utmost care NOT to pinch the unused harness underneath the cartridge. If inserted correctly, the cartridge should rest firmly in the bay.
11. Find the WIRING CLIP for the BUTTON CARTRIDGE and connect it to the bottom of the cartridge (see picture.)
12. Reinsert the BUTTON CARTRIDGE into the desired bay of the turntable. Take utmost care NOT to pinch the unused harness underneath the cartridge. If inserted correctly, the cartridge should rest firmly in the bay.
13. Re-secure the BUTTON CARTRIDGE PLATE and the FADER CARTRIDGE PLATE by inserting the tabbed sides into the turntable first.
14. Use the included SERVICE TOOL to tighten the four screws that secure the plates to the turntable body. Do not over tighten these screws.
15. Reinstall the PITCH FADER knob and power the turntable on.

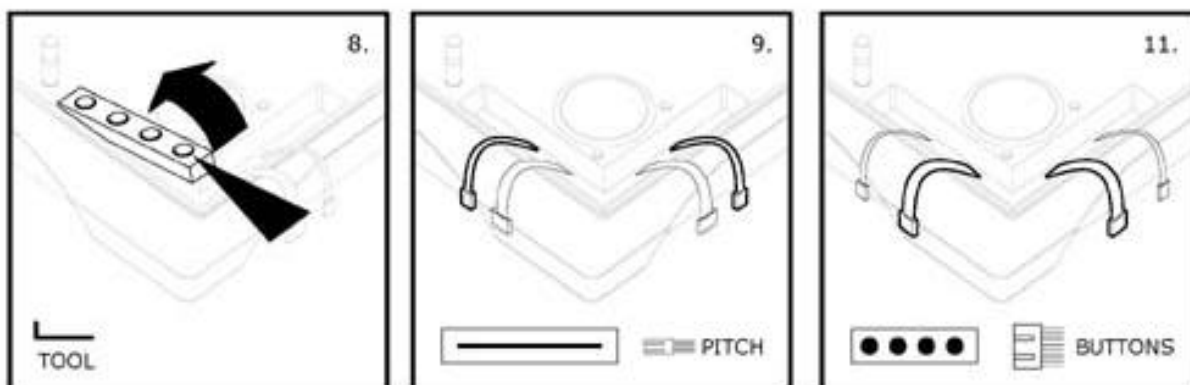


OPERATION

This turntable was designed to accommodate a variety of different mixing styles. Here are some general operation guidelines to optimize the performance of the turntable.

1. Do not place the turntable on or near a speaker or subwoofer. This may cause unwanted noise depending on the environment conditions.
2. ALWAYS use the included Slip Mat during record playback. This Slip Mat was designed to reduce friction between the platter and the record to allow for rapid back cueing and efficient scratch play.
3. Using the tone arm Cue System may prevent damage to your stylus. First lift the Cue Lever, then position the tone arm over the desired groove of the record, and finally lower the Cue Lever to slowly drop the tone arm onto the record.
4. Always secure the tone arm using the Arm Clip when not in use. This can prevent stylus damage and accidental tone arm engagement.
5. To reduce needle skipping, follow the guidelines in the Tone Arm Setup section of this manual. Too much weight on a cartridge may cause erratic skipping or stylus damage.

Another guideline that may reduce skipping is back cueing and adjusting playback tempo by applying pressure towards the center of the record near the spindle as indicated below.

Skipping induce by rapid cueing or scratching may be reduce by applying inward pressure to the side of the record instead of applying pressure down on the record (see diagram below.)

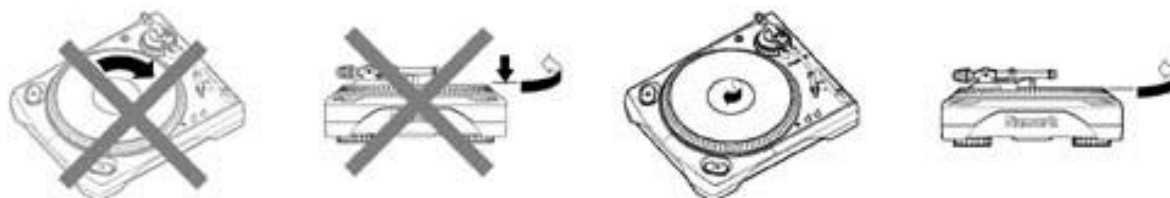

SPECIFICATIONS

Turntable Section:

Motor:	Direct Drive- 16 Pole, 3 Phase
Starting Torque:	6.2 lb/in (2.8 kg/cm)
Start Time:	0-33.33 RPM in 0.25 sec
Braking System:	7 Step Electronic Servo Brake
Platter:	Dampened Aluminum Diecast Low Friction design
Speeds:	33.33, 45, and 78 RPM
Wow & Flutter:	<0.03% WRMS (JIS C5521)
Pitch Range:	+/- 8,10,20,50%
Rumble:	-58dB (IEC 98A Unweighted) -79dB (IEC 98A Weighted)

Specifications are correct at time of printing but could change as production changes may occur.

Tonearm Section:

Type:	Locking collar based interchangeable tube system Diecast Aluminum 3-bearing construction
Height Range:	0-6 mm
Cue System:	Dampened Lift Lever, Arm Rest and Arm Clip
Balance Weight:	7 gram S-weight 75 gram Aluminum Plated w/ 0-3.5 gram range scale

General:

Dimensions:	370mm(W) by 460mm(D) by 135mm(H)
Weight:	28.6 lbs (13 kg)
Power Consumption:	45 Watts

Problem	Cause?	Solution
Turntable does not turn on.	Disconnected Power Cord?	Connect Power Cord.
The sound level is very low.	The Turntable is not connected to a device with a PHONO preamp.	Connect the device to a preamp DJ mixer or an AV receiver that has an input labeled PHONO, not AUX or LINE.
The sound is on one side only. <small>NOTE: Static electricity and/or other external interference may cause this unit to malfunction. To reset the unit to its normal condition, turn the power off and then on again. If the problem continues to persist, refer to the connected component's troubleshooting guides. If the problem is not resolved after checking these items, contact the nearest authorized Numark dealer.</small>	The Cartridge is not properly wired.	Reconnect the wires from the headshell to the cartridge. See the "Cartridge Setup" section for more detail.
	The Stylus is worn out.	Replace the stylus on the cartridge. Replacement styli are available from most Numark Retailers.
	The RCA audio cord is damaged.	If the RCA cord is frequently connected and disconnected, it may have become damaged and needs to be replaced.
	The Cartridge is not making a proper connection.	Remove the cartridge, clean the contacts on the back with Isopropyl Alcohol, and reinsert it.
	The Tonearm Tube is not making a proper connection.	Remove the tube, clean the contacts on the back with Rubbing Alcohol, and reinsert it. The Tonearm Tube may be damaged. Replace the Tonearm Tube.
The output sound is very distorted.	The Cartridge is not properly wired.	Reconnect the wires from the headshell to the cartridge. See the "Cartridge Setup" section for more detail.
	The Stylus is worn out.	Replace the stylus on the cartridge. Replacement styli are available from most Numark Retailers.
	The Output Level Switch is set to LINE, but the RCA cord is connected to a PHONO input.	Switch the Output Level to PHONO immediately! Connect the RCA cord to a LINE LEVEL input when using the LINE LEVEL output.
The Target Light glows inconsistently, flickers, or doesn't work at all.	The Target Light Lamp is burning or burned out.	Replace the entire target light with a compatible part like the Numark TL-1.
The Key Lock doesn't work.	The Output mode is set to PHONO.	Key Lock will only work while the LINE LEVEL output is being used.
The Display didn't change when the turntable is positioned vertically.	The Pitch and Button Cartridges weren't interchanged properly.	Power off the turntable, wait 5 seconds, and then turn it back on.
The turntable skips like crazy.	The Turntable is on an unstable surface.	Follow the guidelines for installation in the "Setup & Installation" Section.
	The Tone Arm is not balanced properly.	Follow the guidelines for optimum setup in the "Tone Arm Setup" Section.
	The Stylus is worn out.	Replace the stylus on the cartridge. Replacement styli are available from most Numark Retailers.
	Excessive force is being applied directly down on the platter.	Reread the "Operation" section of this manual.
	The record is warped.	Buy new records.

LIMITED PRODUCT WARRANTY

1. What is covered and for how long? NUMARK INDUSTRIES LLC ("NUMARK") warrants to the original purchaser that NUMARK'S mixers are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase from an authorized NUMARK dealer and continuing for the following period of time after that date:

2 Years

3 Years with the completion of the warranty card provided that the warranty card is completed and returned within 30 days from the date of purchase.

2. What is not covered? This Limited Warranty is conditioned upon proper use of the product by the purchaser. This Limited Warranty does not cover:

- (a) Damage caused by improper installation or improper connection to any peripheral
- (b) Damage caused by an external electrical fault
- (c) Damage from use of parts not manufactured or sold by Numark
- (d) Product purchased from anyone other than a Numark authorized dealer
- (e) Modifications to product not approved in writing by Numark
- (f) Equipment that has the serial number removed or made illegible
- (g) Normal cosmetic and mechanical wear
- (h) Damage or loss during transit to an Authorized Numark Repair Center
- (i) Crossfaders

3. What are NUMARK'S obligations? During the applicable warranty period, NUMARK will repair or replace, at NUMARK'S sole option, without charge to the purchaser, any defective component part of the mixer. To obtain service under this Limited Warranty, purchaser must first contact NUMARK and obtain a return authorization number ("RA#"). Purchaser must then return the mixer to NUMARK in an adequate container for shipping, accompanied by purchaser's sales receipt or comparable proof of sale showing the date of purchase, the serial number of the product, and the seller's name and address. To obtain an RA# and assistance on where to return the mixer, contact NUMARK customer service at 401-295-9000. Upon receipt, NUMARK will repair or replace the defective products. NUMARK may, at NUMARK'S sole option, use rebuilt, reconditioned, or new parts or components when repairing any product or replace a product with a rebuilt, reconditioned or new product. Repaired mixers will be warranted for a period equal to the remainder of the original Limited Warranty on the original mixer or for 90 days, whichever is longer. All replaced parts, components, boards and equipment become the property of NUMARK. If NUMARK determines that any mixer is not covered by this Limited Warranty, purchaser must pay all parts, shipping, and labor charges for the repair or return of such mixer.

4. What are the limits on NUMARK'S liabilities? THE WARRANTIES GIVEN IN THIS LIMITED WARRANTY, TOGETHER WITH ANY IMPLIED WARRANTIES COVERING NUMARK MIXERS, INCLUDING WITHOUT LIMITATION ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, NUMARK SHALL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL, INDIRECT OR SIMILAR DAMAGES, LOSS OF PROFITS, DAMAGES TO PURCHASER'S PROPERTY, OR INJURY TO PURCHASER OR OTHERS ARISING OUT OF THE USE, MISUSE OR INABILITY TO USE ANY NUMARK MIXER, BREACH OF WARRANTY, OR NEGLIGENCE, INCLUDING BUT NOT LIMITED TO NUMARK'S OWN NEGLIGENCE, EVEN IF NUMARK OR ITS AGENT HAS BEEN ADVISED OF SUCH DAMAGES, OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. THIS LIMITED WARRANTY IS THE COMPLETE WARRANTY FOR NUMARK'S MIXERS, AND IS GIVEN IN LIEU OF ALL OTHER EXPRESS WARRANTIES. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY OF THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

This Limited Warranty allocates risk of product failure between purchaser and NUMARK, and NUMARK'S product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of NUMARK are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on NUMARK. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by NUMARK and should not be relied upon.

5. How does state law apply to this warranty? SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO PURCHASER.

This Limited Warranty gives you specific legal rights. You may also have other rights, which vary from one jurisdiction to another.

NUMARK INDUSTRIES
Attention: Service Department
11 Helmsman Avenue
North Kingstown, RI 02852 USA
Phone: 1 (401) 295-9000
Fax: 1 (401) 295-5200


Web: www.numark.com

RETURN INFORMATION (US ONLY)

- a) A Return Authorization number must be obtained from Numark through the address or phone numbers below.
- b) A copy of the original sales receipt must also be included for the equipment to be repaired under warranty.
- c) The faulty equipment must be packed in its original packaging.
- d) One additional outer layer of packaging must be included to ensure product safety. Failure to do so may inadequately protect the equipment in transit and, therefore, jeopardize the customer's warranty.
- e) Numark will not accept COD shipments and no call tags will be issued for merchandise return.
- f) Numark will not return repaired merchandise to customers by priority service, unless by written request at the customer's cost. Requests must be submitted in writing with merchandise returned.
- g) The defective Numark equipment should be sent, FREIGHT PREPAID with Return Authorization number clearly printed on the outer packaging and original sales receipt enclosed to:

NUMARK INDUSTRIES
Attention: Service Department
11 Helmsman Avenue
North Kingstown, RI 02852 USA
Phone: 1 (401) 295-9000
Fax: 1 (401) 295-5200
Web: www.numark.com

INSIDE THE BOX:

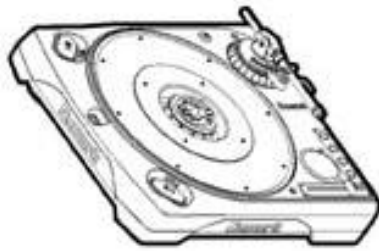

(1) TT-X1 w/Straight
Tonearm



(1) Anti-Drag
Aluminum Platter



(1) Slipmat



(1) Headshell



(1) 2.5 Gram Headshell
Weight



(1) Target Light



(1) 45 RPM Adapter



(1) S-Shaped Tonearm
Tube



(1) Counter Weight



(1) S-Tube Tonearm
Weight



(1) IEC Power Cable



(1) RCA Cord



(1) Service Tool