EV**ID**™
EV Innovative **D**esign

**MA Series
SOS 3.2 Series
Assembly Instructions**

E**V**®

EVID 3.2 SOS Monitor and MA-3 Mic Stand Adapter

The EVID 3.2 SOS is a near-field monitor with volume control and ¼" input jack that can be easily mounted on a microphone stand for convenient placement anywhere. An adjustable swivel lets you mount it at exactly the right angle for any application. A boom adapter is also included to mount an optional boom and microphone (not included)*

MA-3 Mic Stand Adapter kit lets you mount any standard EVID 3.2 on a microphone stand for easy placement anywhere you need it.
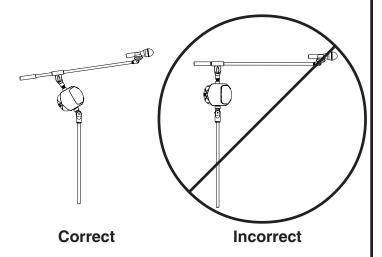
⚠ **CAUTION: This system is rated for 75W RMS. When connecting the EVID 3.2 SOS to the amplifier, make sure that the amplifier's power output does not exceed this rating.**

MA-3 Kit Includes:		
Item	**Qty**	**Description**
1	1	Mic Stand Adapter
2	1	Boom Adapter
3	2	Flat Washer (.88" O.D., .25" I.D.)

EVID 3.2 SOS Monitor Includes:		
Item	**Qty**	**Description**
1	1	Mic Stand Adapter
2	1	Boom Adapter
3	2	Flat Washer (.88" O.D., .25" I.D.)
4	1	EVID 3.2 Monitor, with 1/4" Jack
5	1	Shock-Proof Microphone Mount

Positioning for Boom and Microphone

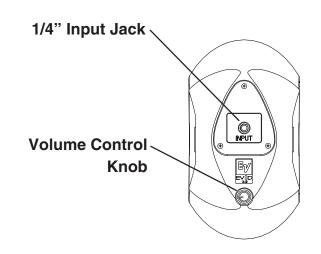**Correct**   **Incorrect**

⚠ *To ensure proper balance, when a boom and microphone are attached, the EVID must be angled upward and the boom's counterweight properly positioned as shown.

EVID 3.2 SOS Rear Panel Detail

1/4" Input Jack

Volume Control Knob

Mic Stand Mounting (MA-3 and SOS)

Logo Cap (Included with standard EVID 3.2)

Step 1:

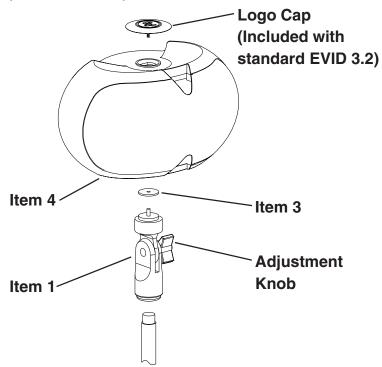Attach the Mic Stand Adapter (Item 1) to your microphone stand (not included).

Step 2:

Attach the EVID 3.2 (or the 3.2 SOS) to the Mic Stand Adapter using one flat washer (Item 3) in-between the Adapter and the EVID.

Item 4

Item 3

Step 3:

Use the adjustment knob to adjust the angle of the EVID.

If not attaching a boom to the EVID, attach Logo Cap as shown.

Item 1

Adjustment Knob

Mounting a Microphone and Boom to your EVID (MA-3 and SOS)
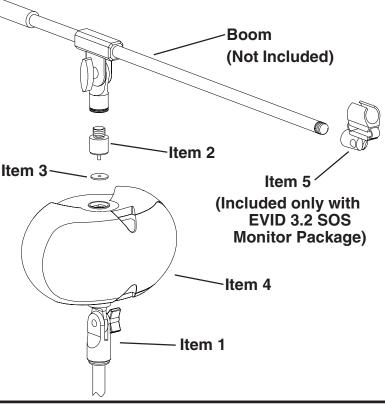
Boom (Not Included)

Step 1:

Attach the Boom Adapter (Item 2) to the top of the EVID with a flat washer (Item 3) in between the Adapter and the EVID.

Item 2

Step 2:

Mount the Boom (Not Included) to the Boom Adapter (Item 2).

Item 3

Item 5 (Included only with EVID 3.2 SOS Monitor Package)

Step 3:

Replace any microphone mount with the Shock-Proof Mic Mount (Item 5, EVID 3.2 SOS only).

Item 4

Item 1