

0

**Marshall Electronics** 

Professional Audio Division Phone: 310-333-0606 = 800-800-6608 = Fax: 310-333-0688 www.mxlmics.com = sales@mxlmics.com Large Diaphragm Condenser Microphone



Thank you for choosing the MXL 2006 Condenser microphone. With proper care, this mic will provide many years of satisfaction. To get the best results, please take a few moments to read this manual.

Enjoy your microphone!

# The MXL Team

# **General Characteristics**

This microphone has a one-inch gold sputtered diaphragm and a fairly wide fixed cardioid pickup pattern. Large capsule condensers are very sensitive, readily revealing very subtle sonic details. They also tend to pick up sounds outside the pattern more than some designs, which can lead to powerful feedback if you are not careful. We strongly advise experimentation with placement and isolation requirements with the gain initially set low to avoid equipment (and ear) damaging surprises!

# Contents

Unpack your MXL 2006 microphone carefully and verify that all of the following items are included:

- MXL 2006 microphone
- Shock mount
- Carrying case

If any of these items are missing or damaged, contact the company from which you purchased the microphone.

# **Power Requirement**

The MXL 2006 requires 48V phantom power ( $\pm$  4V). If no sound is picked up by the microphone, make sure that the phantom power on your mixer or separate power supply is switched on.

# **Microphone Cable**

The microphone cable can have a profound effect on the sound of any microphone. Even the finest microphone will sound poor if the interconnect cable allows noise to enter or causes distortion and loss of information. We recommend that you use the best microphone cable that your budget will allow.

### Care

Dust and foreign material can reduce the performance of a microphone over time, so you should store the MXL 2006 in its case when not in use.

# **Shock Mount**

The MXL shock mount can shift in shipment. Simply shift the nylon bands to center the microphone in the assembly. Be sure that the wire clamp does not rest on the chassis of the mount, as this impairs mechanical isolation. Slide the mount all the way to the rim of the microphone for the most secure hold.




# **Specifications**

Туре	Pressure-gradient condenser mic.
Frequency Response	30 Hz–20 kHz
Polar Pattern	Cardioid
Impedance	150 ohms
Sensitivity	18 mV/Pa
Equivalent Noise	16 dB (A-weighted IEC 268-4)
S/N Ratio	78 dB (Ref. 1 Pa A-weighted)
Max SPL for 0.5% THD	130 dB
Power Requirement	48V phantom power (± 4V)
Current Consumption	< 3.0mA
Size	50mm x 190 mm
Weight	1.3 lb
Metal Finish	Silver

# **Frequency Chart**

# **Polar Pattern**

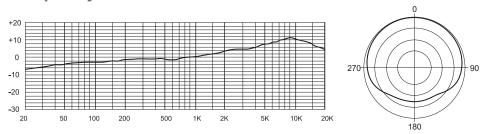

### Warranty

MXL microphones are guaranteed against defects in materials and workmanship for one year from the date of purchase. If you encounter any problem with this unit, promptly contact the company from which you purchased it for assistance. The original dated sales receipt will be necessary for any warranty claim. Do not send any unit directly to us without prior authorization from our service department. Warranty coverage is limited to repair or replacement (at our option) of the microphone, and does not cover incidental damages due to use of this unit, nor damage caused by accidental misuse of this product.