


ADJ

CRAZY 8

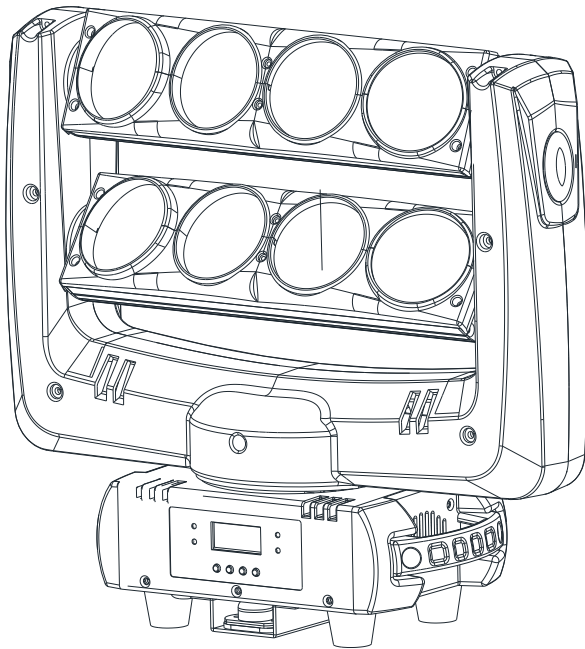

User Instructions

©2013 ADJ Products, LLC all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. ADJ Products, LLC logo and identifying product names and numbers herein are trademarks of ADJ Products, LLC. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ADJ Products, LLC brands and product names are trademarks or registered trademarks of their respective companies.

ADJ Products, LLC and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

Europe Energy Saving Notice
Energy Saving Matters (EuP 2009/125/EC)
Saving electric energy is a key to help protecting the environment. Please turn off all electrical products when they are not in use. To avoid power consumption in idle mode, disconnect all electrical equipment from power when not in use. Thank you!

Crazy 8

General Information

Unpacking: Thank you for purchasing the Crazy 8 by ADJ Products, LLC. Every Crazy 8 has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your fixture for any damage and be sure all equipment necessary to operate the unit has arrived intact. In the event damage has been found or parts are missing, please contact our toll free customer support number for further instructions. Please do not return this unit to your dealer without contacting customer support first.

Introduction: The Crazy 8 is a dual moving bar, 8-zone, DMX intelligent beam effect. The Crazy 8 can operate as a stand alone fixture or in a Master/Slave configuration. The Crazy 8 has three operating modes; sound active mode, show mode, and DMX control. This fixture is suitable for theaters, studios, retail stores, and other similar locations. *For best results use fog or special effects smoke to enhance the beams projections.*

Customer Support: ADJ Products, LLC provides a toll free customer support line, to provide help and to answer any question should you encounter problems during your set up or initial operation. You may also visit us on the web at www.adj.com for any comments or suggestions. Service Hours are Monday through Friday 8:00 a.m. to 4:30 p.m. Pacific Standard Time.

Voice: (800) 322-6337

Fax: (323) 582-2941

E-mail: support@americandj.com

Warning! To prevent or reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.

Warning! *This may cause severe eye damage. Avoid looking directly into the light source at all times!*

Crazy 8

General Instructions

To optimize the performance of this product, please read these operating instructions carefully to familiarize yourself with the basic operations of this unit. These instructions contain important safety information regarding the use and maintenance of this unit. Please keep this manual with the unit, for future reference.

Crazy 8

Features

- DMX-512 Protocol
- 5 DMX Channel Modes (1 Channel Mode, 9 Channel Mode, 12 Channel Mode, 15 Channel Mode, & 21 Channel Mode)
- 3 Operating Modes - Sound Active, Show Mode, and DMX Control
- Internal Microphone
- Digital Display for Address and Function Setting
- UC3 Controller (Not Included)
- Power Cord Daisy Chain (See page 17)
- 5 Selectable Dimmer Curves
- 540-Degree Base Pan, 150-Degree Bar Tilt

Crazy 8

Warranty Registration

The Crazy 8 carries a 2 year (730 days) limited warranty. Please fill out the enclosed warranty card to validate your purchase and warranty. You may also register your product online at www.adj.com. All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. If the unit is under warranty you must provide a copy of your proof of purchase invoice. Please contact ADJ Products, LLC customer support for a R.A. number.

Crazy 8

Handling Precautions

Caution! There are no user serviceable parts inside this unit. Do not attempt any repairs yourself, doing so will void your manufactures warranty. In the unlikely event your unit may require service please contact ADJ Products, LLC.

ADJ Products, LLC will not accept any liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to this unit.


For Your Own Personal Safety, Please Read and Understand This Manual Completely Before You Attempt To Install Or Operate This Unit!

- To reduce the risk of electrical shock or fire, do not expose this unit rain or moisture
- Do not spill water or other liquids into or on to your unit.
- Be sure that the local power outlet match that of the required voltage for your unit.
- Do not attempt to operate this unit if the power cord has been frayed or broken.
- Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in case of an internal short.
- Disconnect from main power before making any type of connection.
- Do not remove the cover under any conditions. There are no user serviceable parts inside.
- Never operate this unit when it's cover is removed.
- Always be sure to mount this unit in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall.
- Do not attempt to operate this unit, if it becomes damaged.
- This unit is intended for indoor use only, use of this product outdoors voids all warranties.
- Always mount this unit in safe and stable matter.
- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
- Cleaning -The fixture should be cleaned only as recommended by the manufacturer. See page 27 for cleaning details.
- Heat -This fixture should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- The fixture should be serviced by qualified service personnel when:
 - A. Objects have fallen, or liquid has been spilled into the appliance.
 - B. The appliance has been exposed to rain or water.
 - C. The appliance does not appear to operate normally or exhibits a marked change in performance.

When installing the unit, the trussing or area of installation must be able to hold 10 times the weight without any deformation. When installing the unit must be secured with a secondary safety attachment, e.g. and appropriate safety cable. Never stand directly below the unit when mounting, removing, or servicing the unit.


Overhead mounting requires extensive experience, including calculating working load limits, installation material being used, and periodic safety inspection of all installation material and unit. If you lack these qualifications, do not attempt the installation yourself.

These installaiton should be checked by a skilled person once a year.

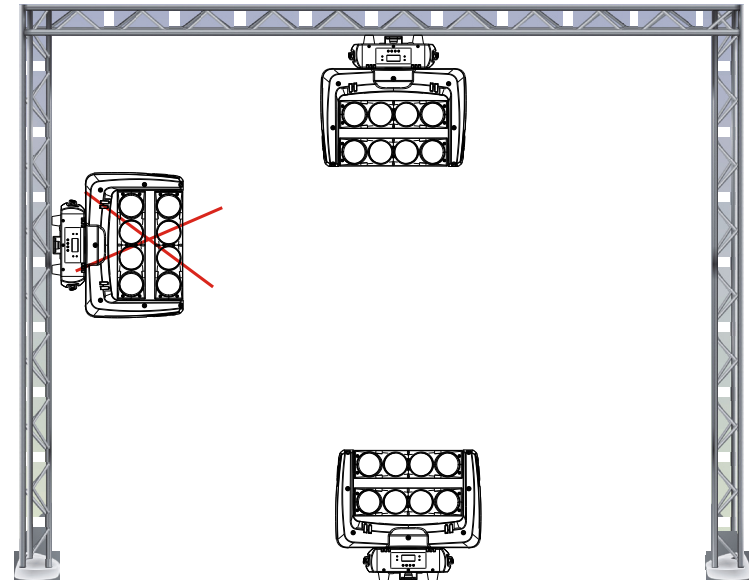

The Crazy 8 is fully operational in two different mounting positions, hanging upside-down from a ceiling or set on a flat level surface. To avoid internal damage to the unit, never mount the unit on its side as illustrated above. Be sure this fixture is kept at least 0.5m away from any flammable materials (decoration etc.). Always use and install the supplied safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails (see next page). Never use the carrying handles for secondary attachment.

NOTICE: The suitable environmental temperature for this lighting fixture is between -25°C to 45°C . Do not place this lighting fixture in an environment where the temperatures are under or above the temperatures stated above. This will allow the fixture to run at its best and help prolong the fixture life.

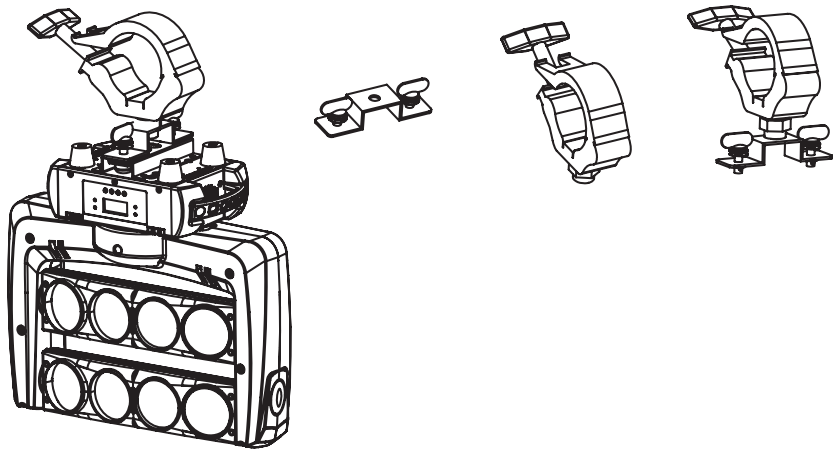

Screw one clamp via a M12 screw and nut onto the Omega holder. Insert the quick-lock fasteners of the Omega holder into the respective holes on the bottom of the Crazy 8. Tighten the quick-lock fasteners fully clockwise. Pull the safety-cable through the hole (3) on the bottom of the base and over the trussing system or a safe fixation spot. Insert the end in the carabine and tighten the safety screw.

Power Supply: The ADJ Crazy 8 contains a automatic voltage switch, which will auto sense the voltage when it is plugged into the power source. With this switch there is no need to worry about the correct power voltage, this unit can be plugged in anywhere.

DMX-512: DMX is short for Digital Multiplex. This is a universal protocol used by most lighting and controller manufactures as a form of communication between intelligent fixtures and controllers. A DMX controller sends DMX data instructions from the controller to the fixture. DMX data is sent as serial data that travels from fixture to fixture via the DATA "IN" and DATA "OUT" XLR terminals located on all DMX fixtures (most controllers only have a DATA "OUT" terminal).

DMX Linking: DMX is a language allowing all makes and models of different manufactures to be linked together and operate from a single controller, as long as all fixtures and the controller are DMX compliant. To ensure proper DMX data transmission, when using several DMX fixtures try to use the shortest cable path possible. The order in which fixtures are connected in a DMX line does not influence the DMX addressing. For example; a fixture assigned a DMX address of 1 may be placed anywhere in a DMX line, at the beginning, at the end, or anywhere in the middle. Therefore, the first fixture controlled by the controller could be the last fixture in the chain. When a fixture is assigned a DMX address of 1, the DMX controller knows to send DATA assigned to address 1 to that unit, no matter where it is located in the DMX chain.

Data Cable (DMX Cable) Requirements (For DMX and Master/Slave Operation): The Crazy 8 can be controlled via DMX-512 protocol. The Crazy 8 has 5 DMX channel modes. The DMX address is set electronically using the controls on the front panel of the unit.

Your unit and your DMX controller require a approved DMX-512 110 Ohm Data cable for data input and data output (Figure 1). We recommend Accu-Cable DMX cables. If you are making your own cables, be sure to use standard 110-120 Ohm shielded cable (This cable may be purchased at almost all professional sound and lighting stores). Your cables should be made with a male and



Figure 1

female XLR connector on either end of the cable. Also remember that DMX cable must be daisy chained and cannot be split.

Notice: Be sure to follow figures two and three when making your own cables. Do not use the ground lug on the XLR connector. Do not connect the cable’s shield conductor to the ground lug or allow the shield conductor to come in contact with the XLR’s outer casing. Grounding the shield could cause a short circuit and erratic behavior.




Figure 2

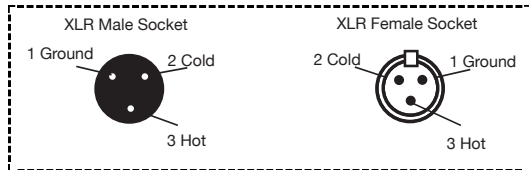


Figure 3

XLR Pin Configuration
Pin 1 = Ground
Pin 2 = Data Compliment (negative)
Pin 3 = Data True (positive)

Special Note: Line Termination. When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behavior. A terminator is a 110-120 ohm 1/4 watt resistor which is connected between pins 2 and 3 of a male XLR connector (DATA + and DATA -). This unit is inserted in the female XLR connector of the last unit in your daisy chain to terminate the line. Using a cable terminator (ADJ part number Z-DMX/T) will decrease the possibilities of erratic behavior.




Termination reduces signal errors and avoids signal transmission problems and interference. It is always advisable to connect a DMX terminal. (Resistance 120 Ohm 1/4 W) between PIN 2 (DMX-) and PIN 3 (DMX +) of the last fixture.

Figure 4

5-Pin XLR DMX Connectors. Some manufactures use 5-pin DMX-512 data cables for DATA transmission in place of 3-pin. 5-pin DMX fixtures may be implemented in a 3-pin DMX line. When inserting standard 5-pin data cables in to a 3-pin line a cable adaptor must be used, these adaptors are readily available at most electric stores. The chart below details a proper cable conversion.

3-Pin XLR to 5-Pin XLR Conversion		
Conductor	3-Pin XLR Female (Out)	5-Pin XLR Male (In)
Ground/Shield	Pin 1	Pin 1
Data Compliment (- signal)	Pin 2	Pin 2
Data True (+ signal)	Pin 3	Pin 3
Not Used		Pin 4 - Do Not Use
Not Used		Pin 5 - Do Not Use

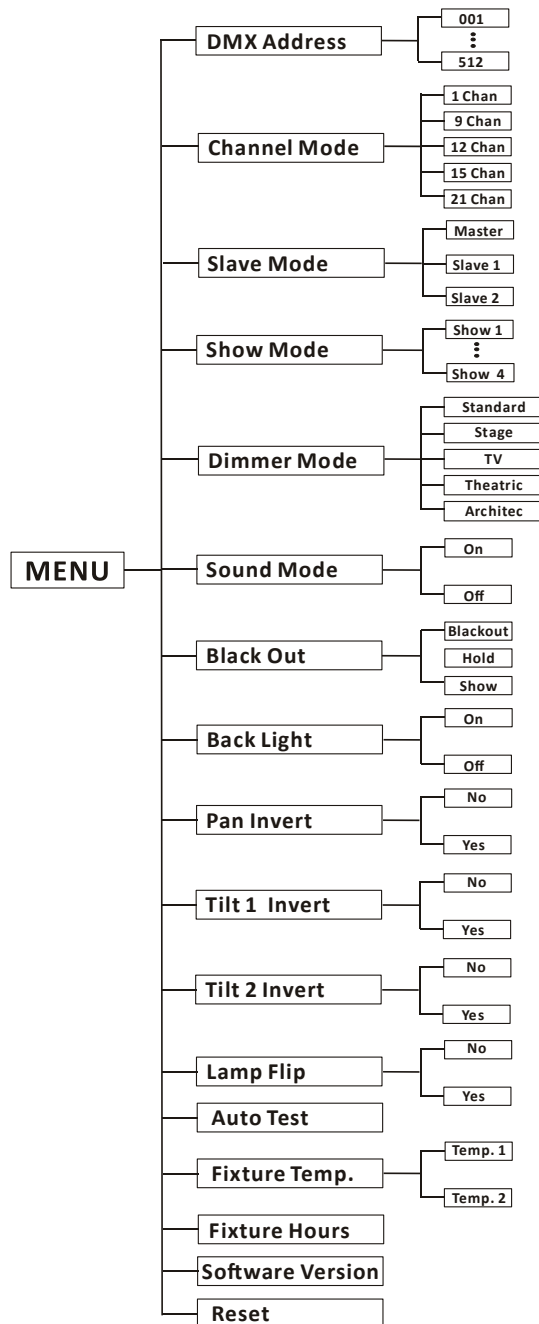

System Menu: When making adjustments press *ENTER* to confirm your setup then press and hold the *MENU* button for at least 3 seconds. To exit without making any adjustments press the *MENU* button. The display will lock after 30 seconds, press the *MENU* button for 3 seconds to unlock.

DMX Address - Set the DMX Address -

1. Press the MENU button until “DMX Address” is displayed, press ENTER.
2. “X” will now be displayed, “X” represents the displayed address. Press the UP or DOWN buttons to find your desired address.
3. Press ENTER to confirm, and then press and hold the MENU button for at least three seconds to assign.

Channel Mode - This will let you select your desired DMX Channel mode.

1. Press the MENU button until “Channel Mode” is displayed, press ENTER.
2. “X Chan” will now be displayed, “X” represents the displayed DMX channel mode. Press the UP or DOWN buttons to find your desired Channel mode.
3. Press ENTER to confirm.

Slave Mode - This will let you set unit as a master or slave in a master/slave configuration.

1. Press the MENU button until “Slave Mode” is displayed, press ENTER. Either “Master”, “Slave 1” or “Slave 2” will be displayed.
2. Press the UP or DOWN buttons until your desired setting is displayed, then press ENTER to confirm.

NOTE: In a Master/Slave configuration you can make one fixture the Master and then set the next fixture to “Slave 2”, the fixtures will now have contrast movement to each other.

Show Mode - Show modes 1 - 4 (Factory Shows).

1. Press the MENU button until "Show Mode" is displayed, press ENTER.
2. "Show X" will now be displayed, "X" representing a number between 1-4. Press the UP or DOWN buttons to find your desired show and press ENTER to confirm. After pressing ENTER, press and hold the MENU button for at least 3 seconds to activate.

Dimmer Mode - In this mode you can select the dimmer curve. See page 26 for the different dimmer modes.

1. Press the MENU button until "Dimmer Mode" is displayed, press ENTER.
2. The current dimmer mode will be displayed.
3. Press the UP or DOWN buttons to find your desired dimmer mode and press ENTER to confirm.

Sound Mode - In this mode the unit will run in sound active mode.

1. Press the MENU button until "Sound Mode" is displayed, press ENTER.
2. Either "On" or "Off" will now be displayed. Use the UP or DOWN buttons to toggle between "On" and "Off".
3. Press ENTER to confirm your selection, the press and hold the MENU button to activate.

Black Out - This mode can be used as a precaution mode, that in case the DMX signal is lost, interrupted, or power is lost, the operating mode chosen in the setup is the running mode the fixture will go into when the DMX signal is lost. You can also set this as the operating mode you would like the unit to return to when power is applied.

1. Press the MENU button until "Black Out" is displayed, and either "Show", "Blackout", or "Hold" will be displayed beneath.
2. Press ENTER and the bottom choice will begin to flash. Use the UP or DOWN buttons to choose an operating mode you would like the unit to start up in when power is applied or the DMX signal is lost.
 - Show - If the DMX signal is lost, or interrupted, the unit will automatically go into the last selected show mode.
 - Blackout- If the DMX signal is lost or interrupted, the unit will automatically go into stand by mode.
 - Hold - If the DMX signal is lost, or interrupted, the fixture will stay in the last DMX setting. If power is applied and this mode is set, the unit will automatically go into the last DMX set up.
3. Press ENTER to confirm your desired set up.

Back Light - With this function you can make the backlight automatically turn off after one minute.

1. Press the MENU button until "Back Light" is displayed, press ENTER.
2. Either "On" or "Off" will now be displayed. Press the UP or DOWN buttons to select "On" to keep the backlight on at all times, or "Off" to allow the backlight to turn off after 2 minutes. Press any button to turn the backlight on again.
3. Press ENTER to confirm.

Pan Invert - Pan Inversion

1. Press the MENU button until "Pan Invert" is displayed, press ENTER. Either "Yes" or "No" will be displayed.
2. To activate the Pan inversion press the UP or DOWN buttons until "Yes" is displayed, press ENTER to confirm. To deactivate Pan inversion, select "No" and press Enter.

Tilt Invert 1 - Tilt Inversion

1. Press the MENU button until "Tilt Invert 1" is displayed, press

ENTER. Either “Yes” or “No” will be displayed.

2. To activate the Tilt inversion press the UP or DOWN buttons until “Yes” is displayed, press ENTER to confirm. To deactivate Tilt inversion, select “No” and press Enter.

Tilt Invert 2 - Tilt Inversion

1. Press the MENU button until “Tilt Invert 2” is displayed, press ENTER. Either “Yes” or “No” will be displayed.

2. To activate the Tilt inversion press the UP or DOWN buttons until “Yes” is displayed, press ENTER to confirm. To deactivate Tilt inversion, select “No” and press Enter.

Lamp Flip - In this mode you adjust the unit so that the LEDs in DMX mode will illuminate at your desired starting point. Right to left or left to right.

1. Press the MENU button until “Lamp Flip” is displayed, press ENTER. Either “Yes” or “No” will be displayed.

2. To activate the Lamp inversion press the UP or DOWN buttons until “Yes” is displayed, press ENTER to confirm. To deactivate Lamp inversion, select “No” and press Enter.

Auto Test - This function will run a self test program.

1. Press the MENU button until “Auto Test” is displayed, press ENTER.

2. The fixture will now run a self test. Press the MENU button to exit.

Fixture Temp. - With this function you can display the running temperature of the unit.

1. Tap the MENU button until “Fixture Temp.” is displayed, press ENTER.

2. The current running temperature of the fixture will now be displayed. Press MENU to exit.

Fixture Hours - With this function you can display the running time of the unit.

1. Tap the MENU button until “Fixture Hours” is displayed, press ENTER.

2. The running time of the fixture will now be displayed. Press MENU to exit.

Software Version - This will display the software version

1. Tap the MENU button until “Software Version” is displayed. Press the ENTER button and the software version will be displayed.

2. Press the MENU button to leave this function.

Reset - Use this function to reset the unit.

1. Tap the MENU button until “Reset” is displayed, press ENTER.

2. The fixture will now reset.

Universal DMX Control: This function allows you to use a Elation® universal DMX-512 controller to control the chases and patterns, dimmer and strobe. A DMX controller allows you to create unique programs tailored to your individual needs.

1. The Crazy 8 can be a 1, 9, 12, 15, or 21 DMX channel fixture. See pages 18-25 for detailed description of the DMX values and traits.
2. To control your fixture in DMX mode, follow the set-up procedures on pages 7-9 as well as the set-up specifications that are included with your DMX controller.
3. Use the controller’s faders to control the various DMX fixture traits. This will allow you to create your own programs.
4. Follow the instructions on page 11 to select your DMX channel mode and to set the DMX address.
5. For longer cable runs (more than a 100 feet) use a terminator on the last fixture.
6. For help operating in DMX mode consult the manual included with your DMX controller.

Sound Active Mode: This mode allows either single unit or several units linked together, to run to the beat of the music.

1. Press the MENU button until “**Sound Mode**” is displayed, and press ENTER.
2. Press the UP or DOWN buttons to choose either OFF or ON, and press ENTER, then press and hold MENU for 3 seconds to confirm.
3. The optional *UC3 Controller* (not included) may be used to control different functions including blackout.

Show Mode: In this mode you can choose 1 of 4 show modes to run.

1. Press the MENU button until “**Show Mode**” is displayed, and press ENTER.
2. Press the UP or DOWN buttons until you find your desired show, and press ENTER then press and hold MENU for 3 seconds to confirm. See page 12 for more info.
3. The optional *UC3 Controller* (not included) may be used to control different functions including blackout.

Master-Slave Operation This function will allow you to link up to 16 units together and operate without a controller. The units will be sound activated. In Master-Slave operation one unit will act as the controlling unit and the others will react to the controlling units programs. Any unit can act as a Master or as a Slave.

1. Using approved DMX data cables, daisy chain your units together via the XLR connector on the rear of the units. Remember the Male XLR connector is the input and the Female XLR connector is the output. The first unit in the chain (master) will use the female XLR connector only - The last unit in the chain will use the male XLR connector only. For longer cable runs we suggest a terminator at the last fixture.
2. Set the Master unit to the “Master” setting following the directions on page 11. After you have set it, select your desired operating mode.
3. Set the “Slave” units to the “Slave” setting following the directions on page 11.
4. The slave units will now follow the Master unit.

Stand By	Blackout the unit	
Function	1. Auto Strobe (Full On) 2. Asyn strobe (Full On) 3. Sound Strobe (Full On)	Select Shows Show 1-4
Mode	LED OFF	LED ON

With this feature you can connect the fixtures to one another using the PowerCON input and output sockets. The quantity that can be connected is 4 fixtures maximum for 120V, and 7 fixtures maximum for 240V. After the maximum fixtures has been reached you will need to use a new power outlet. They must be the same fixtures. DO NOT mix fixtures.

Crazy 8		1 DMX Channel Mode
Channel	Value	Function
1	0 - 7	SHOWS BLACKOUT
	8 - 69	SHOW 1
	70 - 131	SHOW 2
	132 - 193	SHOW 3
	194 - 255	SHOW 4

Crazy 8		9 DMX Channel Mode
Channel	Value	Function
1	0 - 255	PAN 0° - 540°
2	0 - 255	TILT 1 60° - 150°
3	0 - 255	TILT 2 60° - 150°
4	0 - 7	SHUTTER/STROBE OPEN
	8 - 131	STROBING SLOW - FAST
	132 - 139	OPEN
	140 - 181	SLOW OPEN - FAST CLOSE
	182 - 189	OPEN
	190 - 231	FAST OPEN - SLOW CLOSE
	232 - 239	OPEN
	240 - 247	SOUND ACTIVE STROBING
	248 - 255	OPEN
5	0 - 255	MASTER DIMMER 0% - 100%
6	0 - 7	CHASES BLACKOUT
	8 - 22	CHASE 1
	23 - 37	CHASE 2
	38 - 52	CHASE 3
	53 - 67	CHASE 4
	68 - 82	CHASE 5
	83 - 97	CHASE 6
	98 - 112	CHASE 7
	113 - 127	CHASE 8

Crazy 8		9 DMX Channel Mode
Channel	Value	Function
6	128 - 142	CHASES CHASE 9
	143 - 157	CHASE 10
	158 - 172	CHASE 11
	173 - 187	CHASE 12
	188 - 202	CHASE 13
	203 - 217	CHASE 14
	218 - 232	CHASE 15
	233 - 247	CHASE 16
	248 - 255	FULL ON
	7	0 - 255
8	0 - 255	PAN/TILT SPEED FAST - SLOW
9	0 - 69	SPECIAL FUNCTIONS NOTHING
	70 - 79	BLACKOUT WITH PAN/TILT MOVE
	80 - 89	TILT 1 RESET
	90 - 99	TILT 2 RESET
	100 - 109	PAN RESET
	110 - 199	NOTHING
	200 - 209	RESET ALL
210 - 255	NOTHING	

Crazy 8		12 DMX Channel Mode
Channel	Value	Function
1	0 - 255	PAN 0° - 540°
2	0 - 255	TILT 1 60° - 150°
3	0 - 255	TILT 2 60° - 150°
4	0 - 255	ROW 1 LEDS DIMMER 0% - 100%
5	0 - 255	ROW 2 LEDS DIMMER 0% - 100%
6	0 - 7	STROBE OPEN
	8 - 131	STROBING SLOW - FAST
	132 - 139	OPEN
	140 - 181	SLOW OPEN - FAST CLOSE
	182 - 189	OPEN
	190 - 231	FAST OPEN - SLOW CLOSE
	232 - 239	OPEN
	240 - 247	SOUND ACTIVE STROBING
	248 - 255	OPEN
	7	0 - 255
8	0 - 7	CHASES BLACKOUT
	8 - 22	CHASE 1
	23 - 37	CHASE 2
	38 - 52	CHASE 3
	53 - 67	CHASE 4
	68 - 82	CHASE 5
	83 - 97	CHASE 6
	98 - 112	CHASE 7
	113 - 127	CHASE 8
	128 - 142	CHASE 9
	143 - 157	CHASE 10
	158 - 172	CHASE 11
	173 - 187	CHASE 12
	188 - 202	CHASE 13
	203 - 217	CHASE 14
	218 - 232	CHASE 15

Crazy 8		12 DMX Channel Mode	
Channel	Value	Function	
8	233 - 247	CHASES	
	248 - 255	CHASE 16 FULL ON	
	0 - 255	LED CHASE SPEED SLOW - FAST	
9	0 - 255	LED CHASE SPEED SLOW - FAST	
10	0 - 255	PAN/TILT SPEED FAST - SLOW	
11	0 - 69	SPECIAL FUNCTIONS NOTHING	
	70 - 79	BLACKOUT WITH PAN/TILT MOVE	
	80 - 89	TILT 1 RESET	
	90 - 99	TILT 2 RESET	
	100 - 109	PAN RESET	
	110 - 199	NOTHING	
	200 - 209	RESET ALL	
	210 - 255	NOTHING	
	12	0 - 20	DIMMER CURVES STANDARD
		21 - 40	STAGE
41 - 60		TV	
61 - 80		ARCHITECTURAL	
90 - 100		THEATER	
101 - 255		DEFAULT TO UNIT CURVE SETTING	

Crazy 8		15 DMX Channel Mode
Channel	Value	Function
1	0 - 255	PAN 0° - 540°
2	0 - 255	PAN FINE
3	0 - 255	TILT 1 60° - 150°
4	0 - 255	TILT 1 FINE
5	0 - 255	TILT 2 60° - 150°
6	0 - 255	TILT 2 FINE
7	0 - 255	ROW 1 LEDS DIMMER 0% - 100%
8	0 - 255	ROW 2 LEDS DIMMER 0% - 100%
9	0 - 7 8 - 131 132 - 139 140 - 181 182 - 189 190 - 231 232 - 239 240 - 247 248 - 255	STROBE OPEN STROBING SLOW - FAST OPEN SLOW OPEN - FAST CLOSE OPEN FAST OPEN - SLOW CLOSE OPEN SOUND ACTIVE STROBING OPEN
10	0 - 255	MASTER DIMMER 0% - 100%
11	0 - 7 8 - 22 23 - 37 38 - 52 53 - 67 68 - 82 83 - 97 98 - 112 113 - 127 128 - 142 143 - 157 158 - 172 173 - 187	CHASES BLACKOUT CHASE 1 CHASE 2 CHASE 3 CHASE 4 CHASE 5 CHASE 6 CHASE 7 CHASE 8 CHASE 9 CHASE 10 CHASE 11 CHASE 12


Crazy 8		15 DMX Channel Mode
Channel	Value	Function
11	188 - 202 203 - 217 218 - 232 233 - 247 248 - 255	CHASES CHASE 13 CHASE 14 CHASE 15 CHASE 16 FULL ON
12	0 - 255	LED CHASE SPEED SLOW - FAST
13	0 - 255	PAN/TILT SPEED FAST - SLOW
14	0 - 69 70 - 79 80 - 89 90 - 99 100 - 109 110 - 199 200 - 209 210 - 255	SPECIAL FUNCTIONS NOTHING BLACKOUT WITH PAN/TILT MOVE TILT 1 RESET TILT 2 RESET PAN RESET NOTHING RESET ALL NOTHING
15	0 - 20 21 - 40 41 - 60 61 - 80 90 - 100 101 - 255	DIMMER CURVES STANDARD STAGE TV ARCHITECTURAL THEATER DEFAULT TO UNIT CURVE SETTING

Crazy 8		21 DMX Channel Mode
Channel	Value	Function
1	0 - 255	PAN 0° - 540°
2	0 - 255	PAN FINE
3	0 - 255	TILT 1 60° - 150°
4	0 - 255	TILT 1 FINE
5	0 - 255	TILT 2 60° - 150°
6	0 - 255	TILT 2 FINE
7	0 - 255	LED 1 DIMMER 0% - 100%
8	0 - 255	LED 2 DIMMER 0% - 100%
9	0 - 255	LED 3 DIMMER 0% - 100%
10	0 - 255	LED 4 DIMMER 0% - 100%
11	0 - 255	LED 5 DIMMER 0% - 100%
12	0 - 255	LED 6 DIMMER 0% - 100%
13	0 - 255	LED 7 DIMMER 0% - 100%
14	0 - 255	LED 8 DIMMER 0% - 100%
15		STROBE
	0 - 7	OPEN
	8 - 131	STROBING SLOW - FAST
	132 - 139	OPEN
	140 - 181	SLOW OPEN - FAST CLOSE
	182 - 189	OPEN
	190 - 231	FAST OPEN - SLOW CLOSE
	232 - 239	OPEN
	240 - 247	SOUND ACTIVE STROBING
	248 - 255	OPEN
16	0 - 255	MASTER DIMMER 0% - 100%
17		CHASES
	0 - 7	BLACKOUT
	8 - 22	CHASE 1
	23 - 37	CHASE 2
	38 - 52	CHASE 3
	53 - 67	CHASE 4
	68 - 82	CHASE 5
	83 - 97	CHASE 6

Crazy 8		21 DMX Channel Mode
Channel	Value	Function
17	98 - 112	CHASES
	113 - 127	CHASE 7
	128 - 142	CHASE 8
	143 - 157	CHASE 9
	158 - 172	CHASE 10
	173 - 187	CHASE 11
	188 - 202	CHASE 12
	203 - 217	CHASE 13
	218 - 232	CHASE 14
	233 - 247	CHASE 15
	248 - 255	CHASE 16
		FULL ON
18	0 - 255	LED CHASE SPEED SLOW - FAST
19	0 - 255	PAN/TILT SPEED FAST - SLOW
20		SPECIAL FUNCTIONS
	0 - 69	NOTHING
	70 - 79	BLACKOUT WITH PAN/TILT MOVE
	80 - 89	TILT 1 RESET
	90 - 99	TILT 2 RESET
	100 - 109	PAN RESET
	110 - 199	NOTHING
	200 - 209	RESET ALL
	210 - 255	NOTHING
21		DIMMER CURVES
	0 - 20	STANDARD
	21 - 40	STAGE
	41 - 60	TV
	61 - 80	ARCHITECTURAL
	90 - 100	THEATER
	101 - 255	DEFAULT TO UNIT CURVE SETTING


Crazy 8

Photometric Chart

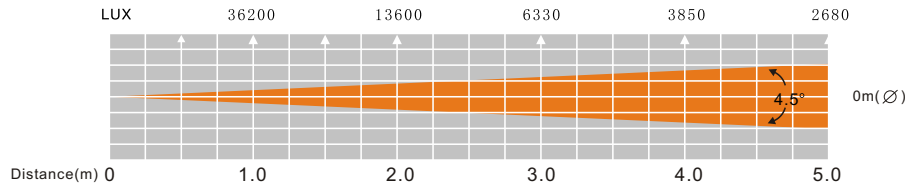

Crazy 8

Dimmer Curve Chart

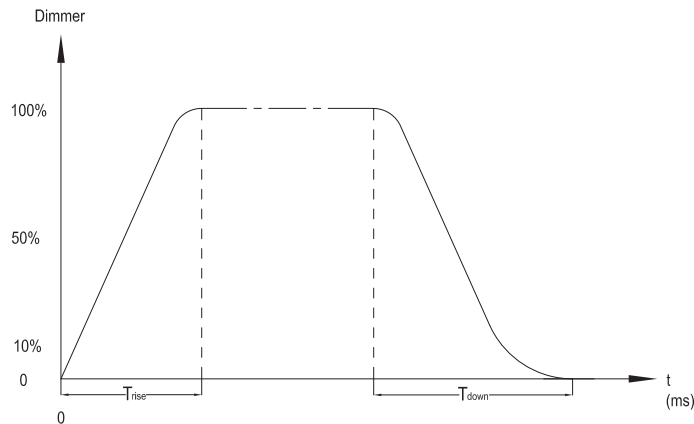

Ramp Effect	OS (Fade Time)		1S (Fade Time)	
	T _{rise} (ms)	T _{down} (ms)	T _{rise} (ms)	T _{down} (ms)
Standard	0	0	0	0
Stage	780	1100	1540	1660
TV	1180	1520	1860	1940
Architectural	1380	1730	2040	2120
Theatre	1580	1940	2230	2280

Crazy 8

Fuse Replacement

Disconnect the unit from its power source. Locate the fuse holder on the rear panel of the unit. Using a phillips-head screw driver unscrew the fuse holder. Remove the bad fuse and replace with a new one. Screw the fuse holder back into the unit containing the new fuse.

Crazy 8

Cleaning

Fixture Cleaning: Due to fog residue, smoke, and dust cleaning the internal and external optical lenses and mirror should be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates (i.e. smoke, fog residue, dust, dew). In heavy club use we recommend cleaning on a monthly basis. Periodic cleaning will ensure longevity, and crisp output.

1. Use normal glass cleaner and a soft cloth to wipe down the outside casing.
2. Use a brush to wipe down the cooling vents and fan grill.
3. Clean the external optics and mirror with glass cleaner and a soft cloth every 20 days.
4. Clean the internal optics with glass cleaner and a soft cloth every 30-60 days.
5. Always be sure to dry all parts completely before plugging the unit back in.

Crazy 8

Trouble Shooting

Trouble Shooting: Listed below are a few common problems that you may encounter, with solutions.

No light output from the unit;

1. Be sure the external fuse has not blown. The fuse is located on the rear panel of the unit.
2. Be sure the fuse holder is completely and properly seated.

Unit does not respond to sound;

1. Low frequencies (bass) should cause the unit to react to sound. Tapping on the microphone, quiet or high pitched sounds may not activate the unit.

MANUFACTURER'S LIMITED WARRANTY

- A. ADJ Products, LLC hereby warrants, to the original purchaser, ADJ Products, LLC products to be free of manufacturing defects in material and workmanship for a prescribed period from the date of purchase (see specific warranty period on reverse). This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.
- B. **For warranty service you must obtain a Return Authorization number (RA#) before sending back the product—please contact ADJ Products, LLC Service Department at 800-322-6337.** Send the product only to the ADJ Products, LLC factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, ADJ Products, LLC will pay return shipping charges only to a designated point within the United States. If the entire instrument is sent, it must be shipped in its original package. No accessories should be shipped with the product. If any accessories are shipped with the product, ADJ Products, LLC shall have no liability whatsoever for loss of or damage to any such accessories, nor for the safe return thereof.
- C. This warranty is void if the serial number has been altered or removed; if the product is modified in any manner which ADJ Products, LLC concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the ADJ Products, LLC factory unless prior written authorization was issued to purchaser by ADJ Products, LLC; if the product is damaged because not properly maintained as set forth in the instruction manual.
- D. This is not a service contract, and this warranty does not include maintenance, cleaning or periodic check up. During the period specified above, ADJ Products, LLC will replace defective parts at its expense with new or refurbished parts, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of ADJ Products, LLC under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of ADJ Products, LLC. All products covered by this warranty were manufactured after August 15, 2012, and bear indentifying marks to that effect.
- E. ADJ Products, LLC reserves the right to make changes in design and/or improvements upon its products without any obligation to include these changes in any products theretofore manufactured.

No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with products described above. Except to the extent prohibited by applicable law, all implied warranties made by ADJ Products, LLC in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty period set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said period has expired. The consumer's and/or Dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall ADJ Products, LLC be liable for any loss or damage, direct or consequential, arising out of the use of, or inability to use, this product.

This warranty is the only written warranty applicable to ADJ Products, LLC Products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

MANUFACTURER'S LIMITED WARRANTY PERIODS:

- **Lighting Products = 1-year (365 days) Limited Warranty** (Such as: Special Effect Lighting, Intelligent Lighting, UV lighting, Strobes, Fog Machines, Bubble Machines, Mirror Balls, Par Cans, Trussing, Lighting Stands etc. excluding LEDs and lamps)
- **Laser Products = 90-Day Limited Warranty**
- **L.E.D. Products = 2-year (730 days) Limited Warranty** (excluding motors, PCB boards, and power supplies, which have a 1-year (365 day Limited Warranty) and batteries which have a 180 day limited warranty). Only the L.E.D.s carry a 3-year warranty

Model:	Crazy 8
Voltage:	100V ~ 240V/50~60Hz
LEDs:	8 x 8W White LEDs
Power Consumption:	90W
Beam Angle:	4.5 Degrees
Power Cord Daisy Chain:	4 Fixtures Max. (120V) 7 Fixtures Max. (230V)
Dimensions:	16.5”(L) x 6”(W) x 15”(H) 414mm x 153mm x 376mm
Colors:	White
Weight:	18 Lbs. / 7.8 kgs.
Fuse:	4A
Duty Cycle:	None
DMX:	5 DMX Modes: 1 Channel Mode, 9 Channel Mode, 12 Channel Mode, 15 Channel Mode, & 21 Channel Mode
Sound Active:	Yes
Working Position:	Any Safe, Secure Position
Warranty:	2 Year (730 days)

Auto Sensing Voltage: This fixture contains a automatic voltage switch, which will auto sense the voltage when it is plugged into the power source.

Please Note: Specifications and improvements in the design of this unit and this manual are subject to change without any prior written notice.

ADJ Products, LLC
6122 S. Eastern Ave. Los Angeles, CA 90040 USA
Tel: 323-582-2650 / Fax: 323-725-6100
Web: www.adj.com / E-mail: info@americandj.com

A.D.J. Supply Europe B.V.
Junostraat 2
6468 EW Kerkrade
Netherlands

Follow Us On:



facebook.com/americandj
twitter.com/americandj
youtube.com/adjlighting

service@adjgroup.eu / www.adj.eu
Tel: +31 45 546 85 00 / Fax: +31 45 546 85 99